Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Waxkiss FHC-4000D

Waxkiss Intelligent Paraffin Wax Machine User Manual

Model: FHC-4000D | Brand: Waxkiss

1. Introduction and Overview

The Waxkiss Intelligent Paraffin Wax Machine is designed to provide a professional-grade paraffin bath experience for hands and feet in the comfort of your home. This device helps to soften and moisturize skin, relieve fatigue, and promote relaxation. It features intelligent temperature control and multiple operating modes for ease of use.

The unit includes a large capacity inner pot and comes with essential accessories to ensure a complete and comfortable treatment session.

2. Product Contents

Your Waxkiss Intelligent Paraffin Wax Machine kit includes the following items:

- 1 x Waxkiss Intelligent Paraffin Wax Machine (FHC-4000D)
- 8 x Packs of 7.05 oz (200g) Unscented Paraffin Wax Refills
- 30 x Pairs of Disposable Hand & Feet Covers
- 1 x Pair of Cotton Gloves
- 1 x Pair of Cotton Foot Covers
- 1 x Brush
- 1 x Silicone Scraper/Brush
- 1 x Dual-purpose Hand & Feet Insulating Pad



Figure 2.1: All components included in the Waxkiss Intelligent Paraffin Wax Machine kit.

The machine features a high-grade aluminum inner pot for efficient heating and a large capacity of 4500ml (152 fl. oz), suitable for most hand and foot sizes.



Figure 2.2: High-grade aluminum inner pot for faster wax melting.

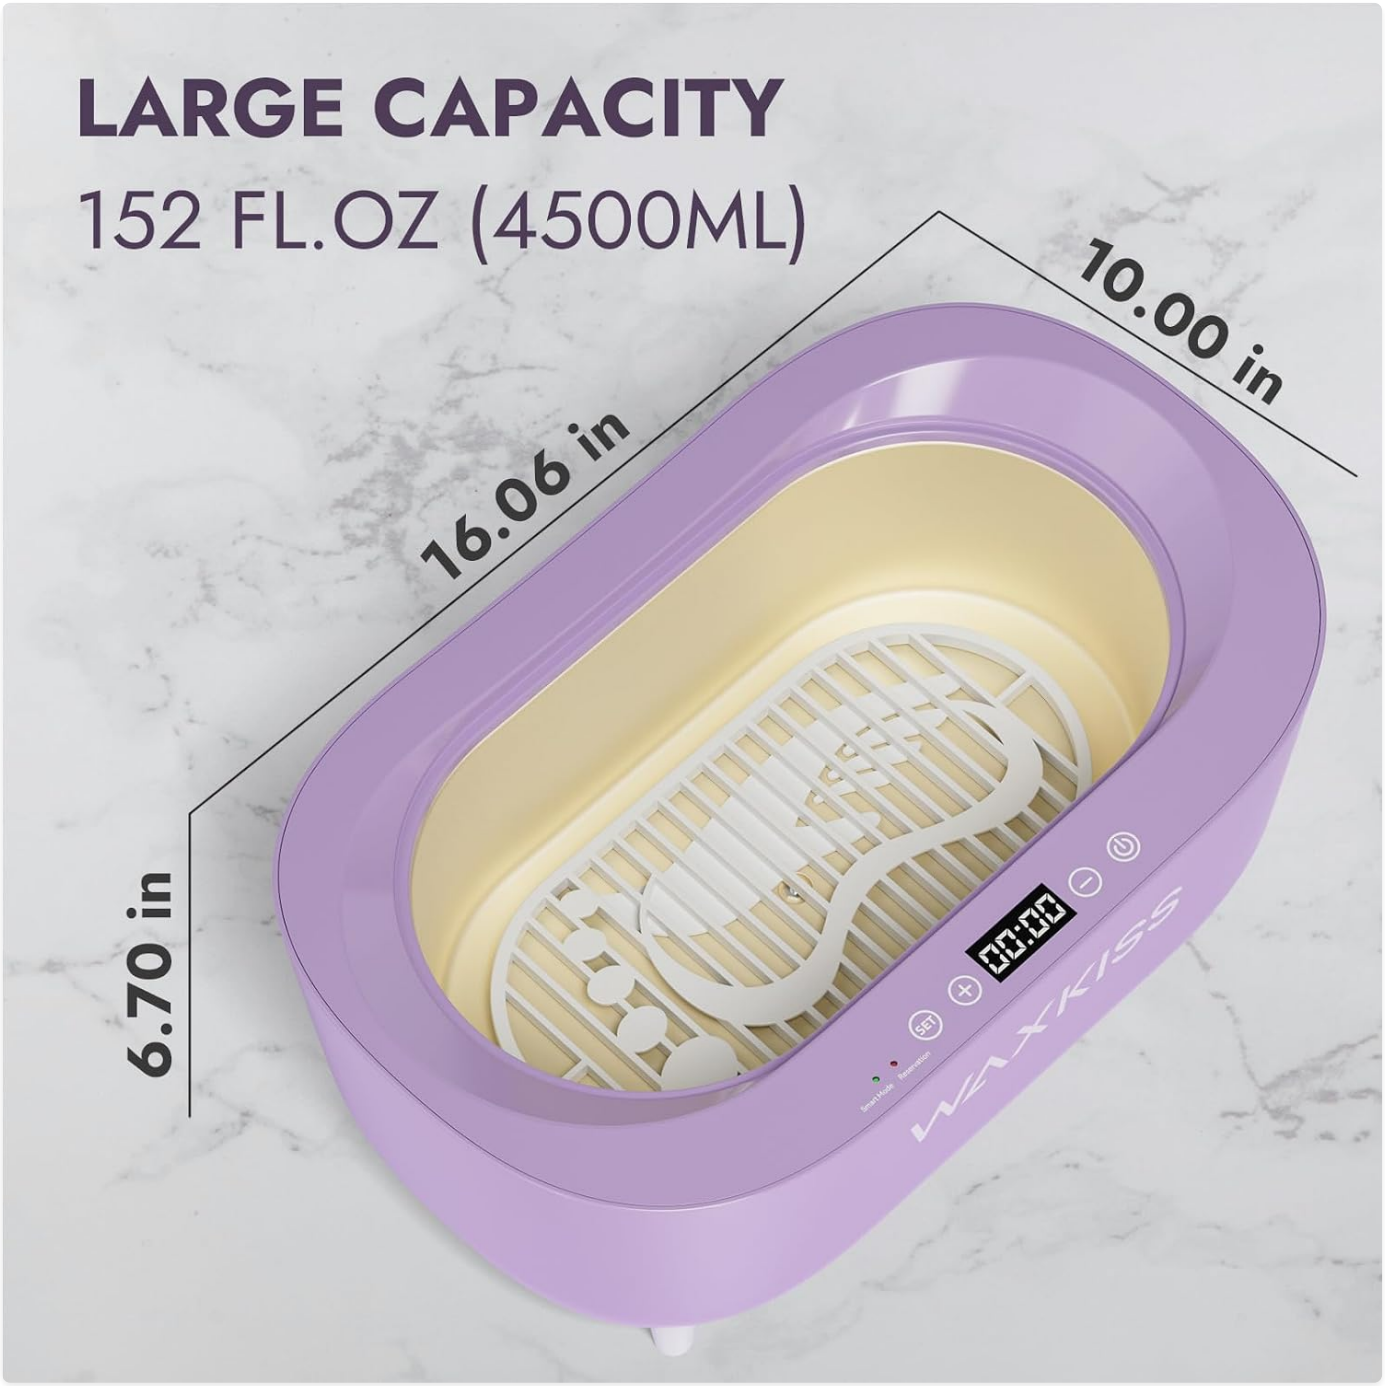


Figure 2.3: Large capacity of 4500ml (152 fl. oz) for comfortable use.

3. Safety Information

Please read all safety instructions before using the Waxkiss Intelligent Paraffin Wax Machine to prevent injury or damage.

- **Burn Hazard:** Never put your hands or feet into the warmer when the wax is in heating condition or if the temperature is too high. Always test the wax temperature on a small area of skin before full immersion.
- **Electrical Safety:** Ensure the power cable is not damaged. If the appliance does not work properly, has been dropped, or damaged, contact customer support.
- **Placement:** Do not place the appliance in water or other liquids. Do not place it near open flames or unprotected resistance heaters. Use on a flat, stable surface.
- **Children:** This appliance can be used by children aged 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

- **Cleaning:** Always power off and unplug the warmer before cleaning.
- **Wax Usage:** Only use paraffin wax specifically designed for paraffin baths. Do not add other substances to the wax.

4. Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the paraffin wax machine on a stable, heat-resistant surface.
3. **Insert Grate:** Place the protective grate at the bottom of the inner pot.
4. **Add Wax:** Open the paraffin wax packs and place the wax into the inner pot. It is recommended to use at least 4-6 packs for initial use to ensure sufficient depth for dipping.
5. **Connect Power:** Plug the power cable into the machine and then into a suitable electrical outlet.
6. **Power On:** Press the power button () to turn on the machine.
7. **Melt Wax:** The machine will begin to melt the wax. This process can take several hours depending on the amount of wax.

5. Operating Instructions

The Waxkiss Intelligent Paraffin Wax Machine offers three distinct heating modes:

- **Manual Heating Mode:** Adjust the temperature using the plus (**+**) and minus (**-**) keys. The screen will show the real-time temperature. Once the set temperature is reached, the machine will maintain it until powered off.
- **Smart Heating Mode:** Slightly touch the **SET** button for 3 seconds to enter Smart Heating Mode. The screen displays "HEAT" and then changes to display real-time temperature. The machine automatically heats to 53°C (127°F) and beeps 3 times when ready.
- **Reservation Heating Mode:** When the red light is on, press the**SET** button to enter Reservation Heating Mode. Use the plus (**+**) and minus (**-**) keys to set the reservation time (2-99 hours). The warmer will start counting down and begin heating after the reservation time.



Figure 5.1: Three available operating modes.

How to Use for Hands/Feet:

1. **Prepare:** Ensure the wax is fully melted and has reached a comfortable temperature (e.g., 53°C / 127°F in Smart Mode, or your preferred manual setting).
2. **Dip:** Slowly dip your hand or foot into the melted paraffin wax. Remove it, allow the wax to solidify slightly, and repeat 3-4 times to build a thick layer.
3. **Cover:** Immediately after dipping, place your waxed hand/foot into a disposable plastic cover, then into the cotton glove or foot cover to retain heat.
4. **Relax:** Keep the wax on for approximately 15-20 minutes.
5. **Remove:** Gently peel off the hardened paraffin wax. The disposable covers will help contain the wax for easy disposal.



Figure 5.2: Step-by-step guide for using the paraffin wax machine.

Instructional Video:

Your browser does not support the video tag.

Video 5.1: A seller-provided video demonstrating the features and use of the Waxkiss Intelligent Paraffin Wax Machine. This video highlights the machine's design, wax refills, and the overall spa-like experience it offers for hands and feet.

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your Waxkiss Paraffin Wax Machine.

- **Cleaning the Unit:** After use, turn off and unplug the machine. Allow the wax to cool and solidify completely. Once solid, the wax can often be removed in a single block. Use a soft, damp cloth to wipe the interior and exterior of the machine. Do not use abrasive cleaners or immerse the unit in water.

- **Wax Storage:** If you remove the wax, store it in a clean, airtight container for future use.
- **Accessory Care:** Wash cotton gloves and foot covers as needed. Dispose of plastic covers after each use.

7. Troubleshooting

If you encounter issues with your Waxkiss Intelligent Paraffin Wax Machine, refer to the following common solutions:

- **Machine Not Turning On:** Ensure the power cable is securely plugged into both the machine and a working electrical outlet. Check if the power button has been pressed.
- **Wax Not Melting:** Verify that the machine is powered on and set to a heating mode (Manual, Smart, or Reservation). Allow sufficient time for the wax to melt, especially for larger quantities.
- **Temperature Issues:** If the wax is too hot or too cold, adjust the temperature in Manual Mode using the plus (**+**) and minus (**-**) keys. In Smart Mode, the machine automatically sets to 53°C (127°F).
- **Lid Slipping:** Be careful when placing or removing the lid to prevent it from falling into the melted wax.

For persistent issues or further assistance, please contact Waxkiss customer support.

8. Specifications

Product Name	Digital Paraffin Wax Warmer
Temperature Control Mode	NTC
Temperature Range	30-70°C (86-158°F)
Power	200W
Product No.	FHC-4000D
Wax Warmer Size	L408*C254*H170MM
Voltage	US standard AC110V-AC120V, EU standard AC220V-AC240V
Volume	4500ml
Certification Standard	CE(EMC. LVD). FCC
Electrical Grade	I
Wax Warmer Made of	ABS Shell & ABS bottom supports
Material of Wax Heater Lid	PS

9. Warranty and Support

For warranty information, product support, or to purchase additional accessories and paraffin wax refills, please visit the

official Waxkiss website or contact their customer service department.

Contact information can typically be found on the product packaging or the Waxkiss brand store on Amazon: Waxkiss Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DRHX44D3

More documents and user manuals: **https://manuals.plus/**