Conciseer CS7202

Conciseer CS7202-MBK-WD 72 Inch Ceiling Fan User Manual

Model: CS7202-MBK-WD

Safety Information | Package Contents | Setup & Installation | Operating Instructions | Maintenance | Troubleshooting | Specifications | Warranty & Support

Introduction

Thank you for choosing the Conciseer CS7202-MBK-WD 72 Inch Ceiling Fan. This modern ceiling fan is designed to provide efficient air circulation and lighting for various indoor spaces, including living rooms, dining rooms, kitchens, home offices, kids' bedrooms, libraries, and cafes. This manual provides detailed instructions for safe installation, operation, and maintenance of your new ceiling fan.

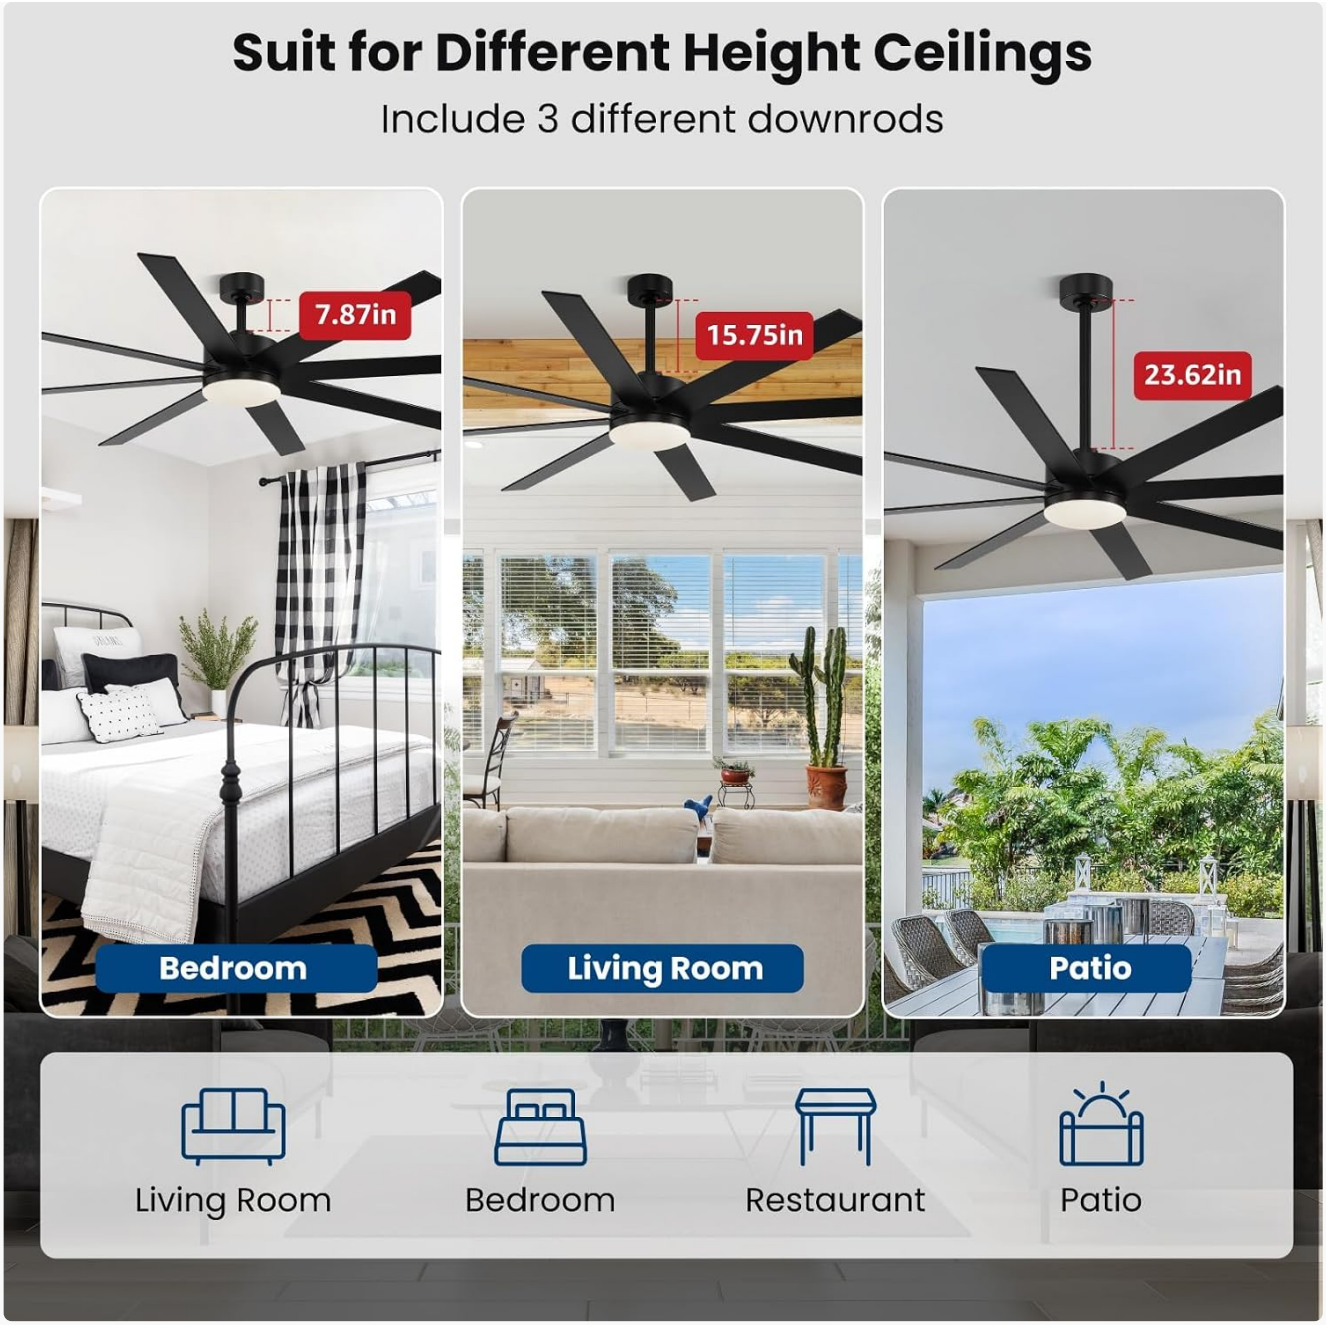


Image: The Conciseer 72-inch ceiling fan seamlessly integrated into a modern living room setting.

Safety Information

Please read all safety instructions carefully before installing or using your ceiling fan. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (minimum 35 lbs).
- Do not bend the blade holders during installation or cleaning.
- Keep children away from the fan during operation.
- This fan is designed for indoor use only. It is not suitable for direct exposure to rain.

Package Contents

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, contact customer support.

- Ceiling Fan Motor Assembly
- 8 Fan Blades (Dual Color: Black/Wood Grain)
- LED Light Kit
- Remote Control with Wall Mount
- Receiver
- Downrods (7.87 inch, 15.75 inch, 23.62 inch)
- Mounting Bracket
- Canopy
- Hardware Pack (screws, wire nuts, washers, etc.)
- Instruction Manual



Image: Visual representation of the fan's dimensions, the three included downrod sizes, and a detailed diagram of the remote control functions.

Setup & Installation

Professional installation is recommended. Ensure all power is disconnected at the circuit breaker before proceeding.

1. **Prepare the Mounting Location:** Ensure the electrical box is securely mounted to the building structure and can support the fan's weight.
2. **Install the Mounting Bracket:** Secure the mounting bracket to the electrical box using the provided screws.
3. **Assemble the Downrod:** Choose the appropriate downrod length for your ceiling height. Feed the fan wires through the downrod.
4. **Attach Fan to Downrod:** Securely attach the fan motor assembly to the downrod.
5. **Hang the Fan:** Carefully lift the fan assembly and hang it onto the mounting bracket.
6. **Perform Wiring:** Connect the fan wires to the household electrical wires according to the wiring diagram in the full manual. Ensure all connections are secure with wire nuts.

Your browser does not support the video tag.

Video: A detailed guide on installing the Conciseer CS7202 Ceiling Fan, demonstrating each step of the assembly

and wiring process.

7. **Install the Receiver:** Place the remote control receiver inside the canopy.
8. **Attach the Canopy:** Slide the canopy up and secure it to the mounting bracket, covering the wiring.
9. **Install Fan Blades:** Attach each of the 8 fan blades to the motor housing. Ensure they are securely fastened.
10. **Install the LED Light Kit:** Connect the light kit wires and secure the light kit to the bottom of the fan motor assembly.
11. **Restore Power:** Turn on the power at the circuit breaker.
12. **Test Functionality:** Use the remote control to test all fan speeds and light functions.

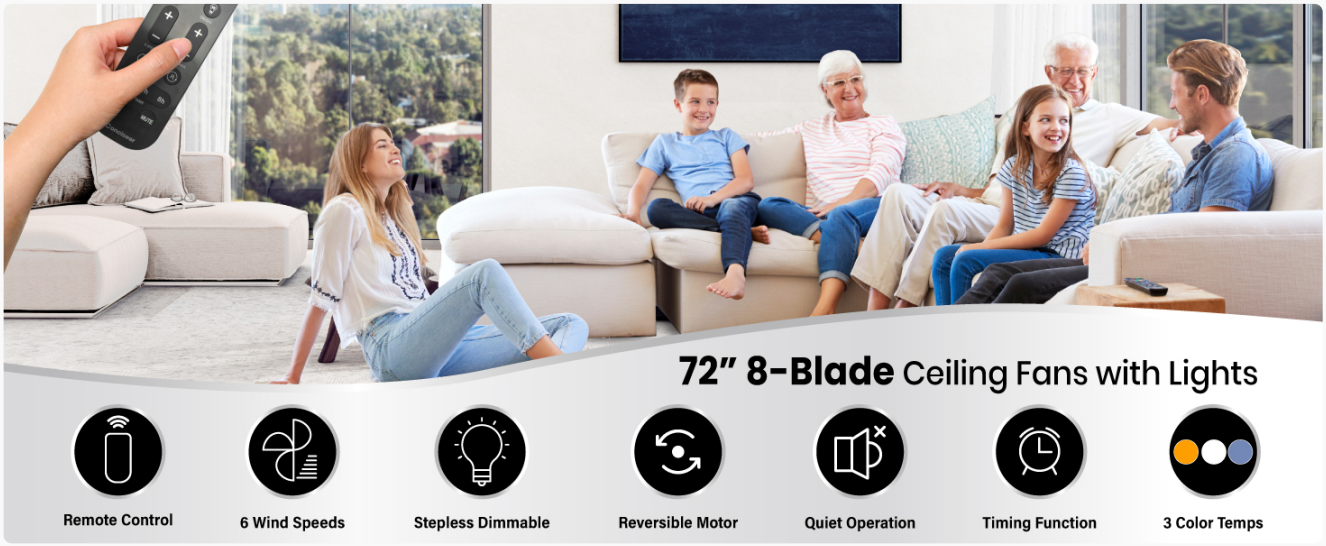


Image: Examples of the ceiling fan installed with varying downrod lengths to suit different ceiling heights and room types, including bedroom, living room, and patio.

Operating Instructions

Your Conciseer ceiling fan is controlled by the included remote. Ensure batteries are installed correctly in the remote.

Remote Control Functions:

- **ON/OFF Button:** Powers the fan and light on or off.
- **Fan ON/OFF Button:** Controls only the fan motor.
- **Light ON/OFF Button:** Controls only the LED light.
- **Speed Control (1-6):** Adjusts fan speed from 1 (lowest) to 6 (highest).
- **Dimmer Control (+/-):** Adjusts the brightness of the LED light.
- **Fan Forward (Summer Mode):** Press 'F' for downward airflow, creating a cooling effect.
- **Fan Reverse (Winter Mode):** Press 'R' for upward airflow, circulating warm air.
- **Timer (2H/4H/8H):** Sets the fan to turn off automatically after 2, 4, or 8 hours.
- **Natural Wind:** Simulates a natural breeze by varying fan speed.
- **Mute:** Silences remote control beeps or fan sounds.

Fan Speed Settings:

- **Speed 1-2:** Soft and comfortable wind, ideal for sleeping.

- **Speed 3-4:** Medium and natural wind, suitable for general comfort.
- **Speed 5-6:** Strong and cool wind, for maximum air circulation.



Image: Visual guide to the fan's 6 wind speed settings, indicating the comfort level for each range (soft, natural, strong).

Light Control:

The integrated LED light offers adjustable color temperature and stepless dimming.

- **Color Temperature:** Cycle through various color temperatures (e.g., 2700K warm white to 6500K cool white) to match your preference.
- **Stepless Dimming:** Use the dimmer buttons on the remote to adjust brightness from 10% to 100%.



Image: Illustration of the 6-color temperature options available for the LED light, ranging from warm to cool light.



Image: Visual representation of the stepless dimming feature, showing light intensity from 100% down to 10%.

Reverse Function (Summer/Winter Mode):

The fan features a reversible motor to optimize comfort year-round.

- **Summer Mode (Forward):** Blades rotate counter-clockwise, pushing air downwards to create a cooling breeze.
- **Winter Mode (Reverse):** Blades rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling.



Image: Illustration of the fan's reverse function, depicting downward airflow for summer cooling and upward airflow for winter heat circulation.

Your browser does not support the video tag.

Video: Overview of the key features of the Conciseer CS6503-MBK-WD Ceiling Fan, including remote control operation and various settings.

Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.

- **Blade Inspection:** Periodically check that all blade screws are tight. Loose blades can cause wobbling and noise.
- **Light Kit:** The LED light source is designed for long life and typically does not require replacement.
- **Motor:** The DC motor is permanently lubricated and requires no oiling.
- **Remote Control:** Replace batteries when the remote's range decreases or it becomes unresponsive.

Always turn off power at the circuit breaker before performing any cleaning or maintenance.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control issues.	Check circuit breaker; Verify all wire connections are secure; Replace remote batteries or re-pair remote.
Light does not work	Loose wire connection in light kit; LED driver failure; Remote control issues.	Check light kit wiring; Contact customer support for LED driver replacement; Check remote batteries.
Fan wobbles	Loose blades or mounting screws; Unbalanced blades; Improper installation.	Tighten all blade and mounting screws; Use a balancing kit (not included) if necessary; Re-check installation steps.
Excessive noise	Loose screws; Motor hum; Blades hitting an obstruction.	Tighten all screws; Ensure no wires are rubbing; Check for obstructions.
Remote not responding	Dead batteries; Remote not paired; Obstruction between remote and receiver.	Replace batteries; Follow pairing instructions (if applicable); Ensure clear line of sight.

Specifications

Feature	Detail
Brand	Conciseer
Model Number	CS7202-MBK-WD
Product Dimensions	8"D x 72"W x 8"H
Size	72 inch/24W
Color	MBK/WD (Matte Black/Wood Grain)
Material	Metal
Electric Fan Design	Ceiling Fan
Power Source	DC
Motor Type	Brushless DC
Number of Blades	8

Feature	Detail
Number of Speeds	6
Light Type	LED
Wattage	6 watts (fan motor) / 24 watts (light)
Voltage	120 volts AC
Control Method	Remote Control
Special Features	LED Light, Quiet Operation, Remote Controlled, Timer, Reversible Motor
Indoor Outdoor Usage	Indoor
Mounting Type	Downrod Mount

Warranty & Support

Conciseer products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or contact Conciseer customer support.
If you encounter any issues during installation or operation, or have questions about your product, please contact our professional after-sales support team. We are committed to assisting you promptly.
Contact Information:

- Refer to the contact details provided in your product packaging or on the official Conciseer website.

© 2026 Conciseer. All rights reserved.