Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

BANGSON US-BSR-028WH

BANGSON Upright Freezer User Manual

Model: US-BSR-028WH | Brand: BANGSON

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your BANGSON 7.0 Cu.ft Upright Freezer. Please read this manual thoroughly before using the appliance and retain it for future reference.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Ensure the appliance is properly grounded. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.

- Ensure proper ventilation around the appliance.
- Do not damage the refrigerant circuit.
- Unplug the appliance before cleaning or performing maintenance.
- Keep ventilation openings clear of obstruction.

Product Overview

The BANGSON 7.0 Cu.ft Upright Freezer is a versatile appliance designed for efficient food storage. It features a convertible function, allowing it to operate as either a freezer or a refrigerator. Key features include:

- **Convertible Function:** Easily switch between freezer (-7.6℉ to 6.8℉) and refrigerator (38℉ to 47℉) modes.
- **Ample Storage:** 7.0 cubic feet capacity with removable shelves and three freshness drawer boxes for organized storage.
- **Reversible Door:** The door can be configured to open from either the left or right side to suit your space.
- **Easy Mobility:** Equipped with two pulleys for convenient movement.
- **Adjustable Leveling Feet:** Ensures stable placement on uneven surfaces.
- **User-Friendly Design:** Includes a removable door seal for easy cleaning, an ice tray, and a defrost tool.

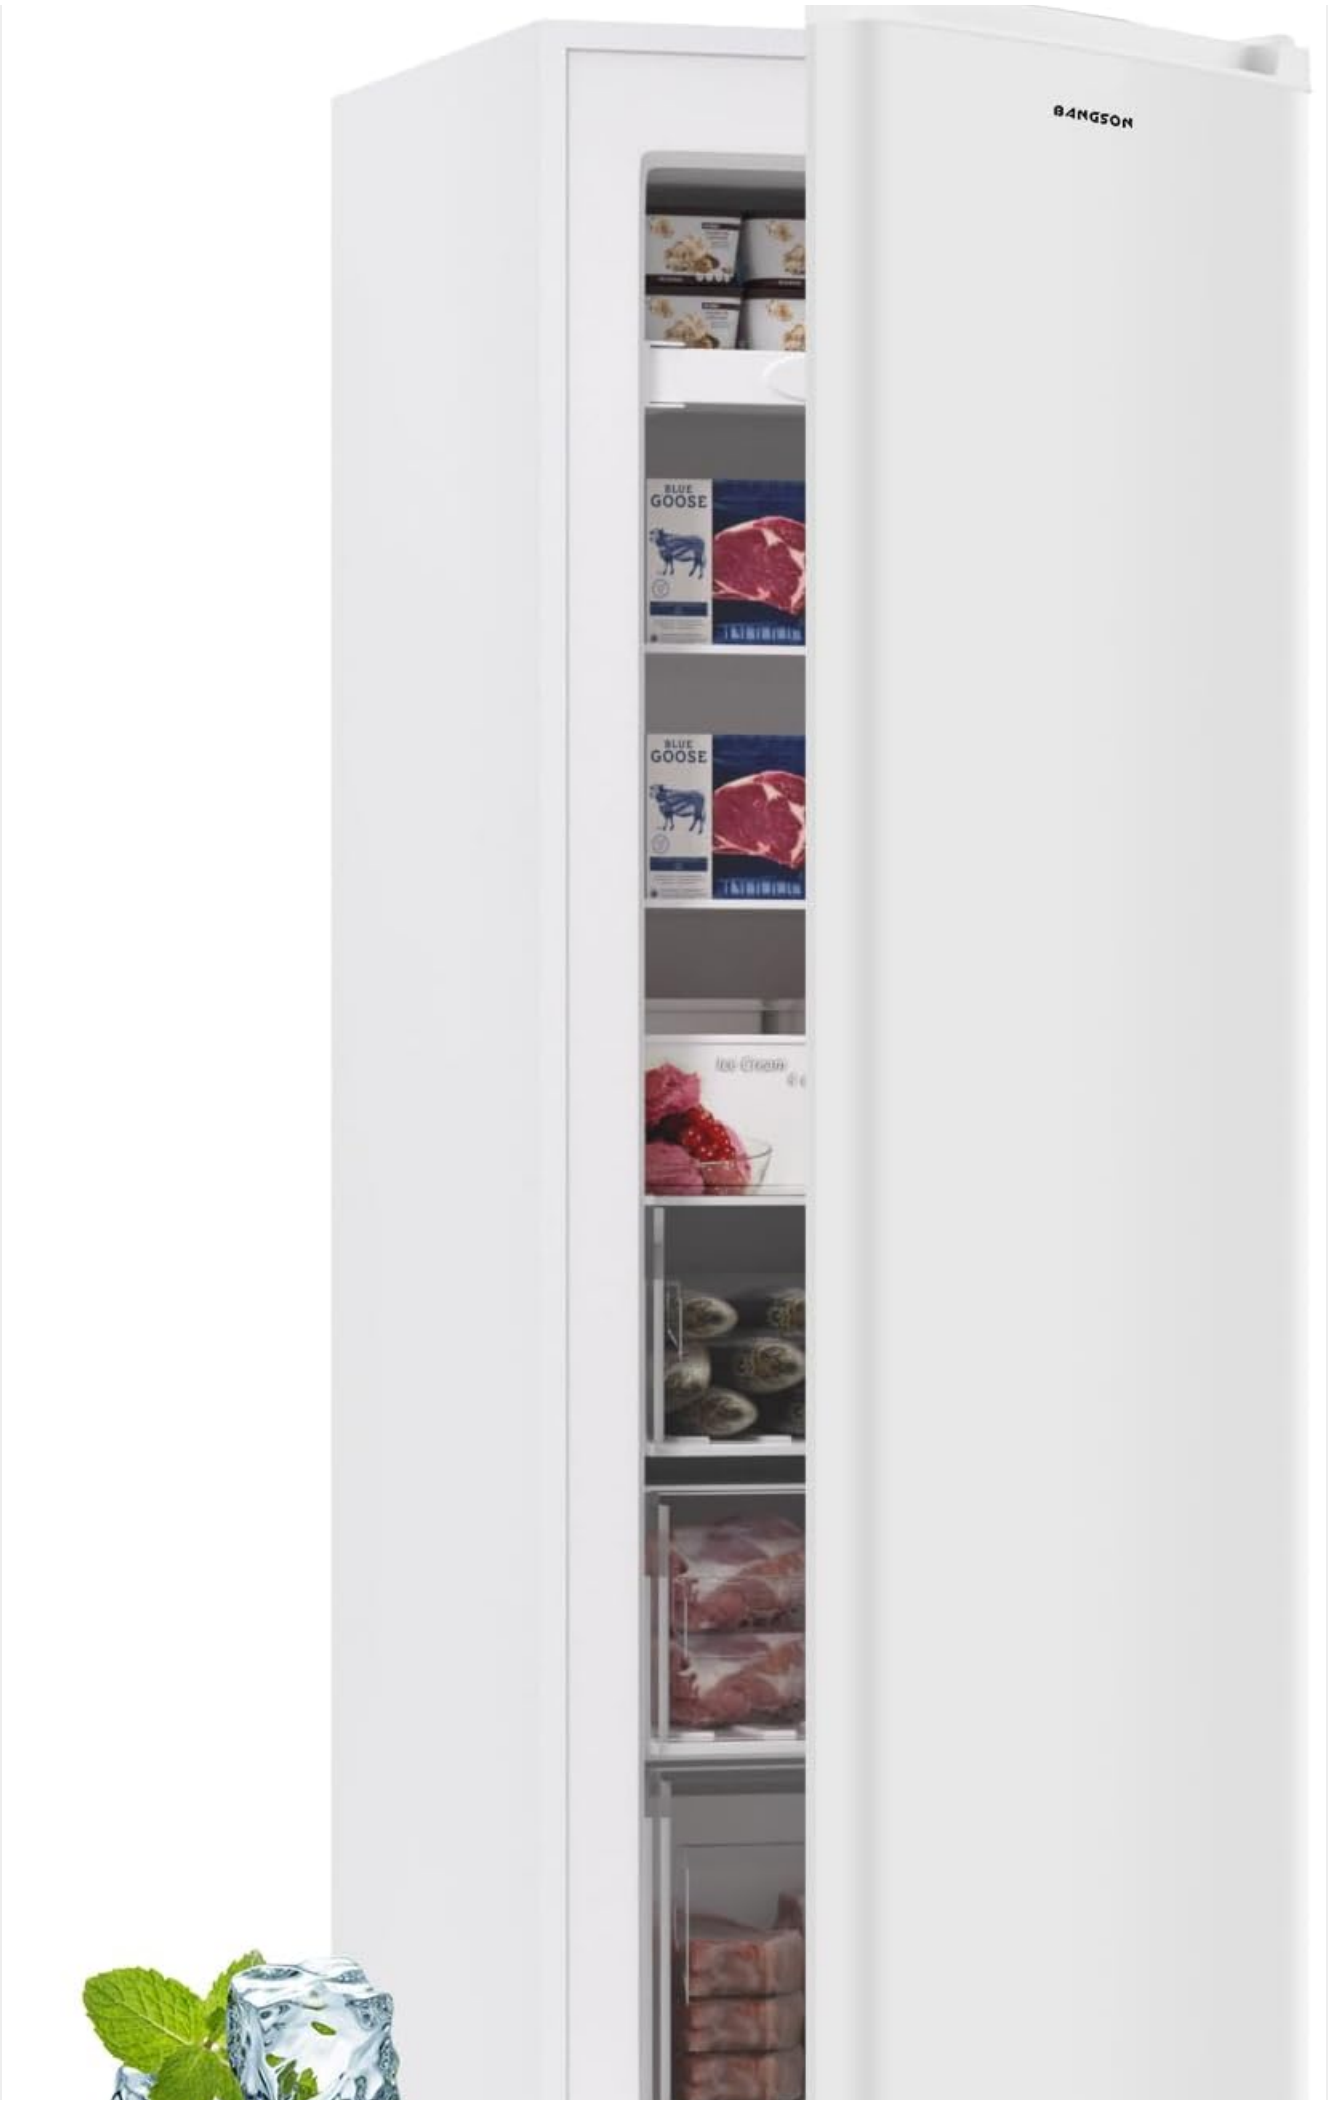

BANGSON
BLUE GOOSE
BLUE GOOSE
Ice Cream



Figure 1: Front view of the BANGSON 7.0 Cu.ft Upright Freezer, illustrating its sleek design and interior capacity.



Figure 2: Product dimensions for the 7.0 Cu.ft Upright Freezer, measuring 21.5 inches (L), 23.3 inches (D), and 56.0 inches (H).



Figure 3: Detailed view of key components including food containers, temperature control, reversible door mechanism, and leveling feet.

Setup and Installation

Placement

Place the appliance on a firm, level surface away from direct sunlight and heat sources. Allow adequate space around the unit for proper ventilation (at least 4 inches from walls). Ensure the leveling feet are adjusted to keep the unit stable and level.

Door Reversal

The door on your BANGSON Upright Freezer is reversible, allowing it to open from either the left or right side. This process involves carefully removing and reattaching the hinges. Refer to the video below for a step-by-step guide.

[redacted]

Video 1: Instructions on how to adjust the reversible door of the BANGSON Upright Freezer. This video demonstrates removing hinge covers, unscrewing bolts, lifting the door, repositioning hinges, and securing them firmly.

Operating Instructions

Temperature Control

The appliance features a temperature adjustment dial. Turn the dial to select your desired temperature setting. For optimal performance, allow the unit to stabilize for several hours after initial setup or after changing the temperature setting.

Convertible Mode

This unit can function as either a freezer or a refrigerator. Use the temperature control dial to switch between modes:

- **Freezer Mode:** Temperature range from -7.6℉ to 6.8℉. Ideal for freezing meats, seafood, and ice cream.
- **Refrigerator Mode:** Temperature range from 38℉ to 47℉. Suitable for storing fruits, vegetables, drinks, and dairy products.

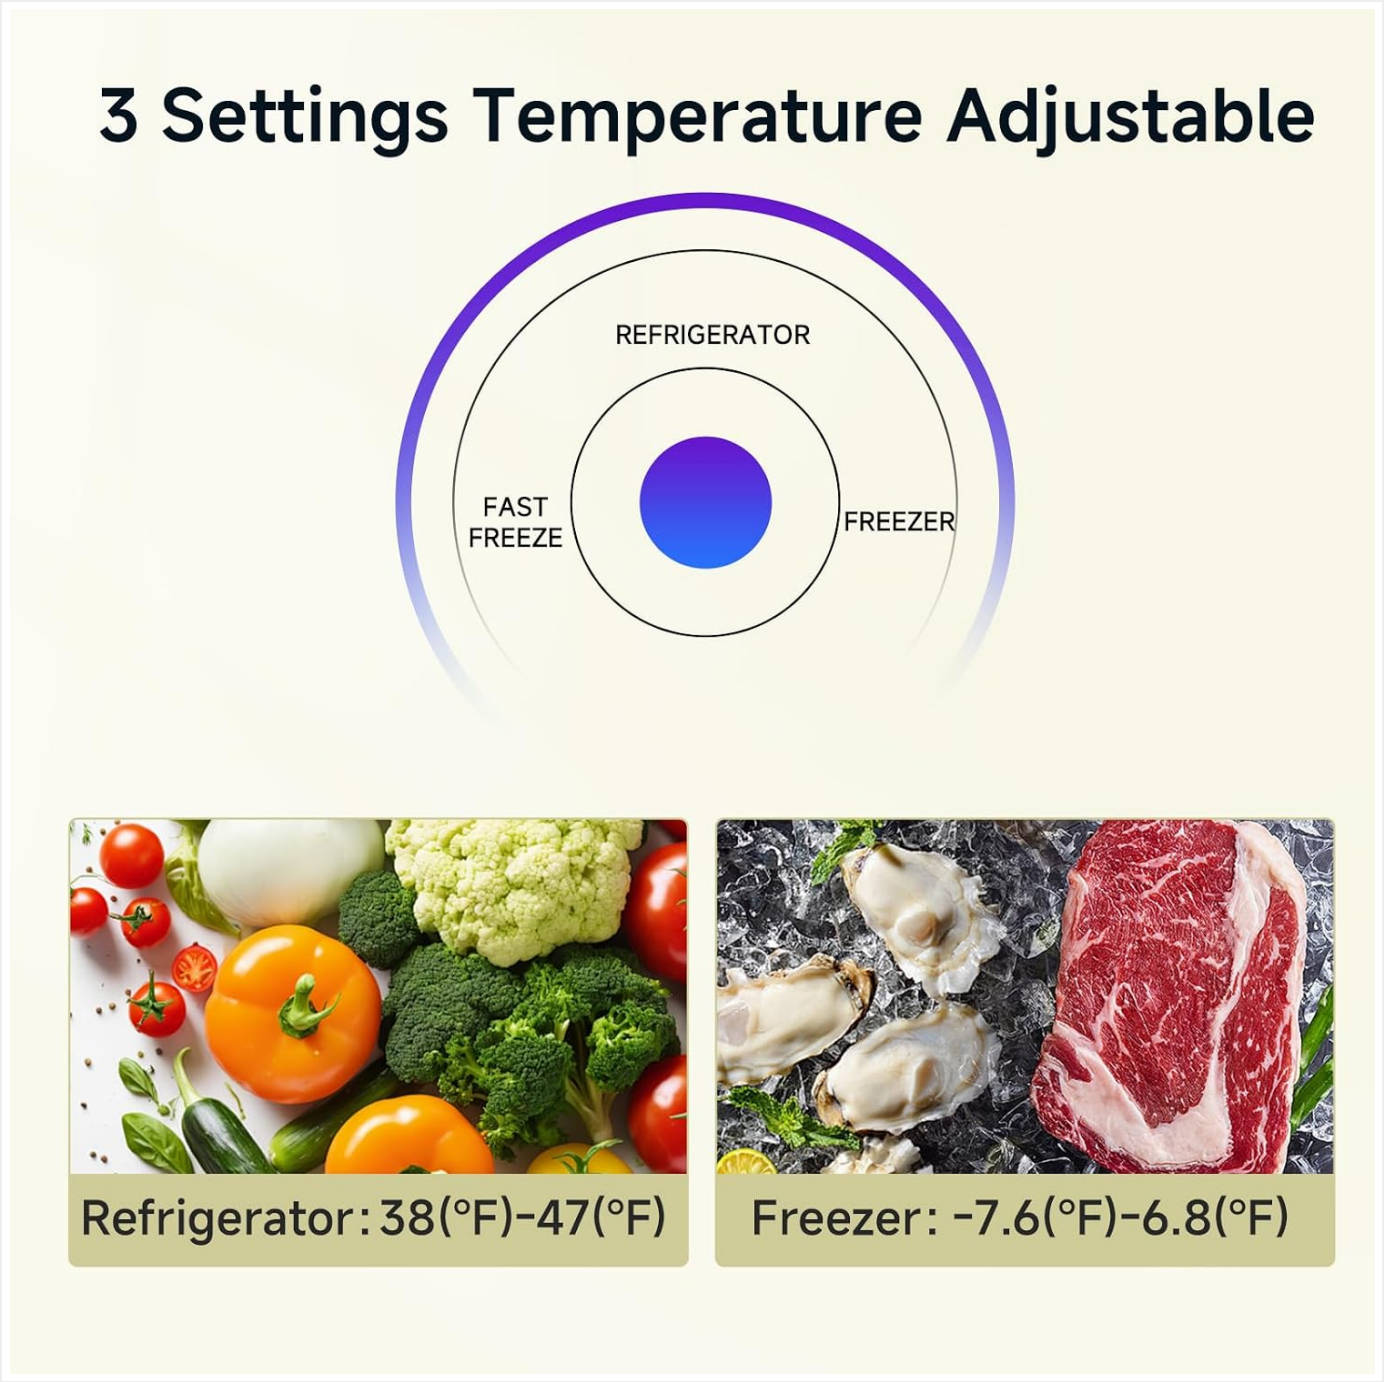


Figure 4: Illustration of the temperature settings, including Fast Freeze, Freezer, and Refrigerator modes with their respective temperature

ranges.



Figure 5: Visual representation of the convertible function, showing typical items stored in freezer mode (ice cream, shrimp) and refrigerator mode (drinks, fruits).

Maintenance and Cleaning

Defrosting

This appliance requires manual defrosting. Frost buildup can reduce efficiency. Defrost the unit when frost accumulation reaches approximately 1/4 inch thickness. To defrost:

1. Unplug the appliance from the power outlet.
2. Remove all food items and store them in another freezer or cooler.
3. Leave the door open to allow frost to melt naturally. A defrost tool is provided to assist with ice removal, but avoid using sharp objects.
4. Once defrosted, wipe the interior dry with a soft cloth.

5. Plug the appliance back in and return food items once the desired temperature is reached.

Cleaning

Regular cleaning helps maintain hygiene and efficiency. The removable door seal facilitates easy cleaning.

- Clean the interior and exterior surfaces with a mild detergent and warm water.
- Wipe dry thoroughly after cleaning.
- Do not use abrasive cleaners or solvents.
- Clean the removable door seal regularly to ensure a tight seal.

Troubleshooting

If you experience issues with your appliance, consult the following table before contacting customer service.

Problem	Possible Cause	Solution
Appliance does not operate	No power; power cord unplugged; circuit breaker tripped.	Check power supply; ensure plug is securely in outlet; reset circuit breaker.
Temperature is not cold enough	Door not closed properly; excessive door openings; warm food added; temperature setting too high.	Ensure door is sealed; reduce door openings; allow warm food to cool before storing; adjust temperature setting lower.
Excessive frost buildup	Door not sealed properly; high humidity; frequent door openings.	Check door seal and clean if necessary; avoid opening door frequently; perform manual defrost as needed.
Appliance is noisy	Unit not level; objects vibrating against the unit; normal operating sounds.	Adjust leveling feet; ensure nothing is touching the unit; some sounds (e.g., refrigerant flow) are normal.

Specifications

Feature	Detail
Brand	BANGSON
Model Info	US-BSR-028WH
Capacity	7 Cubic Feet
Product Dimensions (D x W x H)	23.5 x 21.5 x 56.2 inches
Item Weight	85 pounds
Color	White
Voltage	110 Volts
Wattage	50 watts
Door Hinges	Reversible
Door Material Type	Stainless Steel
Included Components	Handles, Ice Tray, Defrost Tool

Feature	Detail
Freezer Temperature Range	-7.6℉ to 6.8℉
Refrigerator Temperature Range	38℉ to 47℉

Warranty and Support

For any inquiries or assistance, please do not hesitate to contact BANGSON customer service. Information regarding warranty coverage can typically be found on the product packaging or the official BANGSON website. Please retain your proof of purchase for warranty claims.
You can also visit the BANGSON Store on Amazon for more product information and support.

© 2025 BANGSON. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DRNK14HK

More documents and user manuals: **https://manuals.plus/**