MAILANGSHI G59

MAILANGSHI G59 Wireless Microphone User Manual

Model: G59 | Brand: MAILANGSHI

Introduction

This manual provides comprehensive instructions for the MAILANGSHI G59 Wireless Microphone system. Designed for clear audio transmission and ease of use, this system is suitable for various applications including karaoke, public speaking, and content creation. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

Package Contents

The MAILANGSHI G59 Wireless Microphone system typically includes the following components:

- Two (2) Wireless Microphones
- One (1) Receiver Unit
- Charging Cable (Type-C)
- User Manual



Image: The MAILANGSHI G59 Wireless Microphone system, showing two microphones and the compact receiver unit.

Setup Instructions

Follow these steps to set up your MAILANGSHI G59 Wireless Microphone system:

1. **Charge the Devices:** Ensure both microphones and the receiver unit are fully charged before first use. Connect the Type-C charging cable to the charging port on each device. A full charge typically takes approximately 3 hours.
2. **Connect the Receiver:** Plug the receiver unit into the audio input port (e.g., 6.35mm or 3.5mm jack) of your compatible audio device, such as an amplifier, speaker, or karaoke machine.
3. **Power On the Receiver:** Press and hold the power button on the receiver unit until the indicator light illuminates.
4. **Power On the Microphones:** Press and hold the power button on each wireless microphone. The microphone display will show its channel and battery status. The microphones will automatically pair with the receiver.
5. **Test Connection:** Speak into the microphone to test the audio output from your connected audio device. Adjust volume levels as needed on your audio device.



Image: Step 1 of setup, showing the receiver being plugged into an audio device.



Image: Step 2 of setup, illustrating how to power on the microphone and its battery indicator.

Operating Instructions

Wireless Transmission

The MAILANGSHI G59 utilizes an upgraded one-on-one connection technology, ensuring stable and clear audio transmission with minimal latency. It offers an impressive operating range of up to 200 feet (approximately 60 meters) in open areas, providing freedom of movement during use.

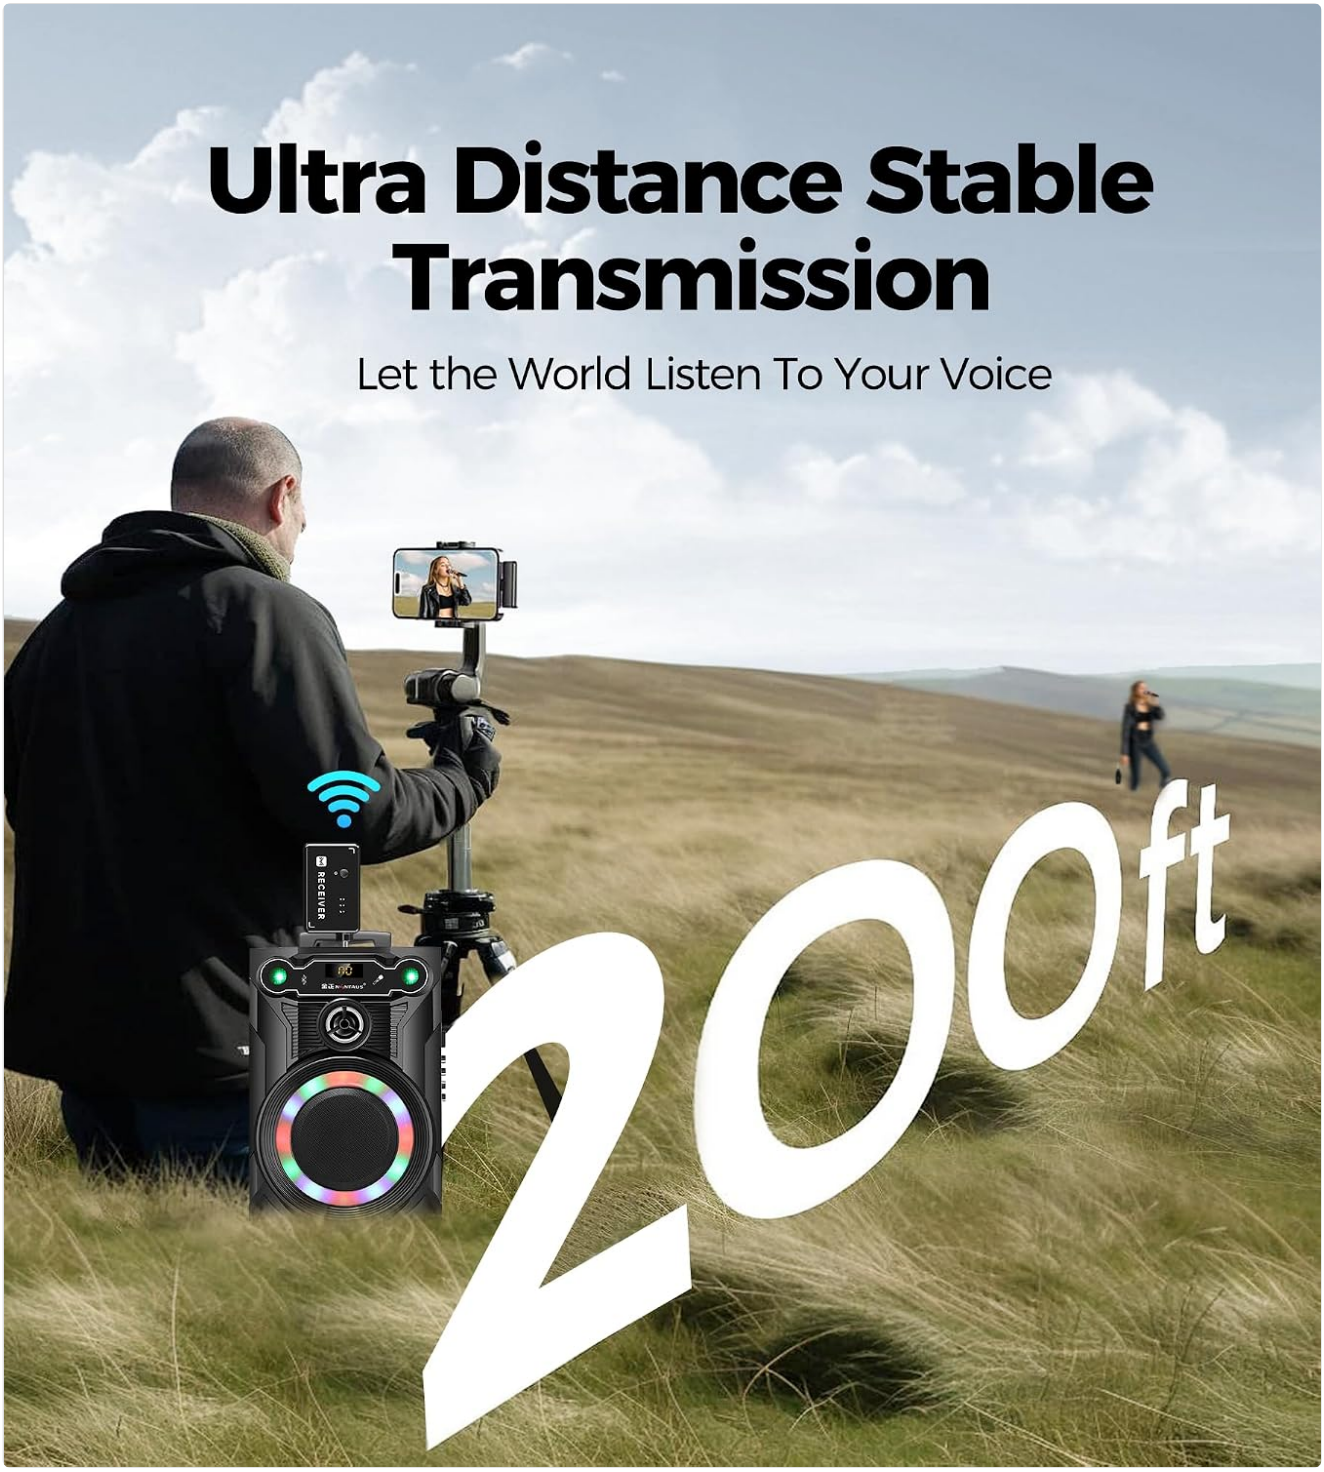


Image: Illustration of the microphone's 200-foot stable transmission range.

Sound Quality

Equipped with a cardioid pickup pattern, DSP noise reduction, and anti-static noise features, the G59 microphone delivers studio-grade sound quality. Its lightweight and durable design ensures comfortable handling and reliable performance.



Image: Visual representation of the microphone's sound quality features, including cardioid pickup and noise reduction.

Battery Management

The microphones and receiver are powered by rechargeable Lithium-polymer batteries, offering up to 40 hours of continuous usage on a single charge. The devices feature a battery indicator light to monitor power levels. Recharge using the provided Type-C cable.

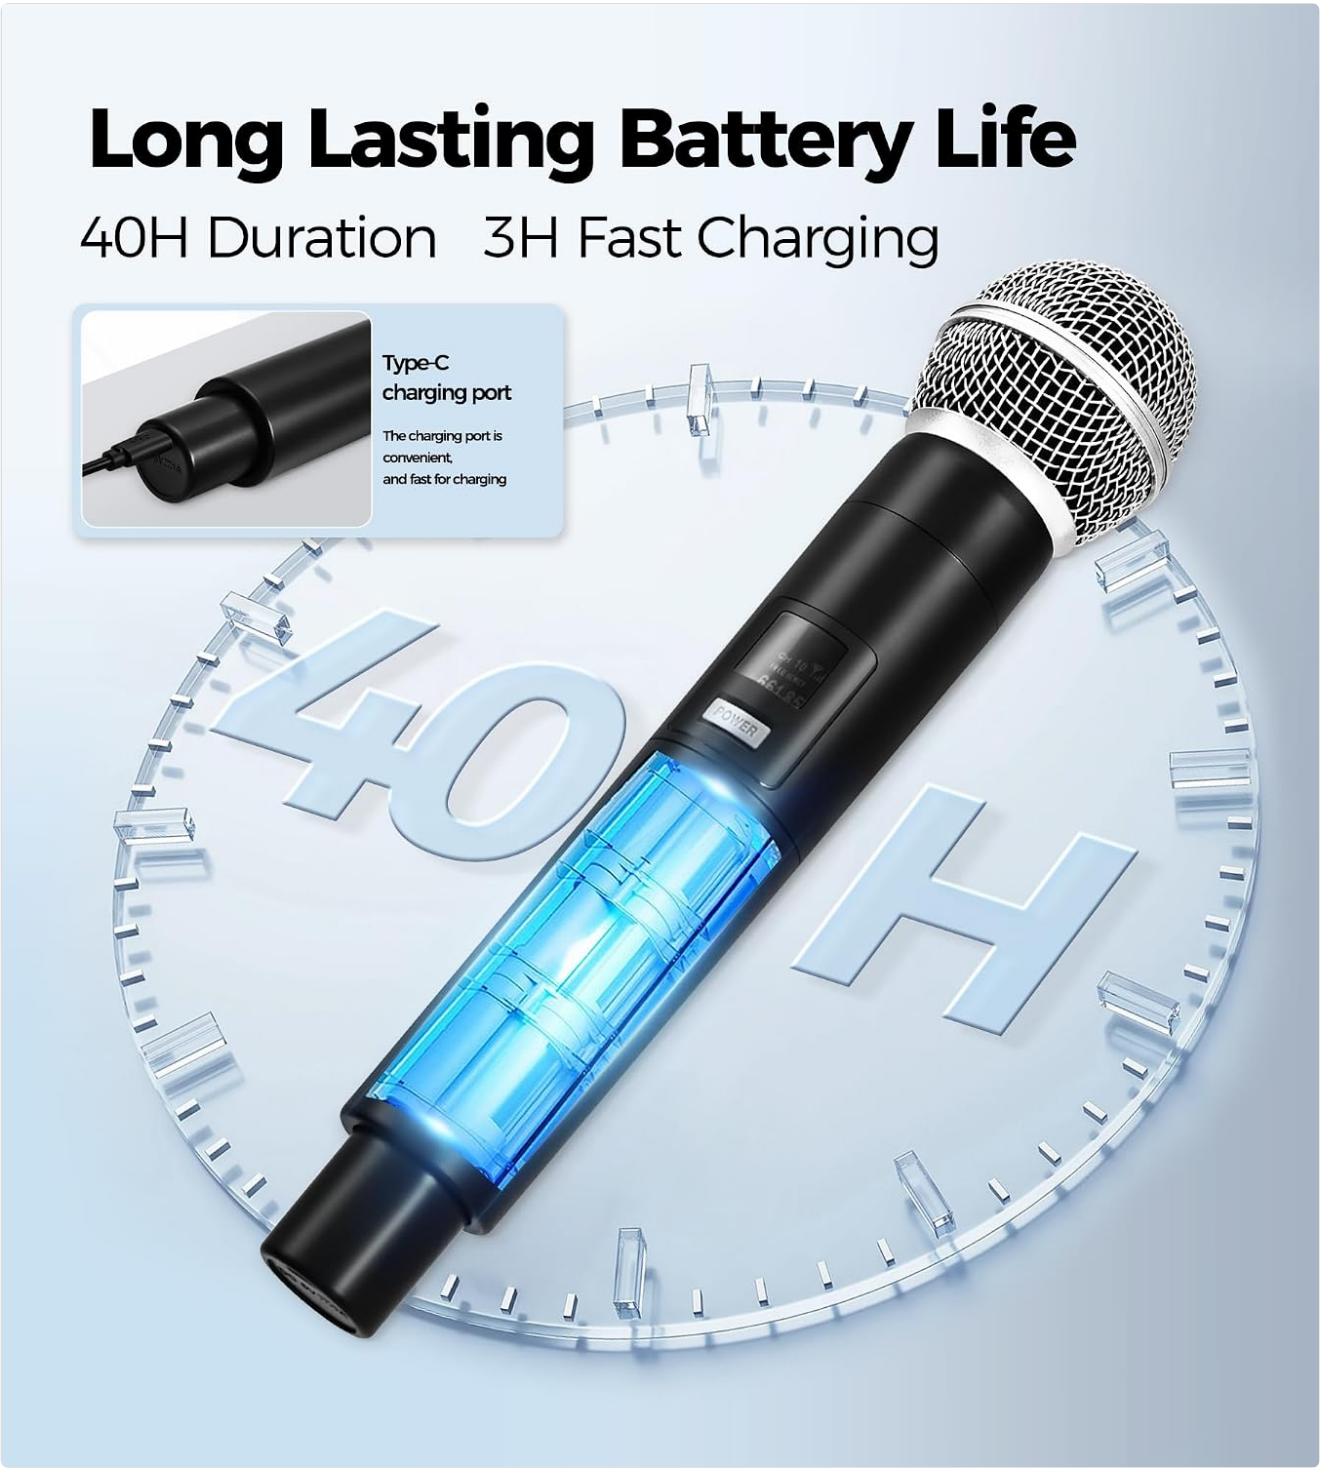


Image: Depiction of the microphone's long-lasting 40-hour battery life and convenient Type-C charging.

Universal Compatibility

The G59 system is designed for broad compatibility with various audio devices, including trolley speakers, live sound cards, amplifiers, echo wall systems, home audio setups, and Bluetooth audio devices. It supports both 1/8" (3.5mm) and 1/4" (6.35mm) connections.



Image: Visual guide to the microphone's universal compatibility with different audio systems.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the microphone body and receiver. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the microphone system in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** For optimal battery life, avoid fully discharging the batteries frequently. Recharge them regularly, especially if storing the device for extended periods.
- **Handling:** Handle the microphones and receiver with care to prevent damage from drops or impacts.

Troubleshooting

- **No Sound Output:**
  - Ensure both microphones and the receiver are powered on and fully charged.
  - Verify the receiver is securely plugged into the audio input of your speaker/amplifier.
  - Check the volume settings on your audio device.
  - Confirm the microphones are paired with the receiver (indicator lights should be stable).
- **Interference or Poor Sound Quality:**
  - Ensure the microphone and receiver are within the 200-foot operating range.
  - Minimize obstacles (walls, large metal objects) between the microphone and receiver.
  - Check for other wireless devices operating on similar frequencies that might cause interference.
  - Ensure batteries are not low, as this can affect signal strength.
- **Microphone Not Charging:**
  - Verify the Type-C charging cable is properly connected to both the microphone/receiver and a power source.
  - Try a different charging cable or power adapter.
  - Ensure the charging port is clean and free of debris.

Specifications

Feature	Detail
Brand	MAILANGSHI
Model Number	G59
Battery Type	Lithium-polymer (3 included)
Battery Life	Up to 40 hours
Charging Time	Approximately 3 hours (Fast Charging)
Special Features	Battery indicator light, DSP Noise Reduction, Anti-static Noise, Cardioid Pickup
Signal-to-Noise Ratio	60 dB
Number of Channels	2
Wireless Range	Up to 200 feet (approx. 60 meters)
Compatible Devices	Amplifier, Speaker, Karaoke Machine, Live Sound Card, Home Audio, Bluetooth Audio
Dimensions (L x W x H)	15 x 5.7 x 24 cm (approximate for entire package)

Warranty and Support

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official MAILANGSHI website. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question