**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



### onerbl AC-DC Adapter

# onerbl AC-DC Adapter User Manual

## Replacement for EPSON PB-6509, M34PB, TM-U200D, TM-U200B Power Supplies

## 1. Introduction

This manual provides essential information for the safe and effective use of your onerbl AC-DC Adapter. This adapter is designed as a replacement power supply for various EPSON devices, including models PB-6509, M34PB, TM-U200D, and TM-U200B. It converts standard AC electrical power into the DC power required by your compatible device, ensuring reliable operation and charging.



*Image 1.1: The onerbl AC-DC Adapter unit with its accompanying power cord.*

## 2. Safety Information

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or damage to the adapter or your device.

- Ensure the adapter is compatible with your device's power requirements before connecting.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open, modify, or repair the adapter. Refer servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use for extended periods.
- This adapter features **Over Voltage Protection**, **Over Heat Protection**, and **Short Circuit Protection** to enhance safety.

## 3. Package Contents

Verify that all items are present in the package:

- 1 x onerbl AC-DC Adapter Unit
- 1 x AC Power Cord

## 4. Specifications

| | |
|---|---|
| **Brand** | onerbl |
| **Input Voltage** | AC 100-240V, 50/61Hz (Worldwide AC Input) |
| **Output** | DC Power (Specific voltage and amperage determined by compatible EPSON device requirements) |
| **Compatible Devices** | EPSON PB-6509, M34PB, TM-U200D, TM-U200B |
| **Connector Type** | Barrel Connector |
| **Special Features** | Over Voltage Protection, Over Heat Protection, Short Circuit Protection |
| **Color** | Black |
| **Cable Length (Total)** | Approximately 127.8 inches (324.6 cm) |

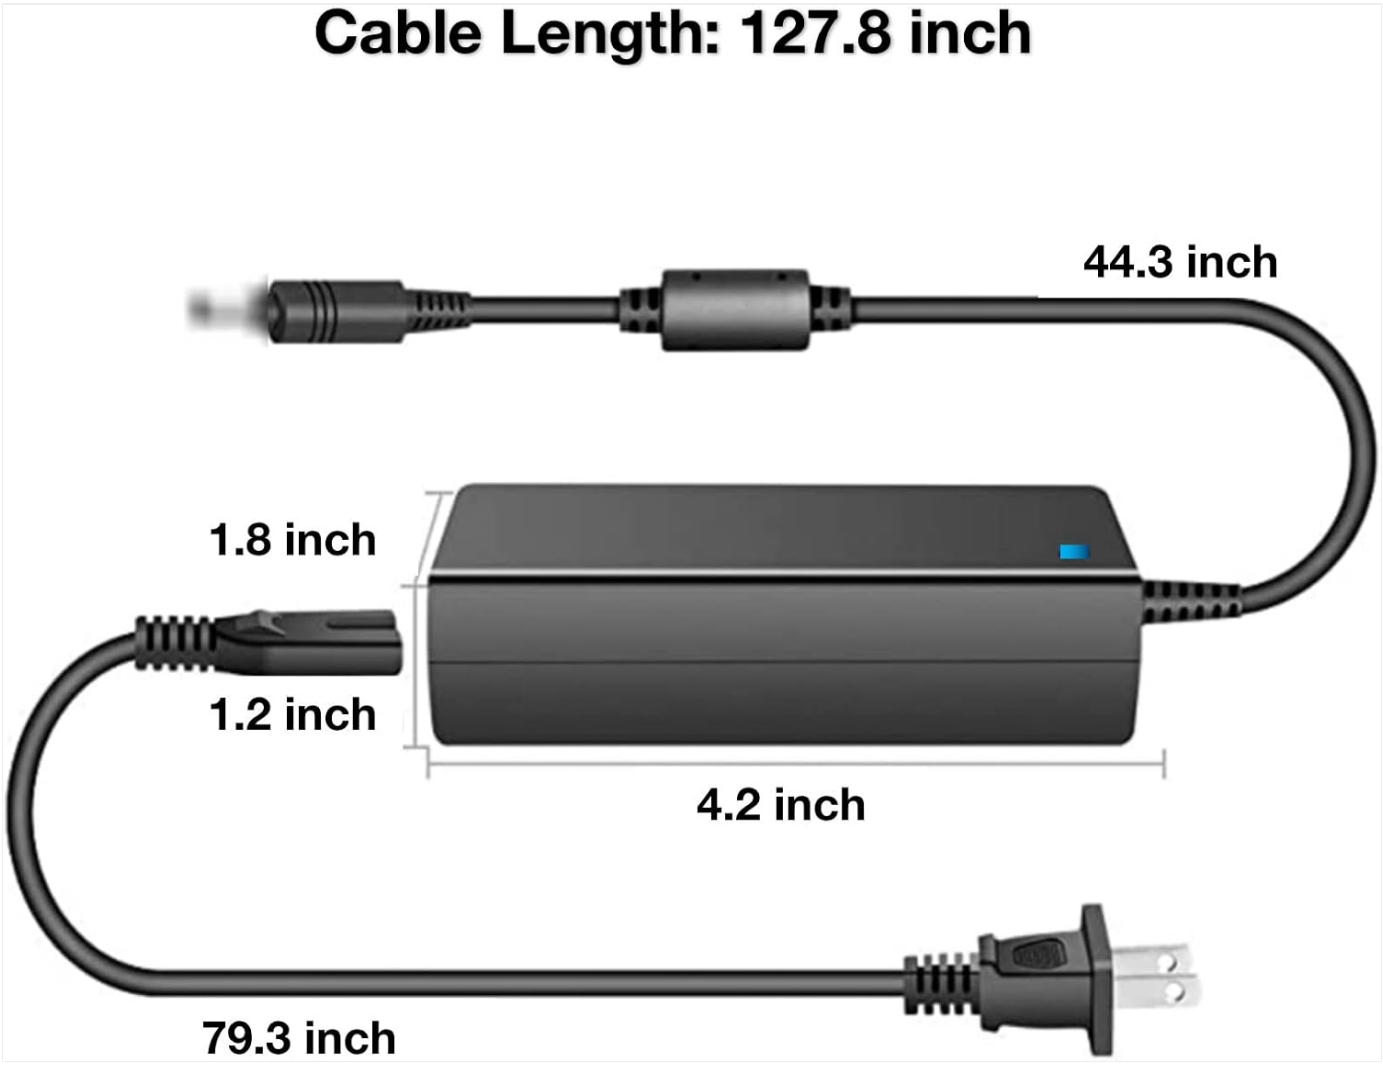


*Image 4.1: Diagram illustrating the dimensions of the adapter unit and cable lengths. The total cable length is approximately 127.8 inches.*

## 5. Setup

Follow these steps to set up your onerbl AC-DC Adapter:

1. **Connect the AC Power Cord:** Insert the figure-8 connector of the AC power cord firmly into the corresponding port on the onerbl AC-DC adapter unit.
2. **Connect to Power Outlet:** Plug the two-prong end of the AC power cord into a standard electrical wall outlet (AC 100-240V).
3. **Connect to Device:** Insert the barrel connector from the adapter unit into the power input port of your compatible EPSON device (e.g., PB-6509, M34PB, TM-U200D, TM-U200B). Ensure a secure connection.



*Image 5.1: The AC-DC adapter connected to a wall outlet and a device, illustrating a typical setup.*

## 6. Operating Instructions

Once properly connected, the onerbl AC-DC Adapter will automatically begin supplying power to your device. A blue LED indicator light on the adapter unit will illuminate, signifying that the adapter is receiving power and is operational.

- The adapter provides continuous power for device operation and charges the device's battery if applicable.
- No further user interaction is required during normal operation.

## 7. Maintenance

Proper maintenance ensures the longevity and optimal performance of your adapter:

- **Cleaning:** Disconnect the adapter from both the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the surface of the adapter. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Avoid tightly coiling the cables to prevent damage.
- **Inspection:** Periodically inspect the adapter and cables for any signs of damage, such as frayed wires, bent pins, or cracks in the casing. If damage is found, discontinue use and replace the adapter.



*Image 7.1: The AC power cord, showing the two-prong plug for the wall outlet and the figure-8 connector for the adapter unit. Regular inspection of this cable is recommended.*

## 8. Troubleshooting

If you encounter issues with your onerbl AC-DC Adapter, refer to the following common troubleshooting steps:

- **No Power Indicator Light:**
  - Ensure the AC power cord is securely connected to both the adapter and the wall outlet.
  - Verify that the wall outlet is functional by testing it with another device.
  - Check for any visible damage to the power cord or adapter unit.
- **Device Not Receiving Power/Charging:**
  - Confirm that the barrel connector is fully inserted into your device's power input port.
  - Ensure your device is one of the compatible models (EPSON PB-6509, M34PB, TM-U200D, TM-U200B).

- If possible, test the adapter with another compatible device to rule out an issue with your primary device.

- **Adapter Feels Warm:**
  - It is normal for power adapters to become warm during operation. However, if the adapter becomes excessively hot to the touch or emits a burning smell, immediately disconnect it from the power outlet and your device.
  - Ensure the adapter is in a well-ventilated area and not covered by objects that could trap heat.

If these steps do not resolve the issue, please contact customer support for further assistance.

## 9. Warranty and Support

This product is typically covered by a standard return policy, which allows for returns or replacements within 30 days of purchase. For specific warranty details, return procedures, or technical support, please refer to your purchase documentation or contact the seller directly. Keep your proof of purchase for any warranty claims.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0DRYJ7278**

More documents and user manuals: **https://manuals.plus/**