Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ACCOHOHO LM080

ACCOHOHO LM080 Fireplace TV Stand User Manual

Model: LM080 | Brand: ACCOHOHO

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your ACCOHOHO LM080 Fireplace TV Stand. Please read all instructions carefully before assembly and use to ensure safe and proper functioning of the product. Keep this manual for future reference.

2. Important Safety Information

Failure to follow these instructions may result in fire, electric shock, or personal injury. Always exercise caution when handling electrical appliances and assembling furniture.

- Read all instructions before using this appliance.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned or been dropped or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always disconnect power before performing any cleaning or maintenance.

- Ensure all parts are securely fastened during assembly. Do not overtighten screws.
- Place the TV stand on a flat, stable surface to prevent tipping.

3. Package Contents

Your ACCOHOHO LM080 Fireplace TV Stand is shipped in two separate packages. Please ensure you have received both packages and all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

Package 1: TV Stand Components

- Wooden panels for the TV stand frame, shelves, doors, and drawers.
- Hardware kit (screws, dowels, cam locks, hinges, drawer slides, handles).
- Assembly instructions for the TV stand.

Package 2: Electric Fireplace Unit

- 36-inch Electric Fireplace Insert.
- Remote Control for the fireplace.
- User manual for the electric fireplace.



Image: Overview of product dimensions and indication of two separate packages (Box A and Box B).

4. Product Specifications

Feature	Specification
Brand	ACCOHOHO
Model Name	LM080 Fireplace TV Stand
Product Dimensions	70"W x 15.5"D x 35.7"H
Material	Engineered Wood (MDF and reinforced particleboard)
Finish Type	Weathered Oak
Color	Black

Feature	Specification
Installation Type	Freestanding
Max TV Size Supported	Up to 80 inches
Tabletop Weight Capacity	Up to 150 lbs
Electric Fireplace Size	36 inches
Heat Output	5000 BTU
Heating Coverage	Up to 400 sq ft
Temperature Range	64°F to 82°F
Timer	1-8 hours
Special Features	Adjustable Thermostat, 3D Flame Effect, Overheat Protection, Remote Control
Item Weight	147 pounds



Image: The ACCOHOHO LM080 TV stand demonstrating its compatibility with televisions up to 80 inches in size.

5. Assembly Instructions (Setup)

Assembly typically requires two adults and may take several hours. Follow the step-by-step instructions provided in the separate assembly guide included with your TV stand components. Ensure you have adequate space and the necessary tools (e.g., screwdriver, hammer) before starting.

1. **Unpack and Identify Parts:** Carefully unpack both packages. Lay out all wooden panels and hardware. Compare them against the parts list in the assembly guide to ensure everything is present and undamaged. Labeled parts facilitate quick identification.
2. **Assemble the Base and Side Frames:** Begin by constructing the base and side frames of the TV stand according to the diagrams. Use the specified screws and dowels to connect the panels securely.
3. **Install Shelves and Back Panels:** Insert the fixed and adjustable shelves into their designated slots. Attach the back panels to the frame, ensuring proper alignment.
4. **Assemble and Install Drawers:** Follow the instructions to assemble the three drawers. Install the drawer slides

onto both the drawers and the TV stand frame. Carefully insert the assembled drawers into their compartments.

5. **Attach Doors:** Mount the hinges to the cabinet doors and then attach the doors to the main frame. Adjust hinges as needed for proper door alignment.
6. **Install Electric Fireplace:** Once the main TV stand structure is complete, carefully slide the 36-inch electric fireplace insert into its designated opening in the center. Ensure it fits snugly and is properly seated.
7. **Final Checks:** Verify that all screws are tightened, and all components are stable. Place the TV stand in its desired location, ensuring it is on a level surface.



Image: The fully assembled ACCOHOHO LM080 Fireplace TV Stand, showcasing its design and functionality in a home environment.

6. Operating Instructions

6.1 Electric Fireplace Operation

The electric fireplace can be controlled using the included remote control or the mechanical button panel on the unit itself.



Image: Detailed view of the 36-inch electric fireplace, highlighting its control panel, remote control, and various features like 3D flame effect and timer.

- **Power On/Off:** Press the power button on the remote or control panel to turn the fireplace on or off.
- **Flame Effect:** The fireplace features a realistic 3D flame effect. This can be operated independently, with or without the heater function.
- **Heat Function:** Press the heat button to activate the heating element. The unit provides 5000 BTUs of heating power, capable of warming up to 400 sq ft.
- **Temperature Control:** Use the temperature adjustment buttons (up/down arrows) to set your desired room temperature between 64°F and 82°F. The fireplace will automatically maintain this temperature.
- **Timer Function:** Activate the timer function to set the fireplace to turn off automatically after a set period, ranging from 1 to 8 hours.
- **Overheat Protection:** The unit is equipped with overheat protection, which will automatically shut off the heater if it

reaches an unsafe temperature.

6.2 Storage Features

The TV stand offers various storage options to help organize your media and other items.

- **Open Soundbar Shelf:** Located above the fireplace, this shelf is designed for media devices such as soundbars, gaming consoles, or decorative items.
- **Storage Drawers:** Three spacious drawers are located below the fireplace. These are suitable for storing smaller items, remote controls, or accessories.
- **Adjustable-Shelf Cabinets:** Two large cabinets, one on each side of the fireplace, feature adjustable shelves. These shelves can be repositioned to accommodate items of various sizes, such as DVDs, books, or larger media components.

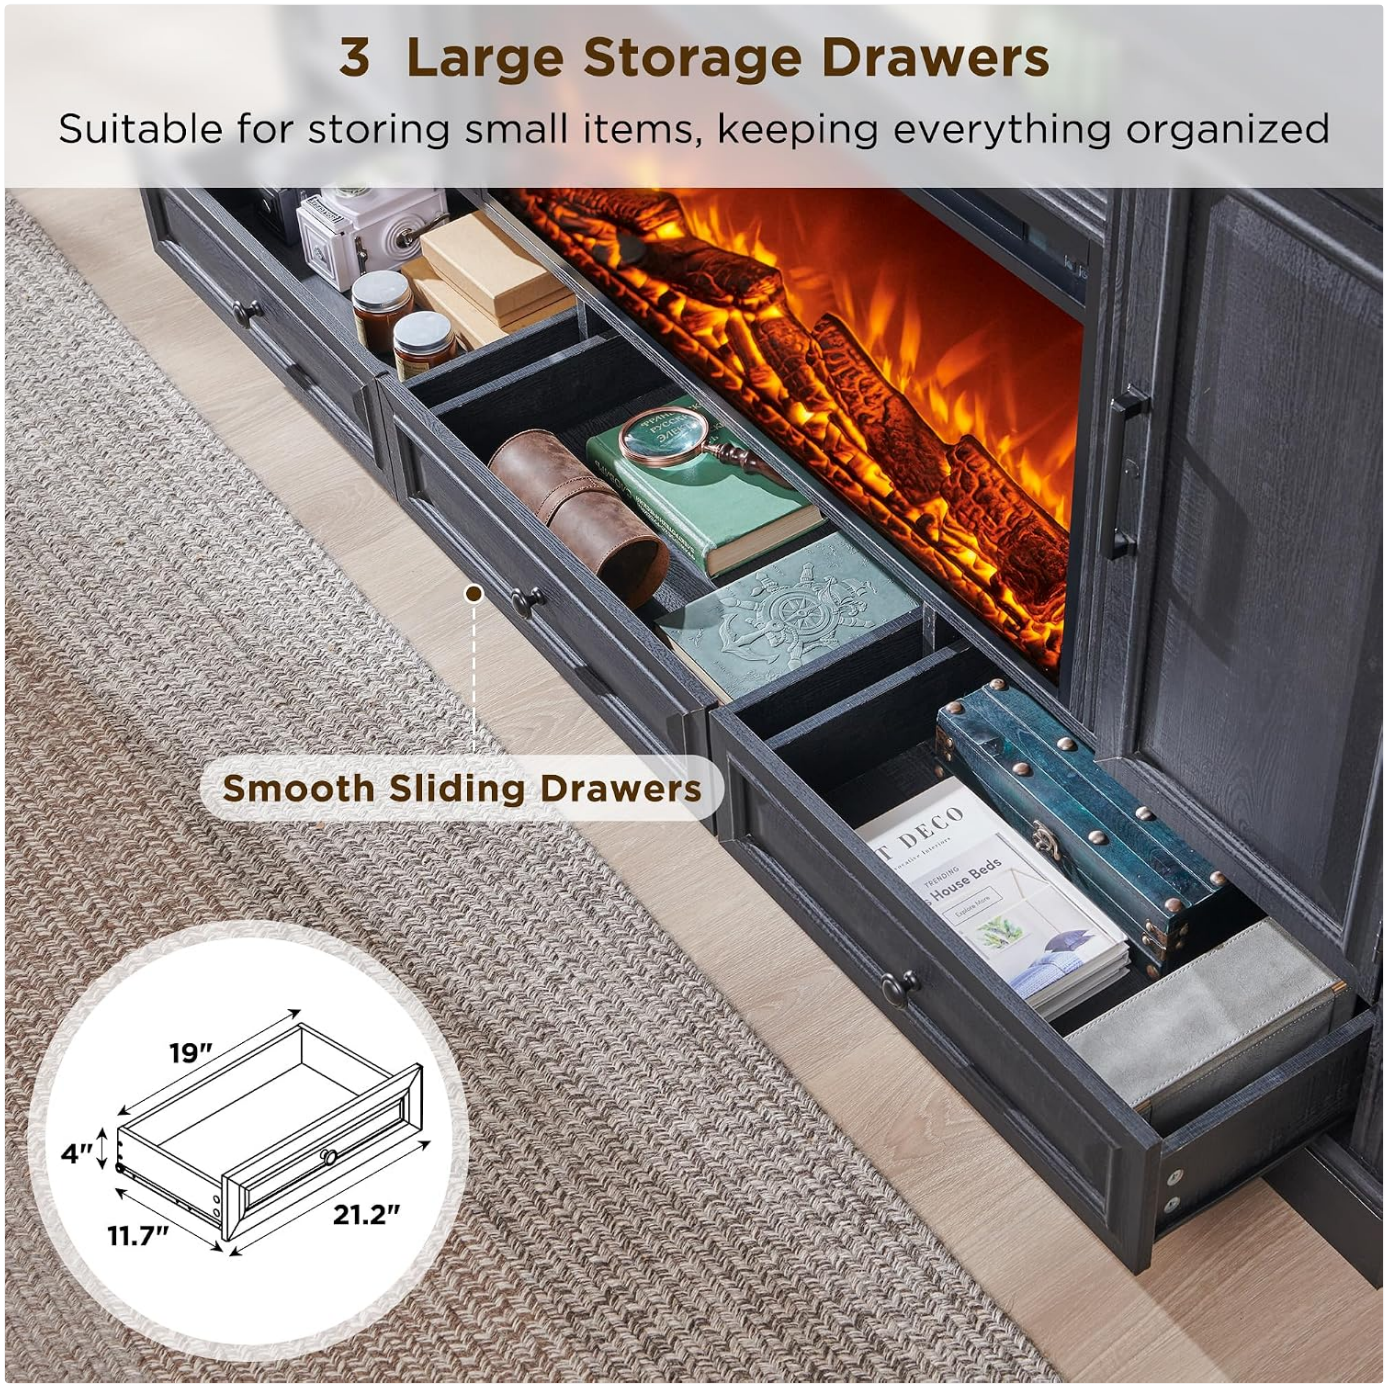


Image: The three spacious drawers of the TV stand, shown open to illustrate their storage capacity for various items.



Semi-open Top Shelf

Great space for place your sound bar

Ample Storage Cabinet

Perfect for organizing all your essentials





Adjustable Shelf

Adjustable shelf for flexiable and cunstomizable storage

Image: A detailed view of the semi-open top shelf, suitable for a soundbar, and the adjustable shelf within the side cabinet, demonstrating flexible storage options.

7. Maintenance

Regular maintenance will help prolong the life and appearance of your ACCOHOHO Fireplace TV Stand.

- **Cleaning the TV Stand:**
  - Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
  - Promptly wipe up any spills to prevent staining or damage to the engineered wood.
  - Avoid placing hot items directly on the tabletop without protection.
- **Cleaning the Electric Fireplace:**
  - Ensure the fireplace is turned off and unplugged before cleaning.

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not spray water directly onto the unit.
- Periodically check air intake and exhaust vents for dust accumulation and gently clean with a soft brush or vacuum cleaner attachment.

- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.

8. Troubleshooting

If you encounter issues with your ACCOHOHO Fireplace TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not plugged in, circuit breaker tripped, unit overheated.	Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker. If the unit overheated, unplug it, wait 10-15 minutes, and plug it back in.
No heat, but flames are visible.	Heat function is off, thermostat set too low.	Press the heat button on the remote or control panel. Increase the thermostat setting to a higher temperature than the current room temperature.
Remote control not working.	Dead batteries, obstruction, remote out of range.	Replace batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor. Operate the remote within the recommended range.
TV stand feels unstable after assembly.	Loose fasteners, uneven floor.	Check and tighten all screws and fasteners. Ensure the TV stand is placed on a level surface. Adjust furniture levelers if available.
Drawers or doors do not align properly.	Incorrect assembly, hinge/slide adjustment needed.	Review the assembly instructions for drawer slide and hinge installation. Adjust hinges as per the guide for proper door alignment.

9. Warranty Information

The ACCOHOHO LM080 Fireplace TV Stand comes with a**Limited Warranty**. Please refer to the warranty card or documentation included with your product packaging for specific terms, conditions, and duration of the warranty. This typically covers manufacturing defects under normal use.

10. Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact ACCOHOHO customer support. Have your model number (LM080) and purchase information ready when contacting support for faster service.
For contact details, please refer to the information provided in your product packaging or visit the official ACCOHOHO website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DS8XTM7V

More documents and user manuals: **https://manuals.plus/**