COOKLEE food processor

COOKLEE Food Processor (Model: food processor) Instruction Manual

1. Introduction and Overview

The COOKLEE 12-Cup Food Processor is a versatile kitchen appliance designed to simplify food preparation. Featuring a powerful 600-watt motor and a 12-cup processing bowl, it combines the functions of a food processor, blender, and dough maker. This manual provides essential information for safe and efficient operation, maintenance, and care of your appliance.

2. Safety Instructions

DUAL-LOCK SAFETY DESIGN: The food processor will not operate unless the lid is securely locked. Ensure both the processing bowl and lid are firmly locked in place before use to prevent the "E1" error indication. Always handle blades with extreme caution as they are very sharp.
Product Care Instructions: All removable parts are dishwasher safe. Refer to the cleaning section for detailed instructions.



Image: Illustration of the dual-lock safety mechanism, showing how the bowl and lid must be securely fastened for operation. A note warns about the 'E1' error if not properly locked.

3. Product Components (What's in the Box)

Your COOKLEE Food Processor comes with the following components:

- Main Body (Motor Base)
- 12-Cup Processing Bowl
- Lid with Food Chute
- Food Pusher
- Long Shaft
- S.S. Chopping Blade (S-shaped)
- Kneading Blade
- S.S. Slicing/Shredding Disc (Fine)
- S.S. Slicing/Shredding Disc (Coarse)
- S.S. French Fries Disc



Image: An exploded view of the COOKLEE Food Processor showing all included components: main body, 12-cup bowl, lid, pusher, long shaft, chopping blade, kneading blade, fine slicing/shredding disc, coarse slicing/shredding disc, and french fries disc.

4. Setup

1. Place the main body (motor base) on a clean, dry, and stable surface.
2. Place the 12-cup processing bowl onto the motor base. Turn the bowl clockwise until it clicks securely into place. The safety switch will be triggered.
3. Insert the desired blade (S.S. Chopping Blade or Kneading Blade) or disc (S.S. Slicing/Shredding Disc or S.S. French Fries Disc) onto the drive shaft in the center of the bowl.
4. Place the lid onto the processing bowl. Turn the lid clockwise until it clicks securely into place.
5. Insert the food pusher into the food chute opening on the lid.



Image: A step-by-step visual guide demonstrating the assembly of the COOKLEE Food Processor, from placing the bowl on the base to inserting the disc and locking the lid.

5. Operating Instructions

The COOKLEE Food Processor features touchpad controls with 6 modes and 11 speeds for various food preparation tasks.

Control Panel Overview

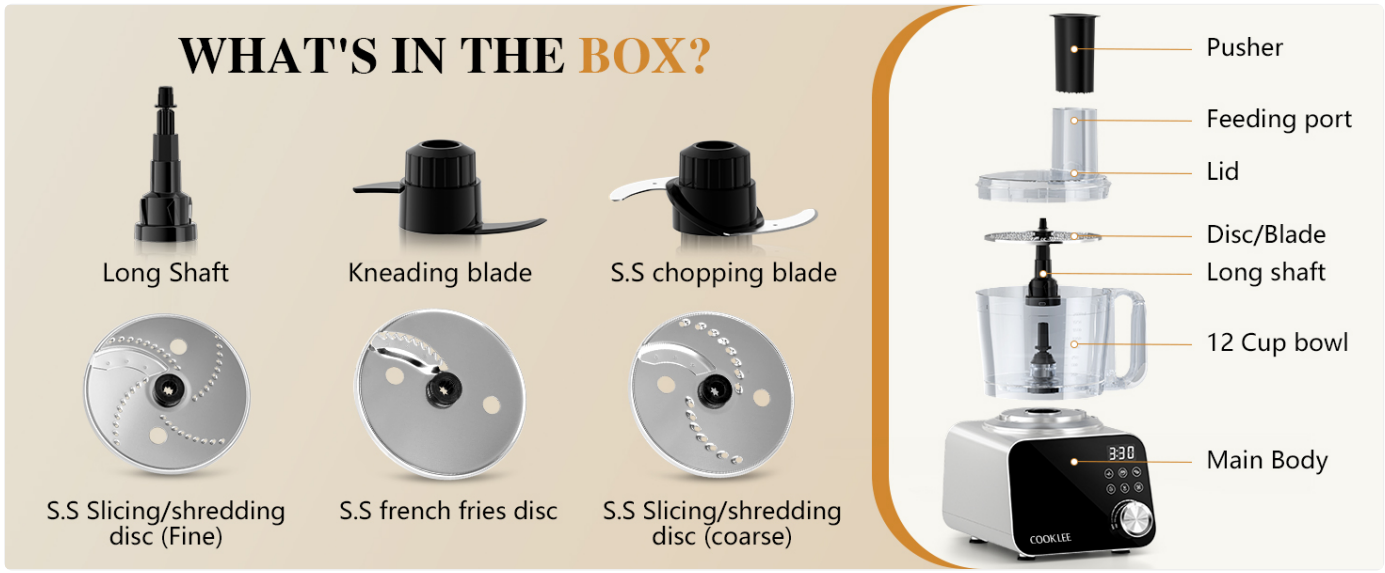


Image: Detailed view of the LED Smart Display Timer and touchpad controls, highlighting the 6 modes and 11 speeds.

- **Time/Speeds Display:** Shows current time or speed setting.
- **Modes:** Ice-crushing, Kneading, Chopping, Cleaning, Timer, Speed.
- **Knob:** Used to start/pause/cancel operations and adjust speed/time.

Functions and Recommended Usage

To use a function, click the desired mode button, then press the knob to start. To cancel, click the knob button for three seconds.

- **Chopping:** Use the S.S. Chopping Blade. Recommended for meat (max 500g). Set to Chopping mode, 6-11 speed, for 20 seconds.

Image: The food processor in action, chopping meat with the stainless steel chopping blade. Recommended meat quantity is 500g maximum.

- **Kneading:** Use the Kneading Blade. Recommended for 360g flour, 120g water (flour:water = 2:1). Set to Kneading mode for 2 minutes 30 seconds.



Image: The food processor kneading dough with the kneading blade. Recommended flour to water ratio is 2:1 for optimal results.

- **Slicing/Shredding:** Use the Reversible Stainless Steel Disc (Fine or Coarse) or S.S. French Fries Disc. Set to Speed mode (8-11 speed) for 5-6 seconds.

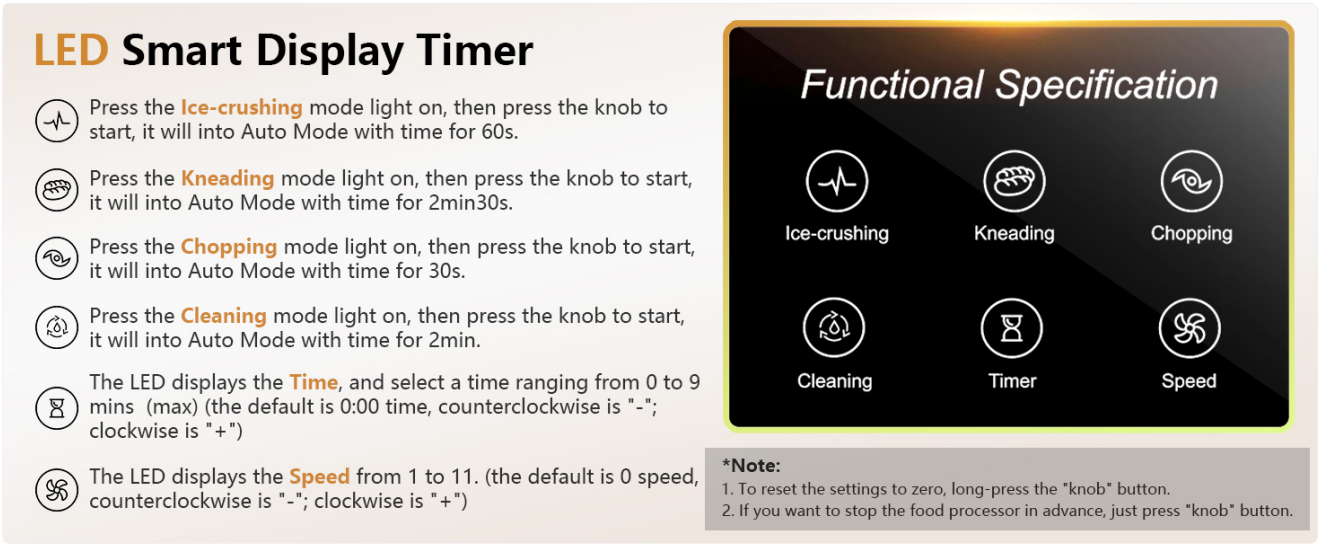


Image: Various slicing and shredding discs are displayed with examples of finely sliced cucumbers, shredded carrots, and french fries.

- **Ice-crushing:** Use the S.S. Chopping Blade. Set to Ice-crushing mode, 11 speed, for 20 seconds. (Note: White ice cubes in the middle are better for making smoothies).



Image: The food processor crushing ice with the stainless steel chopping blade, suitable for making smoothies.

Official Product Video: Powerful motor. Lots of blade options. Great features!

Your browser does not support the video tag.

Video: A seller demonstrates the COOKLEE Food Processor, highlighting its powerful motor and various blade options for different food preparation tasks. The video showcases the ease of use and versatility of the appliance.

6. Cleaning and Maintenance

Cleaning your COOKLEE Food Processor is designed to be effortless.

- **Self-Cleaning Mode:** Activate the self-cleaning mode with a simple press of a button.
- **Dishwasher Safe Parts:** All removable parts (bowl, lid, blades, discs, pusher) are dishwasher safe for convenient cleanup.



Image: The food processor in self-cleaning mode with water, and a separate image showing removable parts placed in a dishwasher for easy cleaning.

7. Troubleshooting

If the appliance does not operate, ensure all parts are correctly assembled and locked into place. The dual-lock safety design prevents operation if the bowl or lid is not securely fastened, often indicated by an 'E1' error on the display.

8. Specifications

- **Brand:** COOKLEE
- **Model Name:** food processor
- **Wattage:** 600 watts
- **Bowl Capacity:** 12 Cups
- **Number of Speeds:** 11
- **Product Dimensions:** 10.59"D x 9.45"W x 14.49"H
- **Item Weight:** 8.43 pounds
- **Special Features:** All-in-One Powerhouse, Dual-lock design, 6 models 11 speed LED Display, Touchpad Controls, Versatile Attachments

9. Warranty and Support

24/7 COOKLEE SUPPORT: We're committed to providing quality products and lifelong support. Our 24/7 Customer Service Team is always ready to assist with any questions, missing parts, or damage concerns. Your satisfaction is our priority!

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question