Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

oneisall PW07

oneisall 4-Set Filters for 10L Stainless Steel Dog Water Fountain

Model: PW07

Introduction

Thank you for choosing oneisall replacement filters for your 10L/338oz/2.64Gal Stainless Steel Dog Water Fountain. These filters are designed to ensure your pet always has access to clean, fresh, and healthy drinking water. This manual provides essential information for the proper installation, use, and maintenance of your new filter set.

Safety Information

- Always unplug the pet water fountain from the power outlet before handling or replacing filters.
- Keep filters out of reach of children and pets when not in use.
- Do not attempt to clean filters with harsh chemicals or abrasive materials, as this may damage the filter media.
- Dispose of used filters responsibly according to local regulations.

Product Overview

The oneisall filter set includes multi-layer filter cartridges and washable pre-filter sponges, designed to work in conjunction with your oneisall 10L Stainless Steel Dog Water Fountain to provide a comprehensive 5-stage filtration system.



Image: The oneisall 4-Set Filters shown alongside the compatible 10L Stainless Steel Dog Water Fountain.



Image: A detailed diagram illustrating the 5-stage filtration process within the pet water fountain, highlighting the sponge, non-woven fabric, activated carbon, ion-exchange resins, and another layer of non-woven fabric.

Filter Components:

- **Pre-filter Sponge:** Catches larger debris, hair, and food particles. Washable and reusable.
- **Non-Woven Fabric (First Layer):** Further filters out fine particles.
- **Activated Carbon:** Removes odors, chlorine, and other impurities.

- **Ion-Exchange Resins:** Softens water and removes heavy metal ions.
- **Non-Woven Fabric (Second Layer):** Provides final filtration for clean water.

Setup and Installation

Follow these steps to properly prepare and install your new filters:

1. **Soak the Filter:** Before first use, please soak the new filter cartridge in a bowl of clean water for 5 minutes. This helps to remove any carbon dust and ensures optimal filtration performance.



Image: Top panel shows filter cartridges soaking in water. Bottom panel shows a filter being rinsed under running water to remove any residues.

2. **Rinse the Filter:** After soaking, rinse the filter cartridge thoroughly under running tap water to remove any loose carbon particles.
3. **Clean the Fountain:** Before installing new filters, ensure your pet water fountain is clean. Refer to your fountain's instruction manual for cleaning procedures.
4. **Place the Sponge:** Insert the pre-filter sponge into its designated slot in the fountain's pump assembly or filter tray.

5. **Insert the Filter Cartridge:** Place the prepared filter cartridge into the filter housing or tray within the fountain, ensuring it sits securely.
6. **Assemble and Fill:** Reassemble the fountain components and fill the reservoir with fresh water.
7. **Power On:** Plug in the fountain and ensure water is flowing correctly.

Operating Principles

The oneisall filtration system works continuously to provide clean water. Water is drawn from the main reservoir, passes through the pre-filter sponge, and then through the multi-layer filter cartridge. This process removes impurities, odors, and softens the water, ensuring a constant supply of fresh drinking water for your pet.

Maintenance

Regular maintenance of your filters is crucial for optimal performance and your pet's health.

Sponge Maintenance:

- The pre-filter sponge is washable and reusable. Rinse it thoroughly under running water at least once a week, or more frequently if visible debris accumulates.
- Gently squeeze the sponge to remove trapped particles and ensure it is clean before reinserting.



Image: A visual representation of the washable and reusable pre-filter sponge, emphasizing its role in extending filter lifespan and reducing costs.

Filter Cartridge Replacement:

- It is recommended to replace the filter cartridge every **2 to 4 weeks**, depending on the number of pets using the fountain and the water quality in your area.
- Signs that a filter needs replacement include reduced water flow, noticeable odors, or visible discoloration of the filter media.

How to Replace:

1. Unplug the fountain and disassemble the top tray and filter housing.
2. Remove the old filter cartridge and sponge.
3. Clean the fountain thoroughly before installing new components.
4. Follow the 'Setup and Installation' steps for preparing and inserting the new filter cartridge and sponge.



Image: A two-panel image demonstrating the ease of replacing the filter and sponge. The top panel shows a hand removing the blue pre-filter sponge from the filter housing. The bottom panel shows a hand removing the small white sponge from the pump unit.

Troubleshooting

Problem	Possible Cause	Solution
Reduced water flow	Filter or sponge is clogged with debris.	Clean the pre-filter sponge. Replace the filter cartridge if necessary. Ensure pump is clean.
Unpleasant odor in water	Filter needs replacement; bacteria buildup in fountain.	Replace the filter cartridge. Thoroughly clean all parts of the fountain.
Water appears cloudy	New filter not properly rinsed; excessive debris.	Remove and re-rinse the filter thoroughly. Clean the fountain.

Specifications

- **Product Name:** oneisall Replacement Filters
- **Model Number:** PW07
- **Compatibility:** Designed for oneisall 10L/338oz/2.64Gal Stainless Steel Dog Water Fountain
- **Filter Dimensions (approx.):** 4.4 inches (L) x 3.97 inches (W) for main filter; 1.4 inches (L) x 1.1 inches (W) for small sponge.
- **Filtration Stages:** 5-stage (Sponge, Non-Woven Fabric, Activated Carbon, Ion-Exchange Resins, Non-Woven Fabric)
- **Material:** Filter media, non-woven fabric, plastic frame

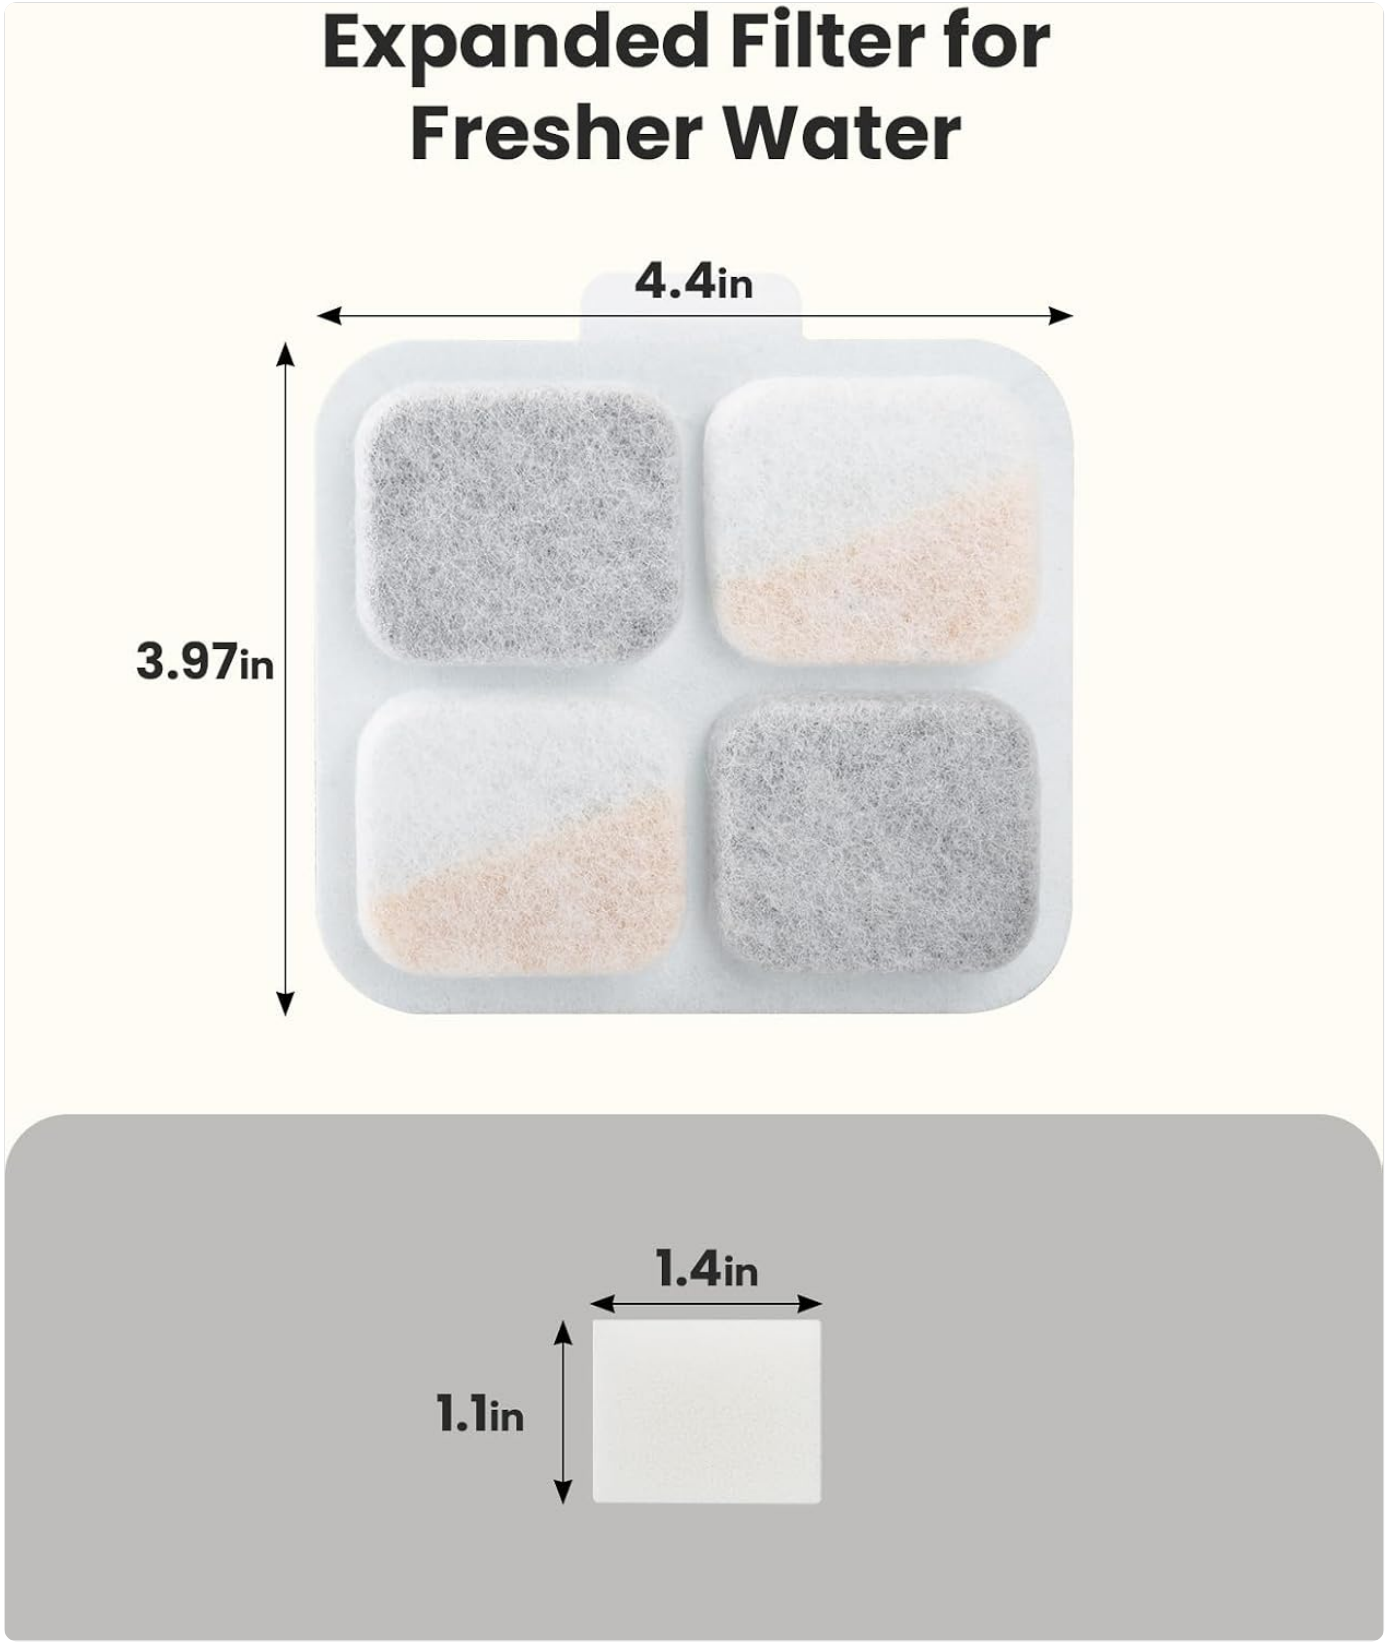


Image: A diagram showing the dimensions of the main filter cartridge (4.4in x 3.97in) and the smaller pre-filter sponge (1.4in x 1.1in).

Warranty and Support

Warranty Information:

This product is covered by a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims. Filters are consumable items and their lifespan depends on usage and water quality, therefore, they are not typically covered under the full warranty for wear and tear.

Customer Support:

For any questions, concerns, or support needs regarding your oneisall filters or pet water fountain, please contact oneisall customer service. You can typically find contact information on the oneisall official website or through the retailer where you purchased the product.

© 2025 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DSDNZ1Y2

More documents and user manuals: **https://manuals.plus/**