Oosofi Manchester 20" Wide One-Door and Two Shelves Wall Cabinet

Oosofi Manchester 20" Wide One-Door and Two Shelves Wall Cabinet User Manual

Model: Manchester Wall Cabinet

Introduction

This manual provides comprehensive instructions for the assembly, installation, operation, and maintenance of your Oosofi Manchester 20" Wide One-Door and Two Shelves Wall Cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference. Proper assembly and care will ensure the longevity and safe use of your cabinet.

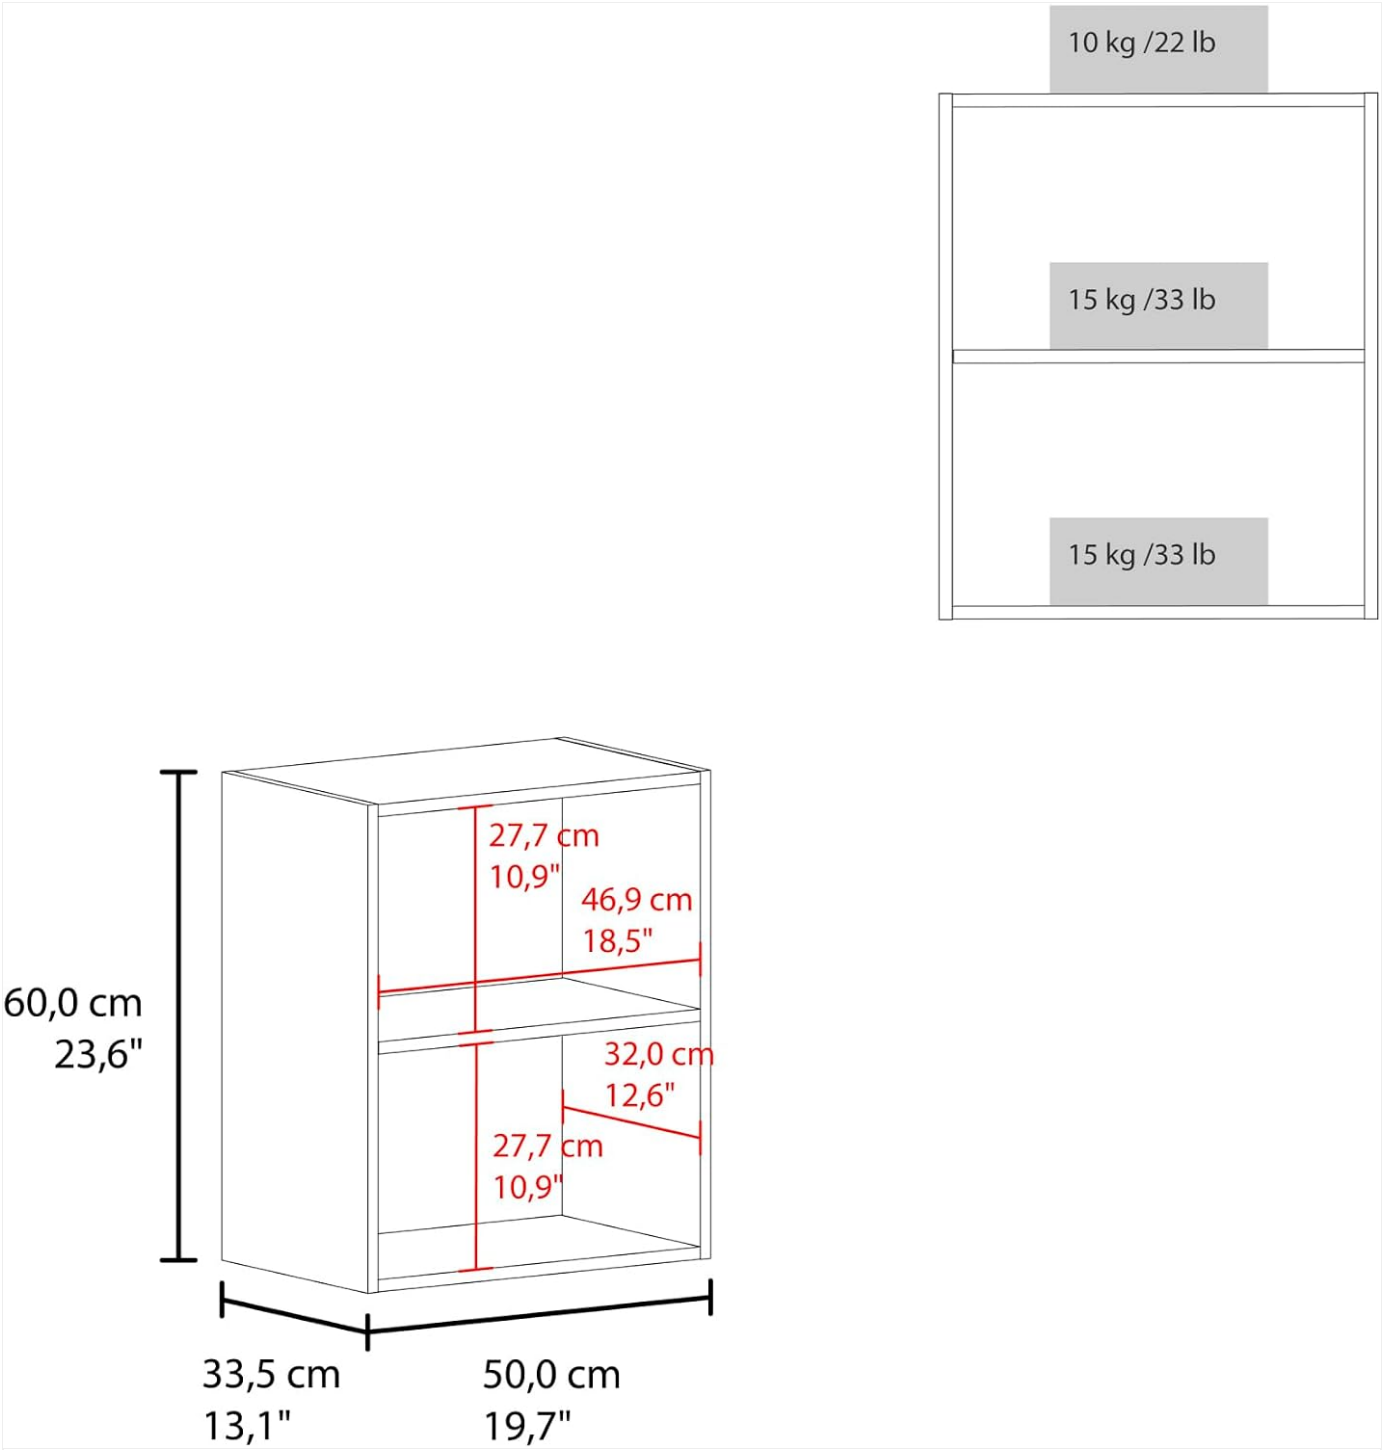


Image: Front view of the Oosofi Manchester 20" Wide Wall Cabinet.

Safety Information

WARNING: Improper installation can cause property damage or personal injury. Always ensure the cabinet is securely mounted to a suitable wall structure. Use appropriate hardware for your specific wall type (e.g., wood studs, concrete, drywall with anchors). Do not overload the cabinet beyond its specified weight capacity.

- Keep small parts away from children during assembly.
- Ensure all connections are tight before and during use.
- Do not stand on or climb on the cabinet.
- Periodically check all fasteners for tightness to maintain stability.
- Always use a level during installation to ensure the cabinet is straight and balanced.

Package Contents

Before assembly, carefully unpack all components and verify that all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Cabinet Panels (Top, Bottom, Side Panels, Back Panel)
- Door Panel
- Shelves (2)
- Hardware Pack (Includes screws, dowels, hinges, handle, wall mounting brackets, and anchors)
- Assembly Tools (e.g., Allen wrench, screwdriver - typically not included, but required for assembly)

Setup & Assembly

Follow these steps carefully for proper assembly and secure installation of your wall cabinet.

1. **Prepare Your Workspace:** Clear a spacious, clean, and flat area. Lay out all cabinet panels and hardware components.
2. **Assemble the Cabinet Frame:** Attach the side panels to the top and bottom panels using the provided dowels and screws. Ensure that the grooves for the back panel are correctly aligned.
3. **Install the Back Panel:** Slide the back panel into the aligned grooves. Secure it in place using the small nails or screws provided in the hardware pack.
4. **Insert Shelves:** Place the shelf pins into the desired holes on the interior side panels. Rest the two shelves securely on these pins.
5. **Attach Hinges to Door:** Secure the hinges to the door panel using the designated screws.
6. **Attach Door to Cabinet:** Mount the door to the cabinet frame by attaching the hinges to the pre-drilled holes on the cabinet side panel. Adjust the hinges as necessary to ensure proper door alignment and smooth opening/closing.
7. **Install Handle:** Attach the handle to the door panel using the provided screws.



Image: Close-up view of the cabinet handle.

8. **Wall Mounting:**

   IMPORTANT: Before mounting, identify suitable wall studs or use appropriate wall anchors for your specific wall type (e.g., drywall, plaster, concrete). Mark the desired mounting height and use a level to ensure the cabinet will be installed straight.

   a. Measure and mark the precise positions for the wall mounting brackets on your wall.
   b. Drill pilot holes at the marked locations.
   c. Securely fasten the wall mounting brackets to the wall using the appropriate screws and anchors.
   d. Carefully lift the assembled cabinet and hang it onto the installed wall mounting brackets. Ensure the cabinet is securely seated and stable.

e. Verify the cabinet's stability and levelness before placing any items inside.

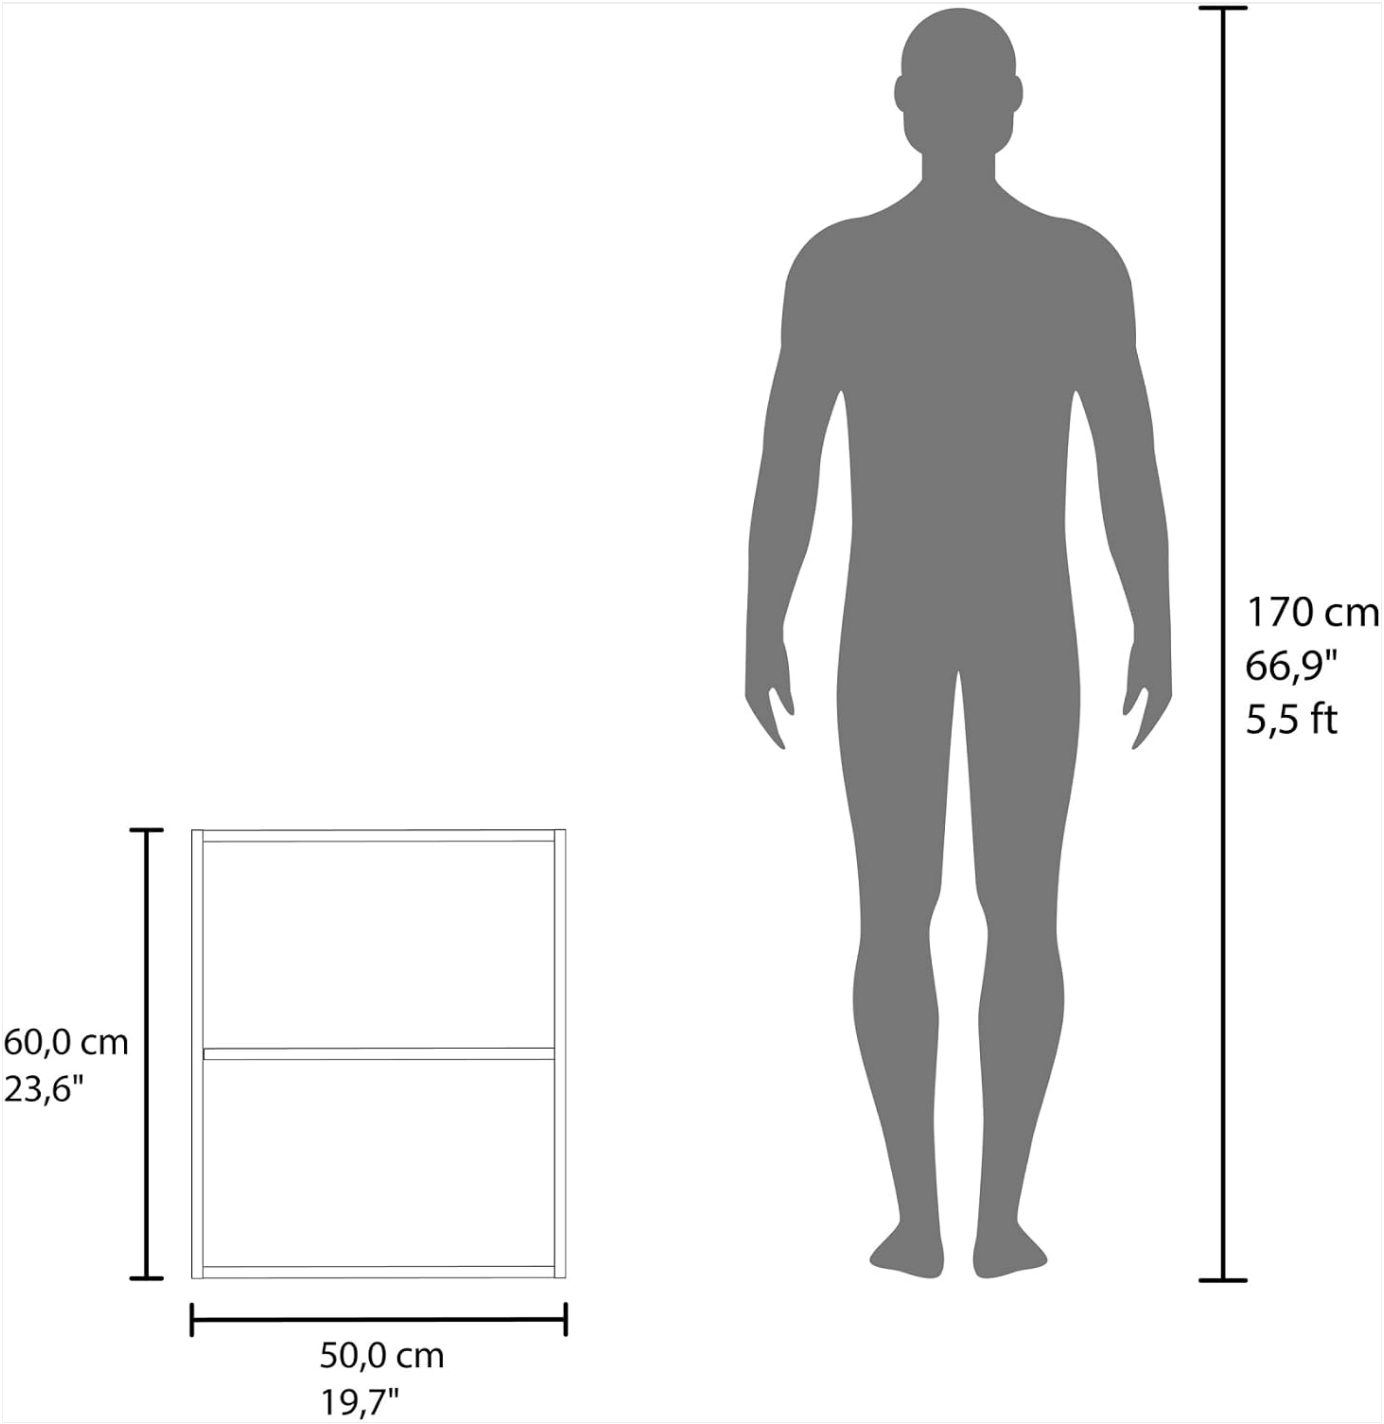


Image: The Oosofi Manchester Wall Cabinet with its door closed, showcasing the finished assembly.

Operating Instructions

The Oosofi Manchester wall cabinet is designed for simple and functional operation.

- **Opening/Closing the Door:** Use the handle to gently open and close the cabinet door. Avoid forcing the door, which can damage hinges or the cabinet structure.
- **Adjusting Shelves:** The interior shelves are adjustable to accommodate various item heights. To reposition a shelf, first remove all items from it. Then, lift the shelf, remove the shelf pins, insert the pins into new desired holes, and finally, replace the shelf securely.
- **Loading the Cabinet:** Distribute weight evenly on the shelves. Refer to the "Specifications" section for the maximum load capacity per shelf and for the top surface to prevent damage or instability.



Image: The Oosofi Manchester Wall Cabinet with its door open, revealing two internal shelves and stored items.

Maintenance

Regular maintenance will help preserve the appearance and structural integrity of your cabinet.

- **Cleaning:** Wipe all surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.
- **Dusting:** Dust the cabinet regularly with a dry, soft cloth to prevent buildup.
- **Hardware Check:** Periodically inspect all screws, fasteners, and hinge connections for tightness. Tighten any loose hardware to ensure the cabinet remains stable and secure.
- **Avoid Moisture and Sunlight:** Do not expose the cabinet to excessive moisture, humidity, or direct sunlight for prolonged periods, as this can lead to warping, discoloration, or material degradation.

Troubleshooting

If you encounter any issues with your Oosofi Manchester wall cabinet, refer to the following common solutions:

- **Door Not Closing or Aligning Properly:** Check the hinge adjustments. Most hinges have screws that allow for minor adjustments to the door's position (up/down, left/right, in/out). Ensure no items inside the cabinet are obstructing the door's path.
- **Cabinet Feels Unstable or Wobbly:** Verify that all wall mounting hardware is securely fastened to both the wall and the cabinet. Ensure all internal assembly screws are tight. If mounted to drywall, confirm that appropriate heavy-duty anchors were used and are properly installed.
- **Minor Scratches or Surface Damage:** For small scratches, a furniture repair marker or touch-up paint matching the cabinet's finish may be used. Consult a professional for more significant damage.

Specifications

Feature	Detail
Model	Manchester Wall Cabinet
Brand	Oosofi
Dimensions (W x D x H)	19.7" x 13.1" x 23.6" (50.0 cm x 33.5 cm x 60.0 cm)
Material	Engineered Wood
Color	Black
Weight Capacity (Top Surface)	10 kg / 22 lb
Weight Capacity (Each Shelf)	15 kg / 33 lb
Mounting Type	Wall-mounted



Image: Diagram illustrating the dimensions and load capacities for the cabinet's top and shelves.



Image: Diagram showing the cabinet's dimensions in relation to an average human figure for scale.

Warranty Information

Oosofi products are manufactured to high-quality standards. For specific warranty details regarding your Manchester 20" Wide One-Door and Two Shelves Wall Cabinet, please refer to the documentation included with your purchase. This warranty typically covers manufacturing defects under normal use and conditions. Please retain your proof of purchase for any warranty claims.

Customer Support

If you have any questions, require assistance with assembly, or need to report missing or damaged parts, please contact Oosofi customer support. You can typically find contact information through the retailer where the product was purchased

or by visiting the official Oosofi website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question