Teamson Home FT0724BRR-EU

Instruction Manual

Teamson Home 4-Tier Brown Stone Fountain - Outdoor LED Water Feature

Product Overview

The Teamson Home 4-Tier Brown Stone Fountain is an elegant outdoor water feature designed to enhance your garden, patio, or balcony. Crafted from durable polyresin with a realistic brown stone effect, it features four progressively arranged basins that create a continuous cascade of water. Integrated underwater LED lights illuminate the water flow, providing a captivating display, especially in the evening. This fountain includes a pump, power cable, and a protective back cover, ensuring easy setup and maintenance while creating a serene and relaxing atmosphere.





Image: The Teamson Home 4-Tier Brown Stone Fountain, showcasing its cascading design and realistic stone texture.

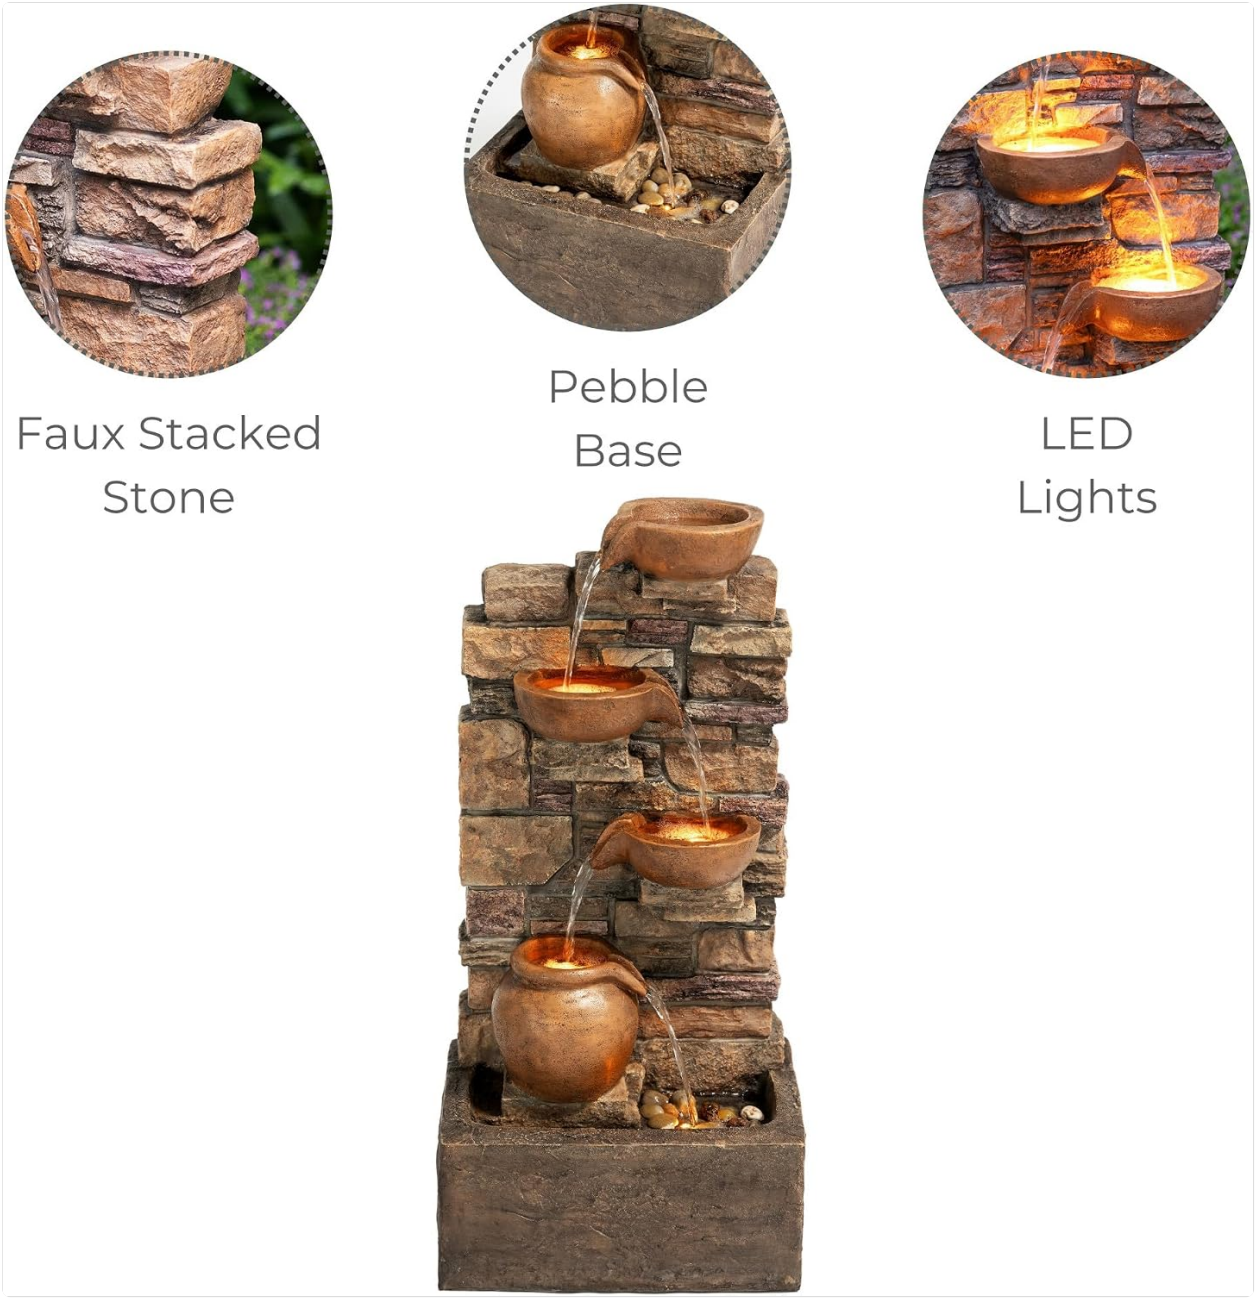


Image: Key features of the fountain, highlighting its faux stacked stone appearance, pebble base, and integrated LED lights.

Safety Information

Please read all safety instructions carefully before assembly and operation. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Only use the provided power adapter and pump. Do not modify the electrical components.
- Connect the power cable to a grounded outdoor outlet protected by a Ground Fault Circuit Interrupter (GFCI).
- Do not operate the fountain if the power cord or pump is damaged.
- Keep children and pets away from the fountain during operation to prevent accidents.
- Always disconnect power before performing any maintenance, cleaning, or moving the fountain.
- Do not allow the pump to run dry, as this can cause damage.
- Protect the fountain from freezing temperatures by draining and storing it indoors during winter.

Package Contents

Carefully unpack all components and ensure you have received the following items:

- 1 x Fountain Unit (4-tier brown stone design)
- 1 x Water Pump (with adjustable flow)
- 1 x Power Cable
- 1 x Back Cover
- 1 x Instruction Manual (this document)

If any parts are missing or damaged, please contact customer support immediately.

Setup

1. **Choose a Location:** Select a flat, stable, and level surface for your fountain. Ensure it is near a grounded outdoor electrical outlet (GFCI protected). Consider the fountain's dimensions (34.75 cm L x 25.73 cm W x 72.39 cm H) to ensure adequate space.



Image: The fountain positioned outdoors, demonstrating its suitability for garden environments.

2. **Assemble the Pump:** Place the water pump inside the fountain's reservoir. Ensure the pump's tubing is

securely connected to the water outlet within the fountain structure. The back cover can be removed to access the pump compartment.





Image: Rear view of the fountain, highlighting the access panel for pump installation and maintenance.

3. **Fill with Water:** Carefully fill the fountain's reservoir with distilled or filtered water until the pump is fully submerged. Do not overfill. The water capacity is approximately 2.6 liters.
4. **Connect Power:** Plug the power cable into the pump, then plug the power adapter into the grounded outdoor electrical outlet. Ensure your hands are dry before handling electrical connections.

Operating Instructions

1. **Starting the Fountain:** Once plugged in, the pump will begin circulating water, and the LED lights will illuminate. Allow a few moments for water to flow through all tiers.





Image: Detailed view of the fountain's tiers, showing the water cascading and the warm glow of the integrated LED lights.

2. **Adjusting Water Flow:** The pump features an adjustable flow switch. Locate this switch on the pump itself (it may be small and less visible) and slide it to increase or decrease the water flow rate to your preference.
3. **Maintaining Water Level:** Check the water level daily, especially in warm weather, as water will evaporate. Refill as needed to ensure the pump remains fully submerged.
4. **Turning Off:** To turn off the fountain, simply unplug the power adapter from the electrical outlet.

Maintenance

Regular maintenance will prolong the life and appearance of your fountain.

- **Cleaning:**
    - Periodically clean the fountain and pump to prevent algae buildup and mineral deposits.
    - Disconnect power before cleaning.
    - Drain the water and use a soft brush or cloth with mild soap and water to clean the surfaces. Rinse

thoroughly.
    - Clean the pump filter regularly to ensure optimal water flow. Refer to the pump's specific instructions for filter cleaning.
- **Water Quality:** Use distilled or filtered water to minimize mineral buildup and keep the fountain cleaner.
- **Winterization:**
    - Before the first frost, completely drain all water from the fountain and pump.
    - Clean the fountain and pump thoroughly.
    - Store the fountain and pump indoors in a dry, frost-free location during winter months to prevent damage from freezing water.

Troubleshooting

Problem	Possible Cause	Solution
No water flow or weak flow	• Low water level • Pump clogged or dirty • Kink in tubing • Pump flow setting too low • Power issue	• Add water to submerge pump • Clean pump and filter • Straighten tubing • Adjust pump flow switch • Check power connection and GFCI
LED lights not working	• Loose connection • Damaged LED • Power issue	• Check all connections • Contact customer support for replacement • Check power connection and GFCI
Excessive splashing	• Water level too high • Pump flow setting too high	• Remove some water • Adjust pump flow switch to a lower setting

Specifications

Brand	Teamson Home
Model Number	FT0724BRR-EU
Color	Brown
Material	Polystone
Dimensions (L x W x H)	34.75 cm x 25.73 cm x 72.39 cm (13.68" x 10.13" x 28.5")
Item Weight	10 Kilograms
Water Capacity	2.6 Liters
Voltage	220 Volts
Power Source	Corded Electric
UPC	810136544138



Image: Dimensional diagram of the fountain, indicating its height, width, and depth.

Warranty and Support

For any questions, issues, or to inquire about warranty information, please contact Teamson Home customer support. Keep your purchase receipt as proof of purchase.

While specific warranty details are not provided in this manual, most products come with a limited manufacturer's warranty covering defects in materials and workmanship. Please refer to the product packaging or the manufacturer's official website for the most up-to-date warranty policy and contact information.
For assistance, please visit the official Teamson Home website or contact their customer service department.

© 2025 Teamson Home. All rights reserved.
Model: FT0724BRR-EU