VenzBlomia 1a9153aa-b62a-453e-9d47-97bc5a19e5e7

VenzBlomia 16" Black Dusk to Dawn LED Outdoor Wall Light

Model: 1a9153aa-b62a-453e-9d47-97bc5a19e5e7

Introduction

This manual provides essential information for the safe installation, operation, and maintenance of your VenzBlomia 16" Black Dusk to Dawn LED Outdoor Wall Light. Please read these instructions thoroughly before installation and retain them for future reference.

Key Features:

- **Effortless Outdoor Illumination:** Equipped with an integrated 3000K warm light LED and a dusk-to-dawn sensor for automatic operation. This feature enhances security and energy efficiency. The sensor function can be manually overridden using the included rubber cap.
- **Contemporary Aesthetics:** Features water ripple glass that provides light transmission and opacity, diffusing light evenly without harsh glare, and complementing modern exterior decor.
- **Weather Resistance:** Designed for outdoor use with waterproof, dustproof, anti-rust, sunproof, and windproof construction, ensuring durability in various weather conditions.
- **Versatile Application:** Suitable for enhancing safety and curb appeal in areas such as porches, patios, entryways, balconies, driveways, pathways, and walkways.

Safety Information

Always follow basic safety precautions when installing or maintaining electrical products to reduce the risk of fire, electric shock, and personal injury.

- **Disconnect Power:** Before installation, servicing, or changing any components, always turn off the power at the main circuit breaker or fuse box.
- **Qualified Electrician:** If you are unsure about the installation process, consult a qualified electrician.
- **Grounding:** Ensure the fixture is properly grounded to avoid potential electrical shock.
- **Wiring:** Connect wires according to local electrical codes. Ensure all wire connections are secure.
- **Fixture Integrity:** Do not alter the fixture in any way. Any modifications may void the warranty and create safety hazards.
- **Handle with Care:** The glass components are fragile. Handle them carefully to prevent breakage.

What's in the Box

Verify that all components are present before beginning installation:

- LED Lens
- Shade
- Mounting Hardware (including bracket and wire nuts)



Image: Detailed view of the light's components, including the solid metal frame, water ripple glass, dusk to dawn sensor, and integrated LED.

Specifications

Brand	VenzBlomia
Model Number	1a9153aa-b62a-453e-9d47-97bc5a19e5e7
Color	Black

Material	Glass, Metal
Style	Modern
Light Fixture Form	Sconce
Indoor/Outdoor Usage	Outdoor
Power Source	AC
Light Source	LED (Integrated)
Number of Light Sources	1
Voltage	110 Volts (AC)
Light Color	Warm White (3000K)
Wattage	13 Watts
Brightness	1300 Lumens
Water Resistance Level	Water Resistant (IP65)
Mounting Type	Wall Mount
Certifications	ETL, UL Listed
Dimensions (L x W x H)	6 inches (L) x 6 inches (W) x 16 inches (H)
Back Plate Dimensions	4.7 inches (W) x 6.3 inches (H)

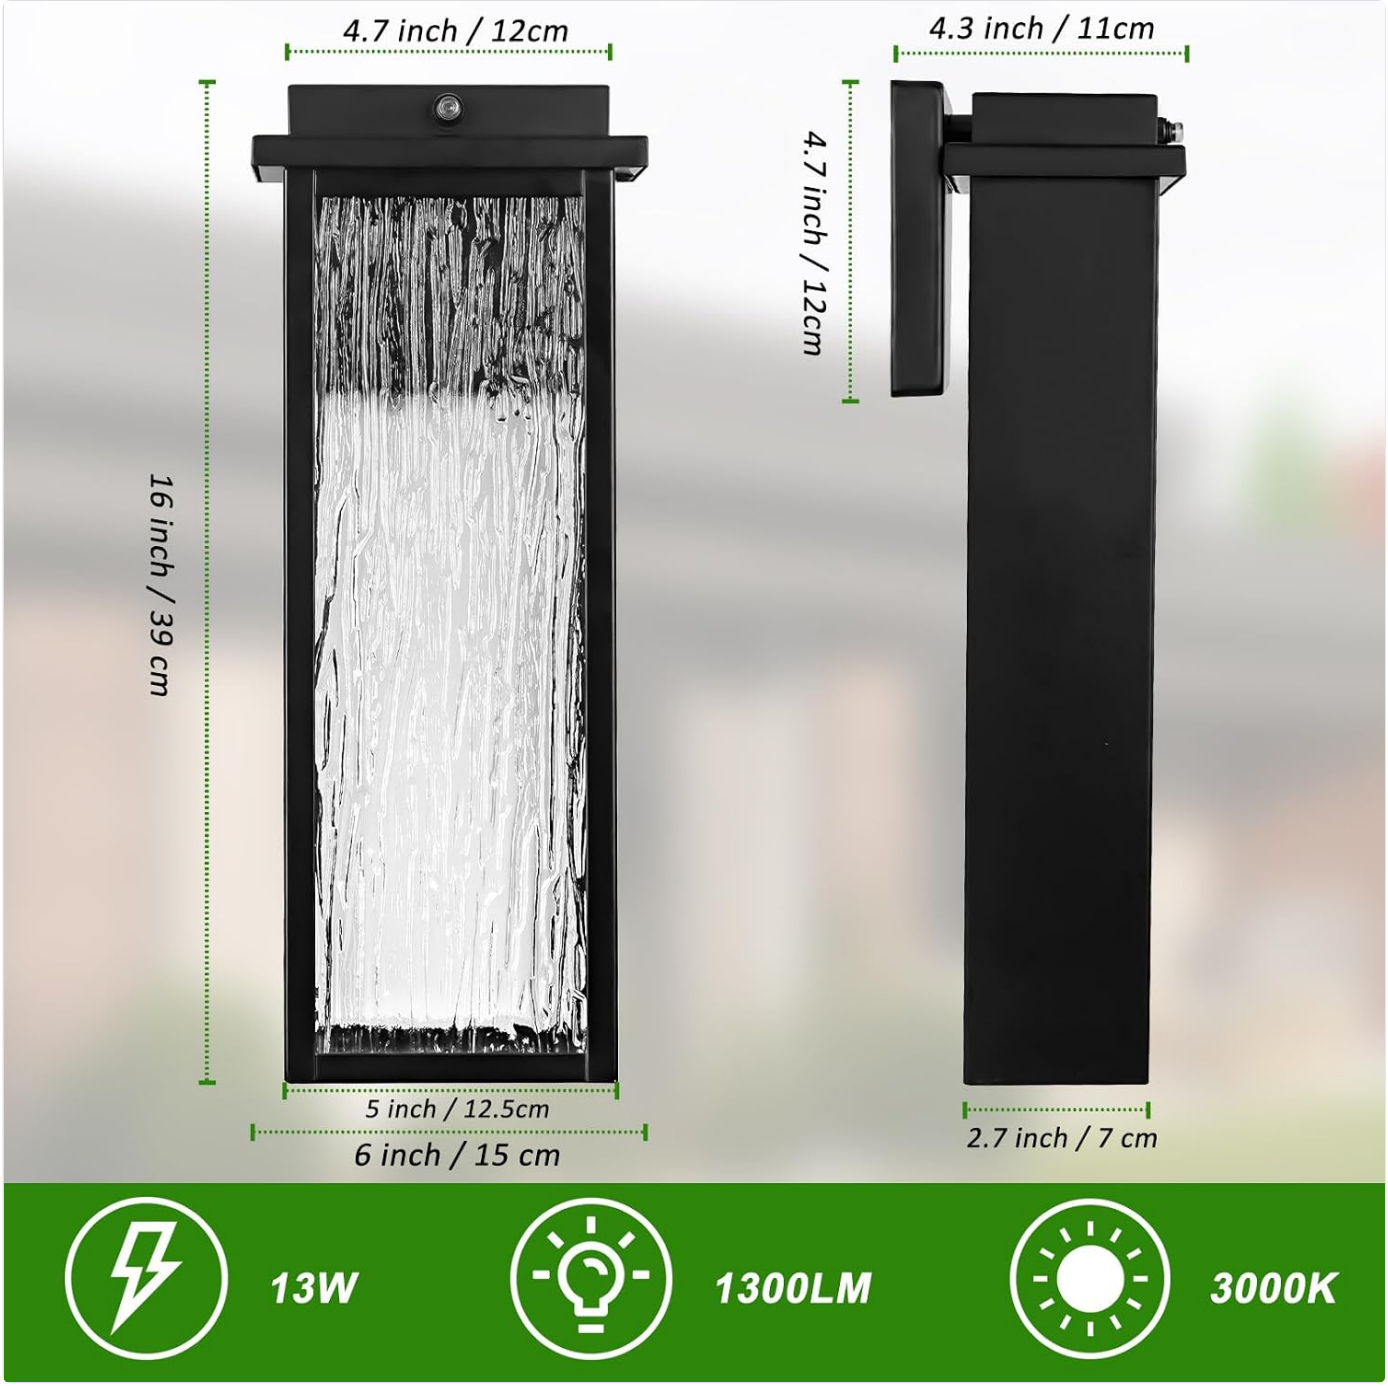


Image: Detailed dimensions of the wall light, including the fixture and back plate measurements.

Setup (Installation)

This fixture is designed for wall-mounted installation. Basic electrical knowledge is recommended. Always ensure power is disconnected before starting.

1. **Prepare the Installation Area:** Turn off power at the circuit breaker. Remove any existing fixture.
2. **Mount the Bracket:** Secure the provided mounting bracket to the junction box on your wall.
3. **Wire Connections:** Connect the fixture's wires to your household wiring. Typically, connect white to white, black to black, and ground to ground using the provided wire nuts. Ensure all connections are tight and secure.
4. **Attach the Fixture:** Carefully align the fixture with the mounting bracket and secure it in place using the provided screws.
5. **Restore Power:** Once the fixture is securely installed, restore power at the circuit breaker.

It is recommended to check the size of the patio wall mounted light before purchasing to ensure it fits your intended location.

Operating Instructions

Your VenzBlomia outdoor wall light features an integrated dusk-to-dawn sensor for automatic operation.

- **Automatic Mode:** The built-in photocell sensor will automatically turn the light ON at dusk and OFF at dawn. No manual intervention is required for this mode.
- **Manual Control:** If you prefer to control the light with a wall switch, use the provided rubber cap to cover the dusk-to-dawn sensor. This will disable the automatic function, allowing you to operate the light manually via your existing wall switch.



Image: Light automatically turns off during the day.

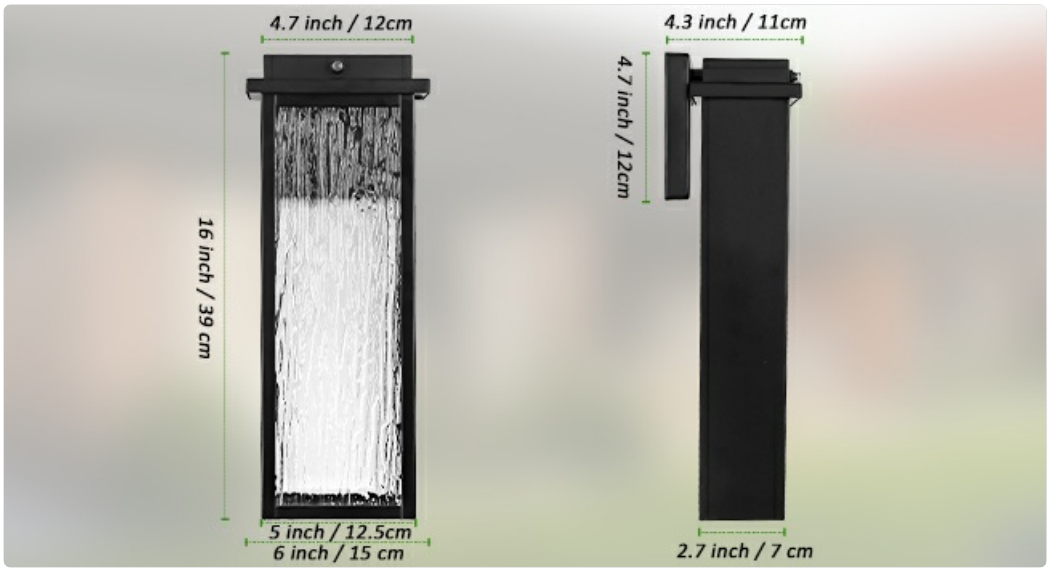


Image: Light automatically turns on at night.



Image: Built-in Dusk to Dawn Photocell with option for Auto/Manual Control using an extra cap.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your outdoor wall light.

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass.
- **Integrated LED:** This fixture uses an integrated LED light source, which is not user-replaceable. The LED has an estimated lifespan of 30,000 hours.
- **Periodic Inspection:** Periodically check all electrical connections and mounting hardware for tightness and signs of wear or damage.

Troubleshooting

If you encounter issues with your VenzBlomia outdoor wall light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on at dusk.	1. Power supply issue. 2. Sensor obstructed or covered. 3. Faulty wiring connection.	1. Check circuit breaker and wall switch. 2. Ensure the sensor is clear of obstructions and the rubber cap is removed if automatic mode is desired. 3. Verify all wire connections are secure (ensure power is off before checking).
Light stays on during the day.	1. Sensor receiving insufficient light. 2. Sensor covered by rubber cap (if manual mode is not desired).	1. Ensure the sensor is not in a shaded area or obstructed by debris. 2. Remove the rubber cap from the sensor if automatic dusk-to-dawn operation is preferred.
Light flickers or dims.	1. Loose wiring connection. 2. Inconsistent power supply.	1. Turn off power and check all wire connections for tightness. 2. Consult a qualified electrician to inspect your electrical system.

If you experience quality problems during use, please contact VenzBlomia customer service. We offer 24-hour after-sales service to assist with troubleshooting and provide solutions.

Warranty and Support

Your VenzBlomia 16" Black Dusk to Dawn LED Outdoor Wall Light comes with a**2-year after-sales service** commitment.
For any product inquiries, technical support, or warranty claims, please contact our customer service team. We are dedicated to providing 24-hour after-sales support to ensure your satisfaction.
Please refer to your purchase documentation for specific contact details or visit the official VenzBlomia store online.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question