Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY SMT65E1MUC2M1B1

ALLIMITY STT001 Voice Remote Control User Manual

Model: SMT65E1MUC2M1B1

Introduction

This manual provides comprehensive instructions for the ALLIMITY STT001 Voice Remote Control. This remote is designed to be fully functional and compatible with a wide range of Smart-Tech TV models, offering an ergonomic design for comfortable use and stable performance. Please refer to this guide for setup, operation, maintenance, and troubleshooting.
Important: Ensure your remote matches the images or model numbers provided in this manual for compatibility. The full model number of your device can typically be found on a label on the back of the device.

Product Overview

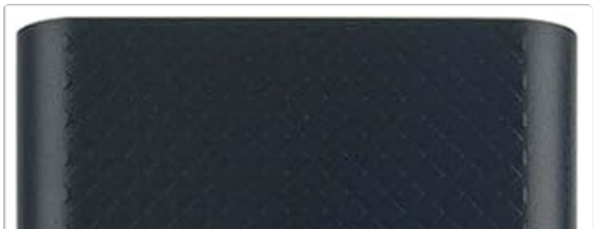




Figure 1: Front view of the ALLIMITY STT001 Voice Remote Control, showing all buttons including power, volume, channel, number pad, navigation, and dedicated app buttons for Netflix and YouTube.



Figure 2: The ALLIMITY STT001 Voice Remote Control, with an overlay indicating the voice control functionality activated by the Google Assistant button.



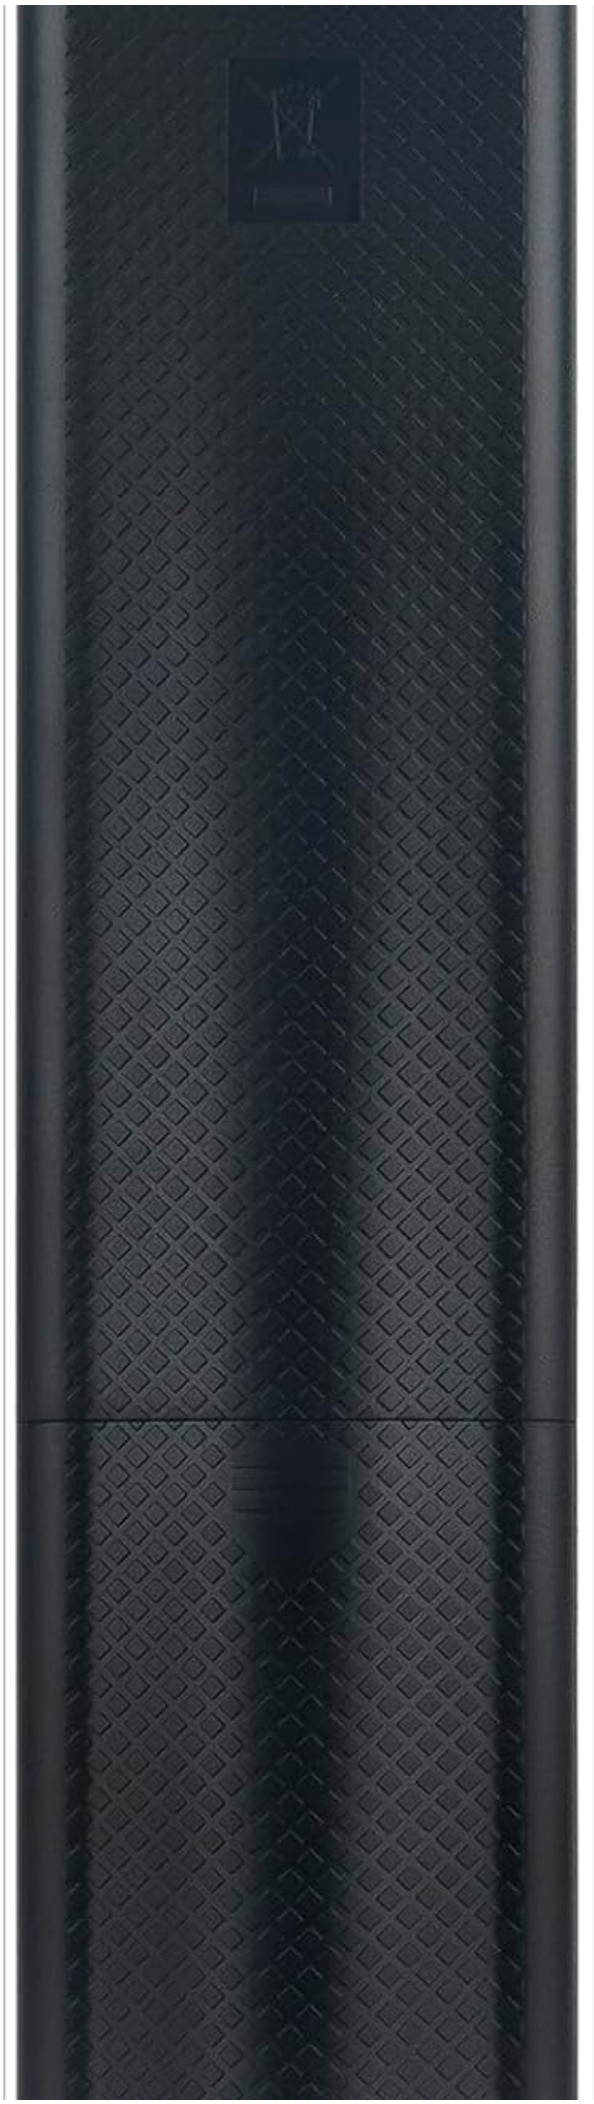




Figure 3: Back view of the ALLIMITY STT001 Voice Remote Control, showing its textured surface for improved grip.

Setup

1. Battery Installation

The ALLIMITY STT001 remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

2. Initial Use and Pairing (If Applicable)

This remote control is designed for immediate use with compatible Smart-Tech TV models without complex programming. It operates via infrared (IR) technology.

- Point the remote control directly at your Smart-Tech TV.
- Press any button (e.g., Power button) to test its functionality.
- If the remote does not respond, ensure batteries are correctly installed and have sufficient charge.
- For voice control functionality, your TV may require a one-time pairing process. Refer to your TV's user manual for specific instructions on pairing a new voice remote. Typically, this involves navigating to the TV's settings menu (e.g., Remotes & Accessories or Bluetooth settings) and following the on-screen prompts to add a new device.

Operating Instructions

The ALLIMITY STT001 remote control provides full functionality for your compatible Smart-Tech TV. Below are common button functions:

- **Power Button ( ):** Turns the TV on or off.
- **Number Pad (0-9):** Directly input channel numbers.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Mute ( ):** Mutes or unmutes the TV sound.
- **Channel Up/Down (∧ / ∨):** Changes TV channels.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Back (←):** Returns to the previous screen or menu.
- **Home ( ):** Accesses the TV's home screen or smart hub.
- **Netflix / YouTube Buttons:** Direct access to Netflix and YouTube applications.
- **Voice Control Button (Google Assistant icon):** Activates voice commands. Press and hold the button, then speak your command clearly into the remote. Release the button when finished.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **INFO:** Displays information about the current program or input.
- **EPG:** Accesses the Electronic Program Guide.

- **SUBT:** Toggles subtitles on/off.

Maintenance

Proper care will extend the life of your remote control:

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or aerosols.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While ergonomically designed, avoid dropping the remote to prevent internal damage.

Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote not compatible.	Replace batteries, ensuring correct polarity. Remove any obstructions. Verify remote compatibility with your TV model.
Voice control not working.	Remote not paired with TV. Microphone blocked. Internet connection issue (for some voice features).	Ensure remote is paired via TV settings. Check for obstructions over the microphone. Verify TV's internet connection.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote with a soft, dry cloth. Avoid spills.

Specifications

Brand	ALLIMITY
Model Number	STT001 (Compatible with SMT65E1MUC2M1B1 and others)
Product Dimensions	17 x 5 x 1 cm
Item Weight	59 Grams
Connectivity Technology	Infrared
Maximum Range	10 Meters
Special Features	Ergonomic, Voice Control

Compatible Devices	Smart-Tech TV models including SMT32N30HC4L1B1, SMT32N30HC4U1B1, SMT32S10HC4U2G1, SMT40N30FC4U1B1, SMT43F30FC4L1B1, SMT43F30UC2M1B1, SMT43N30UCC.2M1M1B1, SMT58F30UC2M1B1, SMT58N30UC2M1B1, SMT65A8PUC2M1B1, SMT50N30UC2M1B1, SMT43S10FC4U2G1, SMT43S10UC2U2G1, SMT50F.30UC203M1B1, SMT50S10UC2U2G1, SMT55F30UC2M1B1, SMT55N30UC2M1B1, SMT55S10UC2U2G1, SMT65E1MUC2M1B1, SMT65N30UC2M1B1, SMT75ESMT1MUC2M1B1, STT001, 30604611CXHUN004, 30HV1U1B1, 40N30FC4, RM-C3414, SMT32F30HC4U1B1.

Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your original purchase or contact ALLIMITY customer service directly. Specific warranty terms may vary by region and retailer.
For further assistance, please visit the ALLIMITY official website or contact their support channels.

© 2025 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DSL75D3G

More documents and user manuals: **https://manuals.plus/**