Gliztech SSDSFL006

Gliztech Canopy Fan 20", 20000mAh Portable Outdoor Ceiling Fan with Light Instruction Manual

Model: SSDSFL006

1. Introduction

This manual provides detailed instructions for the safe and efficient operation of your Gliztech 20-inch Portable Outdoor Ceiling Fan with Light. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: The Gliztech 20-inch Portable Outdoor Ceiling Fan with Light, showcasing its compact design and integrated light.

Your browser does not support the video tag.

Video 1.1: An overview of the portable canopy gazebo fan with light, demonstrating its features and use in an outdoor setting.

2. What's in the Box

Verify that all components are present and in good condition upon unpacking:

- 1 x 20000mAh Battery Powered Outdoor Fan Light
- 1 x 55CM Extension Tube Hook
- 1 x 5M Power Adapter
- 1 x Remote Control
- 1 x User Manual (this document)
- 1 x Portable Package Box



Image 2.1: All included components of the Gliztech Canopy Fan, including the fan unit, charger, remote, and extension hook.

3. Setup and Installation

The Gliztech Canopy Fan is designed for easy setup in various outdoor and indoor environments.

1. **Blade Installation:**
   Insert each fan blade into the motor slot. Ensure the correct side of the fan blade is facing up for stable installation. To remove, press down on the bottom of the blade and pull it out firmly.

   Your browser does not support the video tag.

   Video 3.1: Demonstrates how to install and remove the fan blades for the Gliztech Portable Battery Fan with Light.

2. **Activating the Device:**
   Before first use, activate the device by long-pressing the Fan/Light button on the motor for 1-2 seconds, or by charging it. If the device is not used for an extended period, it enters deep sleep mode. To reactivate, long-press the Fan/Light button for 3 seconds. The buzzer will beep 3 times, and the 4 LED battery indicators will light up.

3. **Hanging the Fan:**
   The fan includes a hook on top for direct attachment to a fixed hook or a long pole. An additional 55cm

extension hose is provided for adjusting the fan's height. Secure the extension hose to your desired length and hang the fan from the hook at the bottom of the hose.

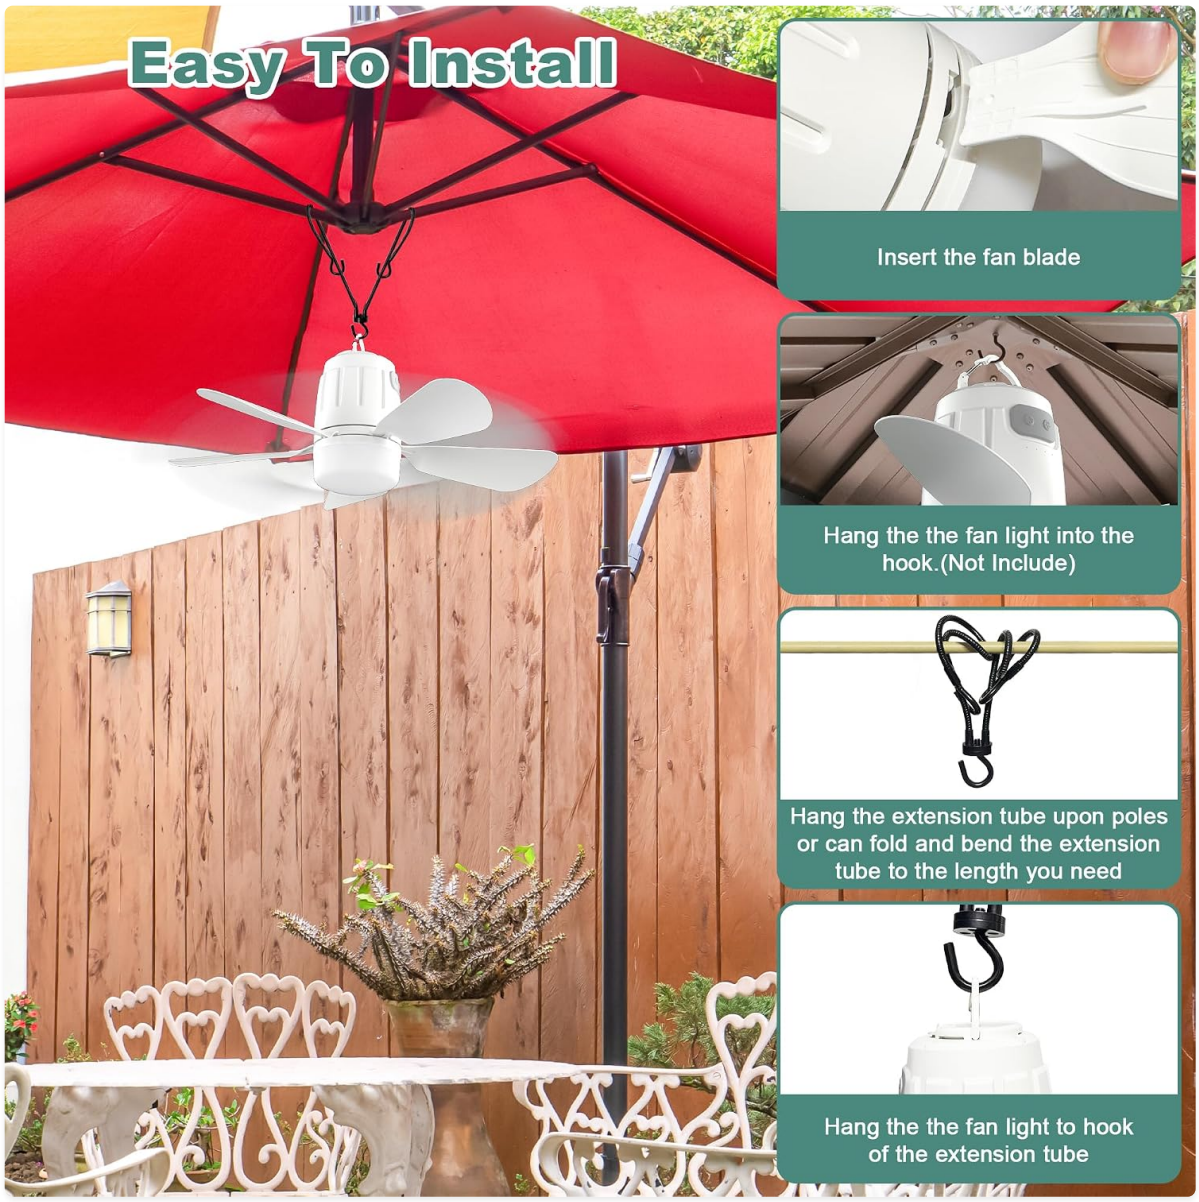


Image 3.1: Visual guide for installing the fan using the integrated hook and extension tube.

Your browser does not support the video tag.

Video 3.2: Demonstrates the hanging process of the Gliztech Canopy Gazebo Patio Fan with Battery and Remote.

4. Operating Instructions

The fan and light functions can be controlled via the remote control or buttons on the motor unit.

4.1. Remote Control Functions

The 2.4G wireless remote controller operates effectively within a 25-meter range and does not require direct line-of-sight.

- **Fan Speed:** Adjust between 4 wind speeds (Low to Fast).
- **Light Settings:**
  - **Color Temperature (CCT):** Select cool-to-warm white color temperatures (3000K to 6500K).
  - **Brightness:** Adjust light brightness from 10% to 100% by holding the light button.

- **Timer:** Set the fan/light to turn off automatically after 2, 3, or 5 hours.
- **Memory Function:** The fan remembers your last settings for future use.
- **Sound Control:** Turn the remote's beep sound on or off.



Image 4.1: The 2.4G wireless remote control, illustrating its various buttons for fan speed, light settings, and timer functions.



Image 4.2: Demonstrates the adjustable color temperature (3000K-6500K) and dimmable brightness (10%-100%) of the fan's light.

4.2. Battery Life and Charging

The integrated 20,000mAh battery powers both the fan and light for 5.5-15 hours, the fan alone for 7.5-35 hours, and the light alone for 8.5-35 hours on a full charge.

- The motor has a Type-C output charging port, allowing it to serve as an emergency power source.
- A 16.4ft charger is included, providing a full charge in 3-4 hours.



Image 4.3: Overview of the fan's battery life for various usage modes and charging capabilities.

5. Maintenance

- **Cleaning:** The fan blades are detachable for easy cleaning and transport.
- **Storage:** If not in use for a long time, set the fan light to sleep mode by long-pressing the fan/light button on the motor for 3 seconds. Store all parts and the light body in the package box in a cool, dry place to extend its lifespan.

6. Troubleshooting

Problem	Possible Cause	Solution
Fan/Light not responding to remote.	Device in deep sleep mode or remote battery isolation tab not removed.	Remove the battery isolation tab from the remote. Long-press the Fan/Light button on the motor for 1-2 seconds to activate.

Problem	Possible Cause	Solution
Fan/Light not turning on.	Low battery or device in deep sleep mode.	Charge the device using the provided power adapter. Long-press the Fan/Light button on the motor for 1-2 seconds to activate.
Fan blades are loose or unstable.	Improper blade installation.	Ensure each blade is fully inserted into its motor slot with the correct side facing up. Refer to the blade installation instructions.

7. Specifications

Feature	Detail
Brand	Gliztech
Model Name	SSDSFL006
Color	White
Product Dimensions	20"D x 20"W x 10"H
Item Weight	3.21 pounds
Power Source	Battery Powered (20000mAh Rechargeable Battery)
Wattage	2.11 watts
Fan Speeds	4 levels
Light Color Temperature	3000K-6500K (Adjustable)
Light Brightness	10%-100% (Dimmable)
Control Method	Remote Control, Push Button
Remote Control Range	25 meters (2.4G wireless)
Charging Time	3-4 hours (with 16.4ft charger)
Usage Environments	Indoor, Outdoor (Camping, Porch, Garden umbrellas, Tents, Canopies, Gazebo, Pergola, Pavilions, Patios, Garages, RVs, Greenhouses, Dog houses, Home)

8. Safety Warnings

- **Size:** This fan light measures 19.6*7.9*19.6 inches.

- **Secure Latch:** When hanging the fan, ensure the movable latch is securely fastened to prevent the hook from being damaged by the powerful torque generated when the fan motor starts at high speed.
- Do not operate the fan if any part is damaged or missing.
- Keep hands and foreign objects away from moving fan blades.

9. Warranty and Support

Gliztech offers professional and high-quality customer service. If you have any questions or require assistance, please feel free to contact us. We are dedicated to providing exceptional support.
For contact information, please refer to the product packaging or the seller's information on the purchase platform.