Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HOTPEAK PR06

HOTPEAK PR06 Mini Projector User Manual

Portable Full HD 4K Support Projector with Android 11.0, WiFi, and Bluetooth

1. Introduction

This manual provides essential instructions for the safe and efficient operation of your HOTPEAK PR06 Mini Projector. Please read this manual thoroughly before using the device and retain it for future reference.

The HOTPEAK PR06 is a compact, portable projector featuring Full HD resolution with 4K support, Android 11.0 operating system, dual-band WiFi 6, Bluetooth 5.0, automatic vertical keystone correction, and 270° rotation capability.

2. Setup

2.1 Package Contents

- HOTPEAK PR06 Mini Projector
- Remote Control
- Power Adapter
- User Manual



Image: The HOTPEAK PR06 Mini Projector, remote control, power cable, and instruction manual.

2.2 Powering On/Off

1. Connect the power adapter to the projector's power input port and then to a power outlet.
2. Press the power button on the projector or the remote control to turn the device on.
3. To turn off, press the power button again and confirm shutdown.

2.3 Initial Setup

Upon first use, the projector will guide you through initial setup steps, including language selection and network connection. Follow the on-screen prompts.

2.4 Placement and Projection

The projector features a 270° rotatable stand, allowing projection onto walls or ceilings. Position the projector on a stable surface.



Image: The projector demonstrating its 270-degree rotation capability, projecting an image onto both a wall and the ceiling.

The automatic vertical keystone correction feature will adjust the image shape to be rectangular even if the projector is not perfectly aligned. Manual focus adjustment is also available.



Image: A visual representation of automatic vertical keystone correction, showing how a distorted image is automatically squared.

2.5 Focus Adjustment

Use the manual focus wheel, typically located near the lens, to achieve a clear image. Rotate the wheel until the projected image is sharp.



Image: An illustration showing the manual focus wheel on the projector and its effect on image clarity.

3. Operating Instructions

3.1 Navigation

Use the provided remote control to navigate the projector's interface. The directional buttons, OK button, back button, and home button are primary controls.

3.2 Android 11.0 Interface

The projector runs on Android 11.0, providing access to various applications and settings. The home screen displays installed apps like Netflix, YouTube, and Google Play. You can download additional applications from the Google Play Store.



Image: The projector's home screen displaying the Android 11.0 interface with icons for Netflix, YouTube, Google Play, and other applications.

3.3 Connectivity

- **WiFi:** Connect to your wireless network via the Settings menu. The projector supports dual-band WiFi 6 for faster and more stable connections.



Image: A comparison illustrating the improved speed and stability of Dual WiFi6 connection compared to older WiFi standards.

- **Bluetooth:** Pair with Bluetooth speakers or headphones for enhanced audio. Access Bluetooth settings from the main menu.



Image: A visual representation of Bluetooth 5.0 connectivity, showing the projector wirelessly connected to external speakers for an immersive audio experience.

- **HDMI:** Connect external devices such as gaming consoles, laptops, or media players using an HDMI cable.
- **USB:** Insert USB flash drives to play media files directly from the storage device.



Image: The rear view of the projector highlighting its various input ports, including HDMI, USB, and audio output, demonstrating compatibility with multiple devices.

3.4 Screen Mirroring

The projector supports screen mirroring from smartphones and tablets. Refer to the on-screen instructions within the projector's interface for specific steps to connect your device.

3.5 Audio Output

The projector has built-in speakers. For external audio, connect Bluetooth speakers or use the audio output port with a 3.5mm audio cable.

4. Maintenance

4.1 Cleaning the Lens

Gently wipe the projector lens with a soft, lint-free cloth. Do not use abrasive cleaners or solvents.

4.2 General Care

- Keep the projector in a clean, dry environment.
- Avoid exposing the projector to extreme temperatures or direct sunlight.
- Ensure proper ventilation around the projector to prevent overheating.
- When not in use, store the projector in a protective case or cover to prevent dust accumulation.

5. Troubleshooting

Problem	Possible Cause	Solution
No image projected	Power cable loose, input source incorrect, lens cap on	Check power connection, select correct input source (HDMI/USB), remove lens cap.
Image is blurry	Focus not adjusted, projector too close/far from screen	Adjust the manual focus wheel. Ensure optimal projection distance.
No sound	Volume too low, external audio device not connected, incorrect audio output selected	Increase volume. Check Bluetooth connection or 3.5mm audio cable. Select correct audio output in settings.
WiFi/Bluetooth connectivity issues	Incorrect password, device out of range, interference	Verify password. Move projector closer to router/device. Reduce interference from other electronics.
Fan noise is loud	Projector overheating, fan obstruction	Ensure proper ventilation. Turn off the projector for a short period to cool down. Check for obstructions around air vents.
Certain apps do not work or error out (e.g., Hulu, Netflix)	App compatibility issues, outdated app version, DRM restrictions	Ensure the app is updated to the latest version. Some apps may have specific compatibility requirements or DRM that prevent them from functioning optimally on all Android devices. Try refreshing the app or reinstalling it. Consider casting from a compatible device if direct app usage fails.
Remote control not responding	Low battery, obstruction, out of range	Replace batteries. Ensure no obstructions between remote and projector. Operate remote within close proximity to the projector.

6. Specifications

Feature	Detail
Brand	HOTPEAK
Model Number	PR06
Operating System	Android 11.0
Connectivity	Dual-band WiFi 6, Bluetooth 5.0
Image Support	Full HD, 4K Decoding
Brightness	2500 Lumens
Image Contrast Ratio	8000:1
Maximum Image Size	200 Inches
Keystone Correction	Automatic Vertical
Rotation	270°
Item Weight	1.47 pounds
Product Dimensions	5.51 x 4.72 x 8.66 inches

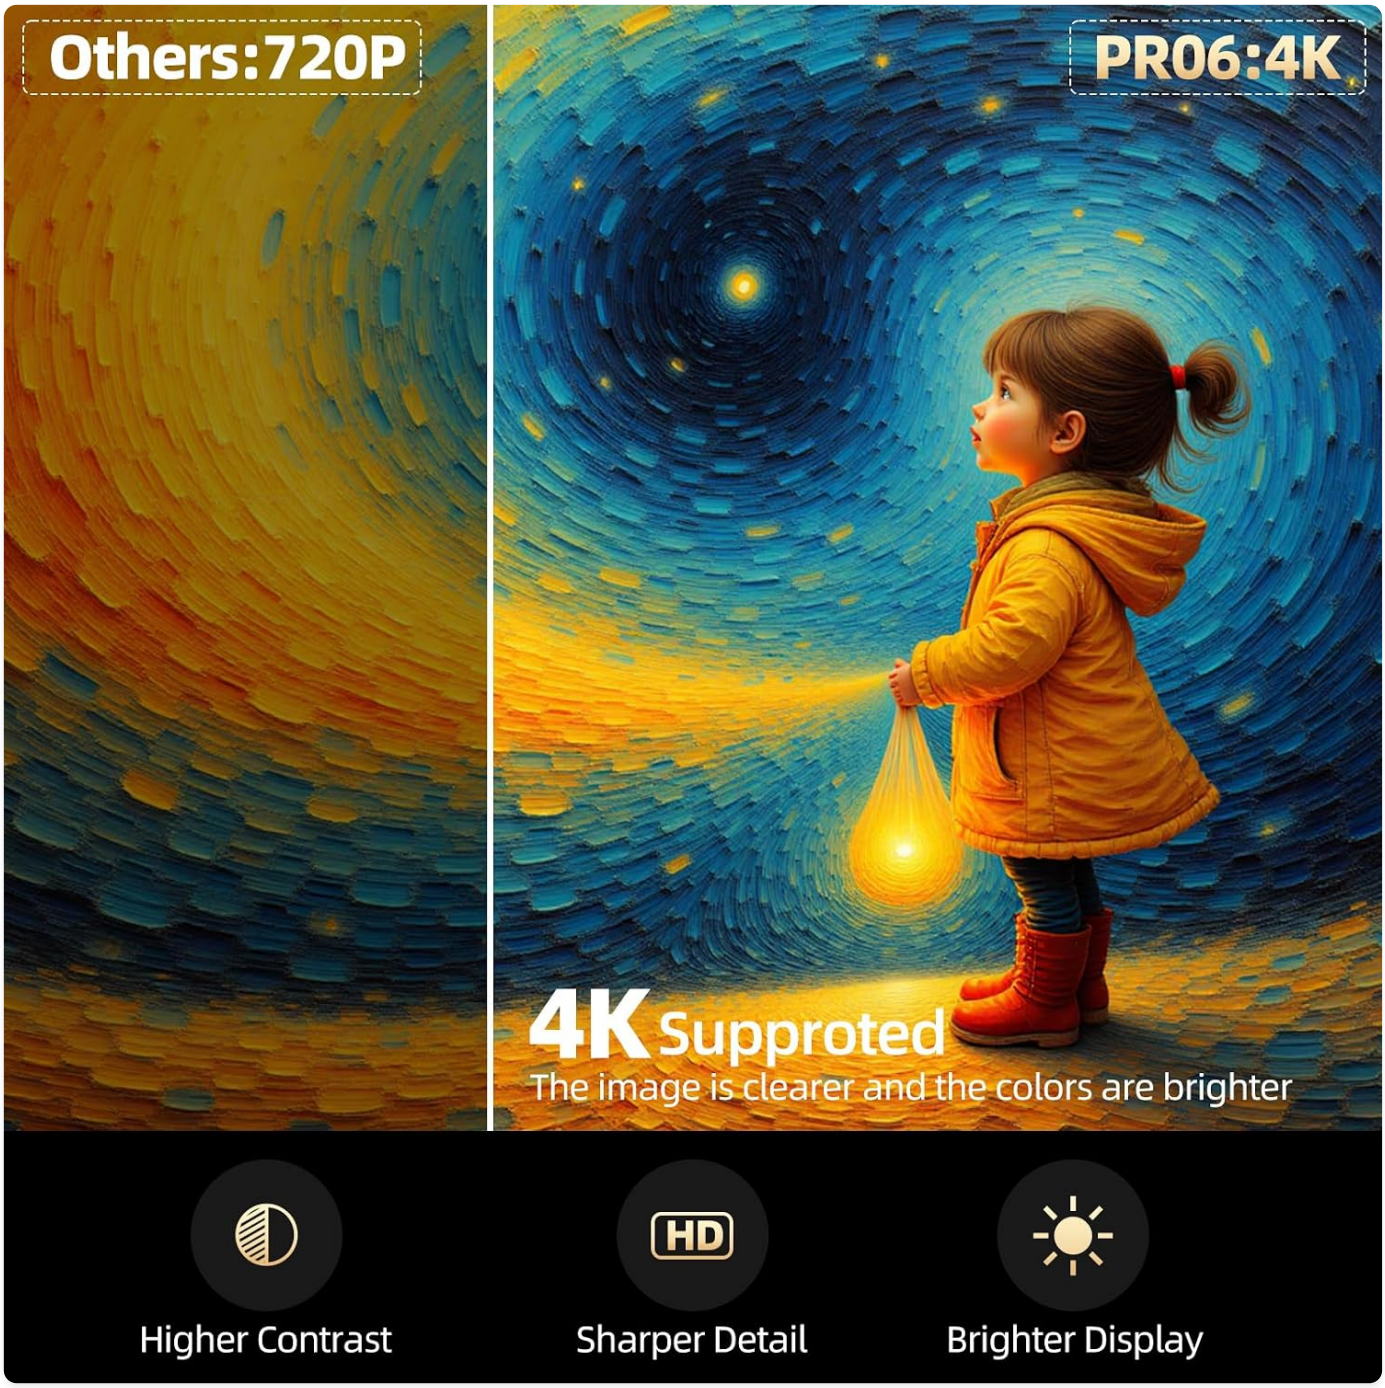


Image: A visual comparison demonstrating the enhanced clarity, detail, and brighter colors of 4K supported projection compared to 720P.

7. Warranty and Support

Your HOTPEAK PR06 Mini Projector comes with a**12-month warranty** from the date of purchase. We offer**30-day hassle-free returns and exchanges**.

For any inquiries or technical assistance, please contact our dedicated customer support team. We provide**24-hour customer support** to ensure your satisfaction.



Image: Icons representing 24-hour dedicated customer support, 30-day hassle-free returns and exchange, and 12-month warranty coverage.

Visit the official HOTPEAK store for more information and support:HOTPEAK Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DSVSP1SD

More documents and user manuals: **https://manuals.plus/**