Cesun 4 Gallon Motion Sensor Trash Can (B0DSZKRG8S)

Cesun 4 Gallon Motion Sensor Trash Can User Manual

Brand: Cesun | Model: 4 Gallon Motion Sensor Trash Can (B0DSZKRG8S)

1. Introduction and Overview

Thank you for choosing the Cesun 4 Gallon Motion Sensor Trash Can. This smart waste basket is designed for effortless, hands-free operation, making it ideal for various rooms including bathrooms, bedrooms, offices, and living rooms. Its slim and compact design allows it to fit into tight spaces, while the advanced infrared technology ensures hygienic and convenient use. The airtight lid helps to seal in odors, maintaining a fresh environment.



Figure 1: Cesun 4 Gallon Motion Sensor Trash Can (White)

2. Setup Guide

2.1 Battery Installation

The Cesun Motion Sensor Trash Can requires 2 AA batteries (not included) for operation. Locate the battery compartment, typically on the underside of the lid mechanism. Insert the batteries, ensuring correct polarity (+/-) as

indicated. Close the battery compartment securely.

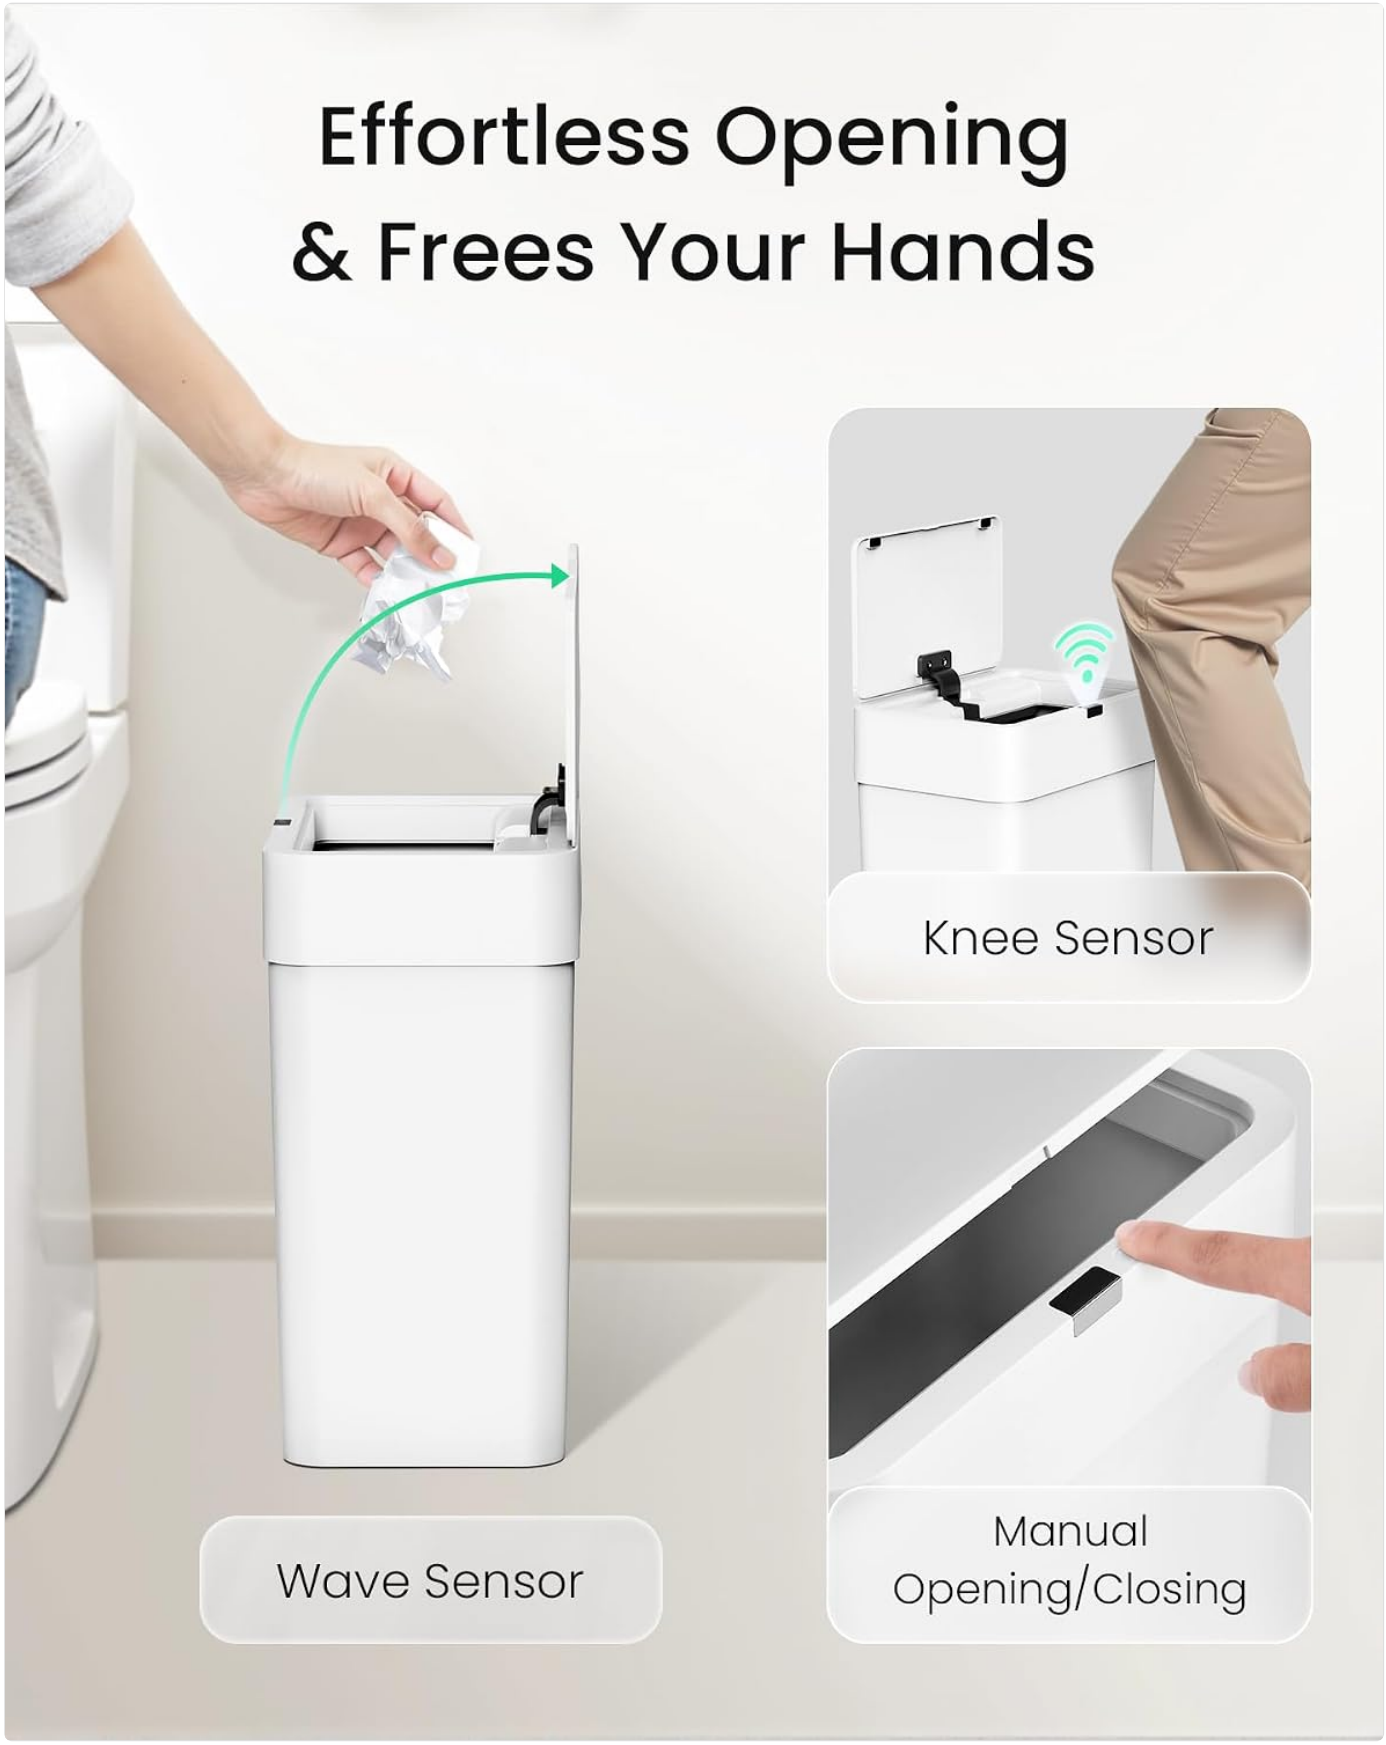


Figure 2: Quick to Use Just by Installing Batteries. Requires 2 AA Batteries (Not included).

2.2 Trash Bag Installation

To install a trash bag, lift the lid assembly from the main body of the trash can. Place the trash bag inside the can, ensuring the edges of the bag are secured by the designated trash bag fixing holes or clips around the rim. This helps to keep the bag neatly in place and prevents it from slipping down. Replace the lid assembly securely onto the trash can

body.



Figure 3: Trash Bag Fixing Holes for easy organization.

2.3 Optimal Placement

For optimal performance of the motion sensor, ensure there is a clear area of at least 11.8 inches (30cm) above the unit. Avoid placing the unit directly under cabinets or in enclosed spaces that might obstruct the sensor's detection range.



Figure 4: Slim yet spacious design, ideal for tight spaces.

3. Operating Your Smart Trash Can

3.1 Motion Sensor Operation

The trash can features advanced infrared technology for hands-free operation. Simply wave your hand or an object within 9.84 inches (25cm) of the sensor, and the lid will open instantly. The lid is designed to open quickly, typically within 0.2

seconds.



Figure 5: Effortless opening and frees your hands with wave and knee sensors.

3.2 Automatic Closing and Countdown Alert

Once your hand or object moves away from the sensing area, the green light on the sensor will start flashing. The lid will automatically close after 5 seconds of inactivity. If your hand remains in the sensing area, the green light will stay on, and the lid will remain open until your hand is removed.



Figure 6: Confidence in Use: 0.2s Instant Open, 5s Stay Open for 5s, Touch Free operation.

3.3 Manual Operation

For manual control, you can press the button located on the lid. Pressing the button will open the lid, and pressing it again will close it. This is useful for extended periods of use or when you prefer manual control.

3.4 Official Product Video

Your browser does not support the video tag.

Video 1: This official video from Cesun USA demonstrates the automatic opening and closing features of the 4 Gallon Motion Sensor Trash Can with Lid, showcasing its functionality in a home environment.

4. Care and Maintenance

To ensure the longevity and optimal performance of your Cesun trash can, follow these maintenance guidelines:

- **Cleaning:** Gently clean the sensor with a dry, soft cloth to ensure proper functionality. Avoid using abrasive cleaners or harsh chemicals.
- **Water Exposure:** The trash can is designed to be waterproof with an IPX5 rating, offering protection against splashes. However, avoid prolonged exposure to water or submerging the unit to prevent damage to electronic components.
- **Battery Replacement:** Replace batteries when the sensor's response becomes slow or inconsistent. Always use 2 AA alkaline batteries for best performance.



Figure 7: The sealed lid helps to keep air fresh by containing odors.

5. Troubleshooting Guide

If you encounter issues with your Cesun Motion Sensor Trash Can, please refer to the following common problems and solutions:

Problem	Solution

Problem	Solution
Touchless Motion Sensor Not Working?	**Check the Batteries:** ✓ Ensure batteries are installed correctly. ✓ Replace any low-power batteries. **Blue Light Flashing:** ✗ Avoid using the sensor when the blue light is flashing, as the lid is closing. ✓ Wait for the blue light to stop flashing and the lid to fully close before using the sensor again. **Manual Operation Prohibited:** ✗ Do not open or close the lid manually when the unit is powered on. ✓ If manually closed accidentally, allow the sensing system to reset before using it again. **Placement:** ✗ Do not place the unit in or under a cabinet. ✓ Keep a clear area of 11.8 inches (30cm) above the unit. **Environment:** ✗ Avoid prolonged exposure of the trash can to water. ✓ Gently clean the sensor with a dry cloth to ensure proper functionality.

6. Product Specifications

Feature	Detail
Brand	Cesun
Model	4 Gallon Motion Sensor Trash Can
Capacity	4 Gallons (approx. 15 Liters)
Color	White
Material	Plastic (PP & ABS)
Opening Mechanism	Motion-Sensor, Manual Button
Infrared Sensing Distance	9.84 inches (25cm)
Power Source	2 AA Batteries (not included)
Special Features	Quiet Close, Motion Sensor, Odor Seal, IPX5 Waterproof
Product Dimensions	10.24 x 7.08 x 14.57 inches
Weight	2.71 Pounds
Recommended Uses	Indoor (Kitchen, Bathroom, Bedroom, Home Office)

7. Warranty and Support

Specific warranty details for the Cesun 4 Gallon Motion Sensor Trash Can are not provided in this manual. For warranty information, technical support, or any product-related inquiries, please contact Cesun customer service directly through their official website or the retailer from whom the product was purchased. Please retain your proof of purchase for any warranty claims.

© 2025 Cesun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question