Doohoeek Surface Pro 11/10/9/8/X 13 Inch Keyboard

Doohoeek Surface Pro 13-inch Bluetooth Keyboard User Manual

Model: Surface Pro 11/10/9/8/X 13 Inch Keyboard | Brand: Doohoeek

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Doohoeek Bluetooth Keyboard for Surface Pro 13-inch devices. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

Image: The Doohoeek Bluetooth Keyboard shown attached to a Surface Pro tablet, illustrating its integrated design.

The Doohoeek Bluetooth Keyboard is designed to enhance your Surface Pro experience with its integrated touchpad, pen slot, and backlit keys. It connects wirelessly via Bluetooth and is compatible with Surface

Pro 11, 10, 9, 8, and X 13-inch models.

2. SETUP

2.1 Package Contents

- Doohoeek Bluetooth Keyboard
- USB-C Charging Cable
- User Manual (this document)

2.2 Compatibility

This keyboard is exclusively compatible with 13-inch Surface Pro devices, including Surface Pro 11, Surface Pro 10, Surface Pro 9, Surface Pro 8, and Surface Pro X. It is not compatible with other Surface models or tablet sizes.

Compatible

With

- Surface Pro 11
- Surface Pro 10
- Surface Pro 9
- Surface Pro 8
- Surface Pro X

Image: A visual representation confirming the keyboard's compatibility with Surface Pro 11, 10, 9, 8, and X 13-inch models.

2.3 Attaching the Keyboard

1. Align the magnetic connector of the keyboard with the corresponding port on your Surface Pro device.
2. The keyboard will snap into place magnetically, forming a secure connection.

Image: A close-up view demonstrating the magnetic connection between the keyboard and the Surface Pro tablet.

2.4 Charging the Keyboard

The keyboard has an internal rechargeable battery. Use the provided USB-C cable to charge it.

- Connect the USB-C end of the cable to the charging port on the keyboard.
- Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
- The charging indicator light will illuminate during charging and turn off when fully charged.

Note: The keyboard charges via USB-C cable only and does not support official smart charging from the tablet. The pen slot does not charge pens.

Superior Rechargeable Battery

2-3h
Charging Time

650mAh

300h
Standby Time
(Without Lighting)

Image: A USB-C cable plugged into the charging port of the keyboard, indicating the charging method.

2.5 Bluetooth Pairing

To connect the keyboard to your Surface Pro via Bluetooth:

1. Ensure the keyboard is charged and powered on.
2. Press and hold the **Fn** key and the **C** key simultaneously for 3 seconds to enter Bluetooth pairing mode. The Bluetooth indicator light will flash.
3. On your Surface Pro, go to **Settings** > **Bluetooth & devices**.
4. Select **Add device** > **Bluetooth**.
5. Select "Doohoeek Keyboard" (or similar name) from the list of available devices.
6. Follow any on-screen prompts to complete the pairing process. The indicator light on the keyboard will stop flashing once connected.

3. OPERATING INSTRUCTIONS

3.1 Keyboard Functions

The keyboard features a standard QWERTY layout with additional function keys. Many keys have secondary functions accessed by holding the **Fn** key and pressing the desired key.

3.2 Trackpad Usage

The integrated multi-touch trackpad supports various Windows 11 gestures for efficient navigation.

- **Single Finger Tap:** Left-click.
- **Two Finger Tap:** Right-click.
- **Two Finger Scroll:** Scroll up/down or left/right.
- **Pinch to Zoom:** Zoom in or out.
- **Three Finger Swipe Up:** Open Task View.
- **Three Finger Swipe Down:** Show Desktop.
- **Three Finger Swipe Left/Right:** Switch between open applications.

The trackpad also features palm rejection technology to prevent accidental inputs while typing. To manually lock or unlock the trackpad, press **Fn** + **Space bar**.

Image: Demonstrates various multi-touch gestures for the trackpad and highlights the palm rejection feature during typing.

3.3 Backlight Control

The keyboard features adjustable backlighting with 7 color options and 3 brightness levels.

- **Adjust Brightness:** Press the **backlight key** (often depicted as a sun icon) to cycle through brightness levels (30%, 70%, 100%) or turn off the backlight.
- **Change Color:** Press **Fn** + **backlight key** to cycle through the 7 available backlight colors.

Image: Shows the keyboard's backlit keys with various color options and adjustable brightness settings.

3.4 Pen Slot

The keyboard includes a dedicated slot for securely holding your Surface Pen. This slot provides convenient storage and easy access to your pen.

3.5 Ergonomic Lift

The keyboard can be slightly angled for a more comfortable typing experience. Gently lift the top edge of the keyboard towards the Surface Pro screen until it magnetically secures into an elevated position.

Image: Illustrates how the keyboard can be angled for an ergonomic typing position.

4. MAINTENANCE

4.1 Cleaning

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keyboard surface.
- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture.
- For cleaning between keys, use compressed air or a soft brush.

4.2 Battery Care

- Charge the keyboard fully before first use.
- Avoid completely draining the battery frequently to prolong its lifespan.
- If storing the keyboard for an extended period, charge it to approximately 50% and store in a cool, dry place.

4.3 Storage

When not in use, attach the keyboard to your Surface Pro to protect the keys and screen. Store the device in a clean, dry environment away from extreme temperatures.

---

5. TROUBLESHOOTING

5.1 Keyboard Not Connecting via Bluetooth

- Ensure the keyboard is charged and powered on.
- Verify Bluetooth is enabled on your Surface Pro.
- Re-enter pairing mode on the keyboard (Fn + C for 3 seconds) and attempt to pair again from your Surface Pro's Bluetooth settings.
- Try forgetting the device in your Surface Pro's Bluetooth settings and re-pairing.
- Restart both your Surface Pro and the keyboard.

5.2 Keys Not Responding

- Check if the keyboard is properly connected via Bluetooth.
- Ensure the keyboard battery has sufficient charge.
- If specific keys are not working, inspect for debris or damage.

5.3 Trackpad Not Working

- Ensure the trackpad is not locked (press Fn + Space bar to toggle).
- Verify Bluetooth connection.
- Restart the keyboard and Surface Pro.

5.4 Backlight Not Functioning

- Ensure the keyboard is powered on and charged.
- Press the backlight key to cycle through brightness levels.
- Press Fn + backlight key to cycle through colors.

5.5 Resetting the Keyboard

If you experience persistent issues, you can reset the keyboard to its default settings. Press down the first key and the last key on the top row of the keyboard simultaneously until the indicator light flickers.

---

6. SPECIFICATIONS

Feature	Specification
Compatible Devices	Surface Pro 13-inch (11, 10, 9, 8, X)
Connectivity Technology	Bluetooth 5.3
Keyboard Description	QWERTY with Touchpad & Pen Slot
Special Features	Backlit (7 colors, 3 levels), Lightweight, Portable, Rechargeable, Trackpad with Palm Rejection
Power Source	Battery Powered (650mAh)
Charging Time	2-3 hours
Standby Time (without lighting)	300 hours
Item Weight	1.19 pounds
Package Dimensions	11.61 x 8.74 x 1.18 inches
Included Components	USB Cable

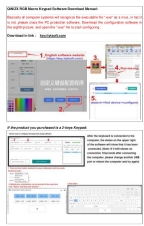## 7. WARRANTY AND SUPPORT

7.1 Warranty Information

For specific warranty details, please refer to the warranty card included with your product or visit the official Doohoeek website. Keep your purchase receipt as proof of purchase for warranty claims.
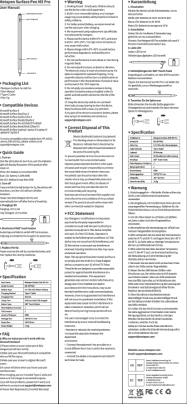
7.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Doohoeek customer support through the retailer's platform or the official brand website. Provide your product model and a detailed description of the issue for efficient support.

Related Documents - Surface Pro 11/10/9/8/X 13 Inch Keyboard

[QINIZX RGB Macro Keypad Software Download and Configuration Guide](#)
A comprehensive guide to downloading and configuring the QINIZX RGB Macro Keypad software for Windows and Mac. Learn how to set up custom keybinds, macros, and LED lighting for your gaming or productivity needs.

XP-PEN Driver **User Manual**	[XP-PEN Graphics Tablet Driver User Manual - Setup and Features](#) A comprehensive user manual for XP-PEN graphics tablet drivers, detailing installation, configuration of work area, pen settings, express keys, roller/touch functions, and display adjustments. Supports various XP-PEN models including Star, Deco, Innovator, and Artist series.
Sandberg Wireless Numeric Keypad Pro 630-09	[Sandberg Wireless Numeric Keypad Pro (630-09) - Specifications and Features](#) Explore the Sandberg Wireless Numeric Keypad Pro (model 630-09). This product sheet details its dual wireless connectivity (2.4 GHz & Bluetooth), 36 keys, compatibility with Windows 10/11, dimensions, and packaging.
Metapen Surface Pen M3 Pro User Manual	[Metapen Surface Pen M3 Pro User Manual	Stylus Pen for Microsoft Surface](#) Detailed user manual for the Metapen Surface Pen M3 Pro, including setup, specifications, FAQs, and warnings for compatible Microsoft Surface devices. Learn how to use and maintain your digital stylus.
Microsoft **Surface** Surface Pro 4 사용 설명서 Windows 10 기반	[Microsoft Surface Pro 4 User Manual](#) A comprehensive user guide for the Microsoft Surface Pro 4, covering setup, features, software, and troubleshooting.
7-Inch Touch Monitor	[7-Inch Touch Monitor Quick Start Guide](#) A quick start guide for the 7-Inch Touch Monitor, detailing its features, specifications, installation, and troubleshooting.