Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FPD CG75-C3

FPD 75 Inch Smart TV (CG75-C3) Instruction Manual

Brand: FPD | Model: CG75-C3

Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new FPD 75 Inch Smart TV (Model CG75-C3). Please read these instructions carefully before using your television and retain them for future reference. This 4K LED Google TV offers a stunning visual experience with advanced features like HDR 10, Dolby Vision, Dolby Atmos, MEMC, and a convenient voice assistant remote.

What's in the Box

Carefully unpack your FPD Smart TV and ensure all the following components are present:

- Smart TV
- Power Cable
- AV Adapter Cable
- Base Mounting Accessories
- Remote Control and AAA Batteries x 2



Image: All included components for the FPD 75 Inch Smart TV, laid out on a textured surface.

Your browser does not support the video tag.

Video: A quick unboxing and overview of the FPD 4K Smart Google TV and its accessories.

Setup

1. Attaching the TV Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the base mounting accessories (legs) with the corresponding slots on the bottom of the TV.
3. Secure each leg using the provided screws and a screwdriver. Ensure they are firmly attached.



Image: A person using a screwdriver to attach one of the stand legs to the FPD Smart TV.

2. Connecting Power and Cables

1. Connect the power cable to the TV's power input and then to a wall outlet.
2. If using external devices (e.g., cable box, gaming console), connect them to the HDMI ports using HDMI cables. The TV has 3 HDMI ports.
3. For older devices, use the provided AV Adapter Cable to connect to the AV-IN port.

3. Initial Power-On and Google TV Setup

1. Insert the 2 AAA batteries into the remote control.
2. Press the power button on the remote or on the TV itself to turn it on.
3. Follow the on-screen instructions to set up your Google TV. This includes connecting to your Wi-Fi network and signing in with your Google account to access apps and personalized recommendations.
4. Pair the voice remote control by pressing the 'HOME' and 'BACK' buttons simultaneously for 3 seconds as prompted on screen.

Your browser does not support the video tag.

Video: A demonstration of the FPD 65 inch TV setup process, including unboxing, stand assembly, and initial power-on with Google TV interface.

Operating Your FPD Smart TV

Google TV Smart OS

Your FPD Smart TV runs on the Google TV operating system, providing a personalized and intuitive user experience. Access pre-installed apps like Netflix and YouTube, or download more from Google Play. The interface organizes content based on your viewing habits and subscriptions.

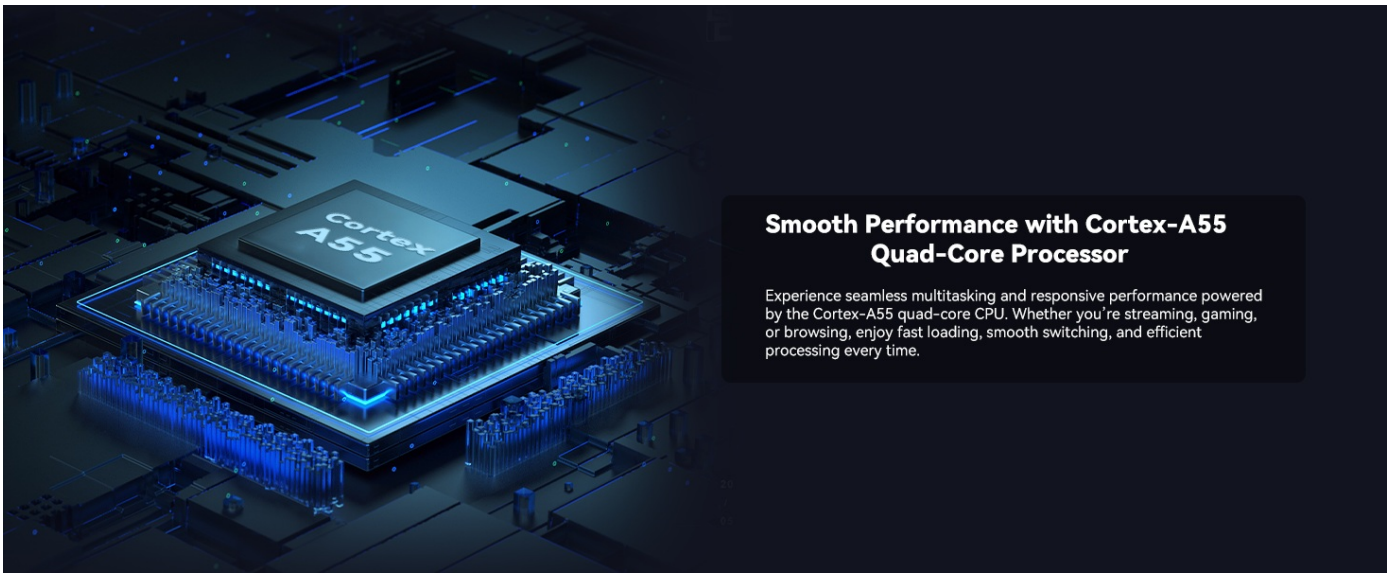


Image: The Google TV home screen displaying a wide array of streaming applications and personalized content suggestions.

Voice Remote Control

The included voice remote allows for easy navigation and content search using voice commands. Simply press the dedicated voice assistant button and speak your command (e.g., "What's the weather today?" or "Open Netflix").

Google Cast (Chromecast Built-in)

Effortlessly stream movies, shows, and music from your phone, tablet, or computer directly to your TV using the built-in Google Cast feature. Ensure your device and TV are connected to the same Wi-Fi network.

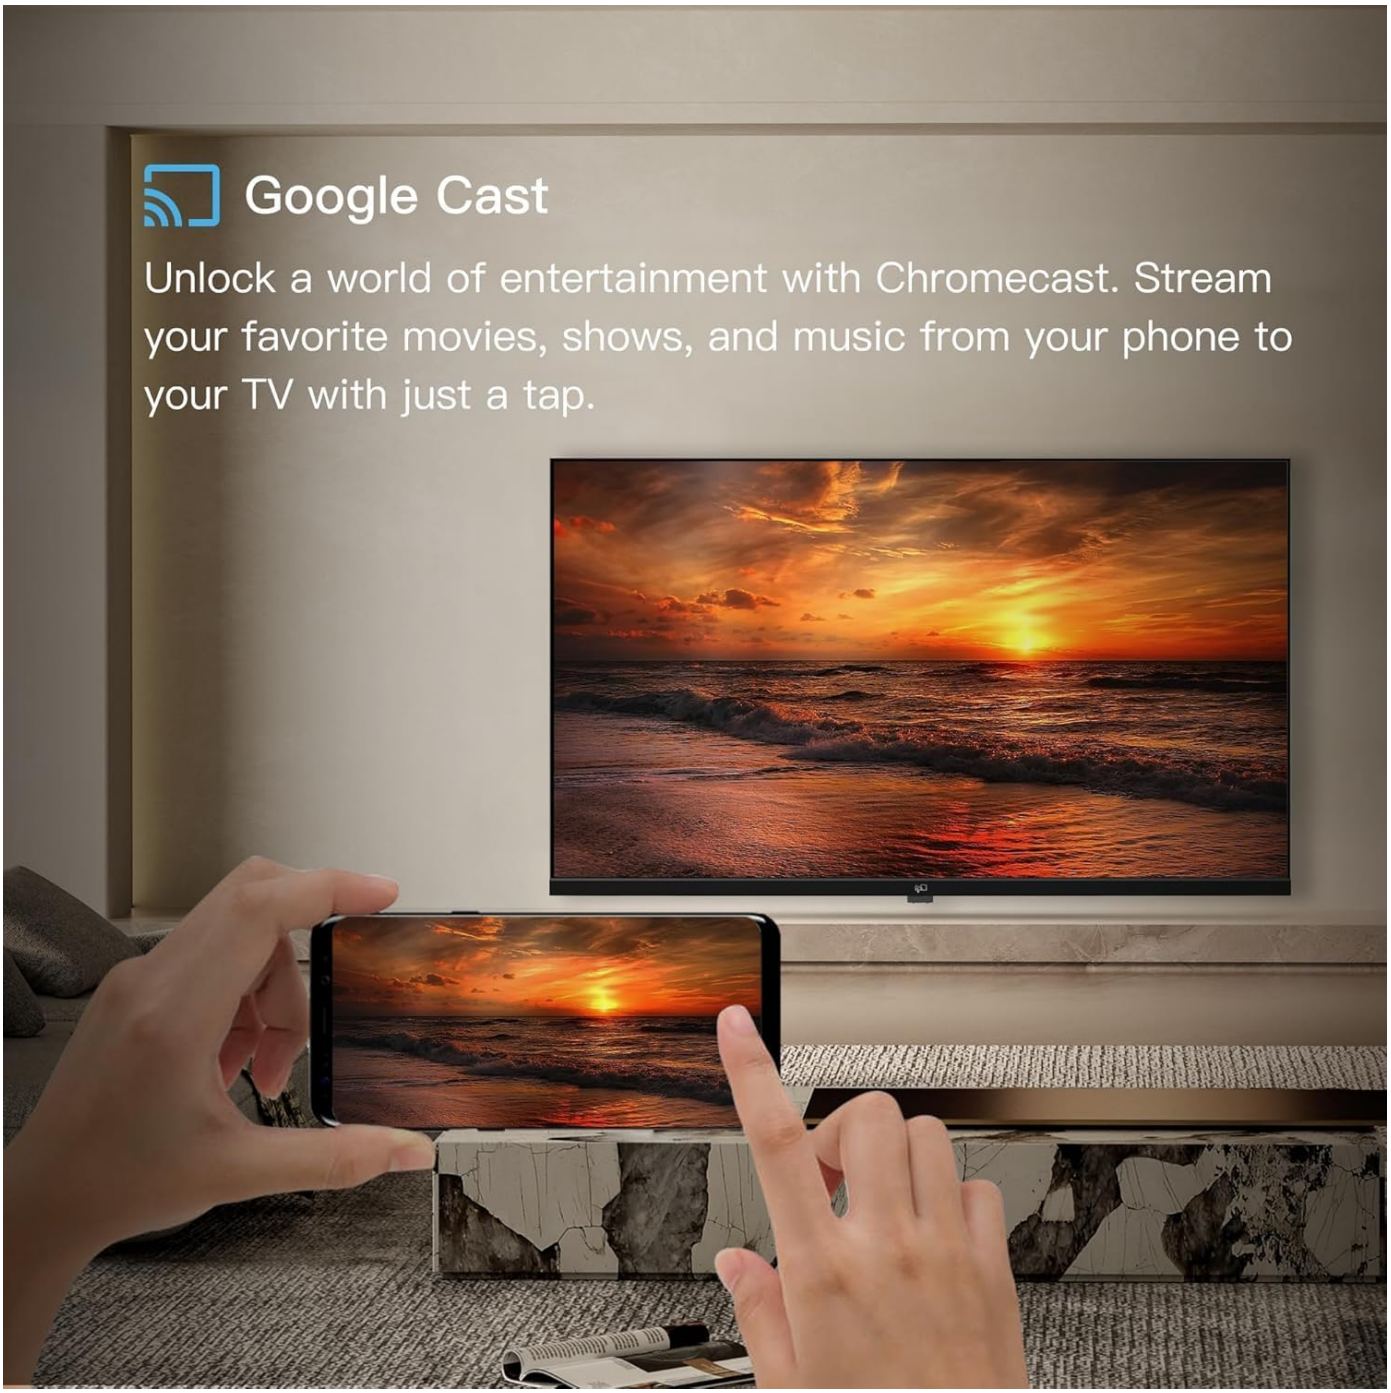


Image: A person casting content from a smartphone to the FPD Smart TV, demonstrating the Google Cast feature.

Key Features

4K UHD & HDR 10

Experience crystal-clear visuals with 4K UHD resolution, offering four times the detail of Full HD. HDR 10 technology enhances contrast and color accuracy, delivering vibrant and lifelike picture quality with richer color details.



Image: A scenic view of a lighthouse and ocean on the FPD Smart TV, illustrating the immersive 4K UHD, Dolby Vision, and HDR 10 visual experience.

Dolby Vision and Dolby Atmos

This TV is compatible with Dolby Vision for exceptional HDR performance, providing brighter and more detailed visuals. Dolby Atmos delivers an immersive audio experience, creating a surround sound effect that draws you into the action.



Image: A dynamic image of a large ocean wave on the FPD Smart TV, highlighting the immersive Dolby Atmos audio experience.

MEMC (Motion Estimation and Motion Compensation)

MEMC technology ensures smooth display performance in fast-moving scenes, reducing motion blur for clearer visuals in high-speed action, sports, and gaming.



Image: A motocross rider on the FPD Smart TV, showcasing the smooth motion provided by MEMC technology.

ALLM (Auto Low Latency Mode)

For gamers, ALLM automatically switches the TV to a low latency mode when gaming content is detected, ensuring smoother visuals and ultra-low input lag for a superior gaming experience.



Image: A futuristic spaceship game scene on the FPD Smart TV, illustrating the benefits of Auto Low Latency Mode (ALLM) for gaming.

Maintenance

Cleaning the Screen

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

Cleaning the TV Body

Use a soft, dry cloth to wipe the exterior of the TV. Avoid using abrasive cleaners or solvents that could damage the finish.

Ventilation

Ensure the TV's ventilation openings are not blocked. Proper airflow is crucial to prevent overheating and maintain optimal performance.

Troubleshooting

If you encounter issues with your FPD Smart TV, refer to the following common solutions:

- **No Power:** Check if the power cable is securely connected to both the TV and the wall outlet. Ensure the outlet is functional.
- **No Picture/Sound:** Verify that the correct input source is selected. Check all cable connections (HDMI, AV) for looseness.
- **Remote Not Working:** Replace the AAA batteries in the remote. Ensure there are no obstructions between the remote and the TV. Re-pair the remote if necessary (see Setup section).
- **Network Connection Issues:** Check your Wi-Fi router and ensure it is working correctly. Try restarting both the router and the TV.
- **Picture Quality Issues:** Adjust picture settings (brightness, contrast, color) in the TV's menu. Ensure your content source is high-quality (e.g., 4K content for 4K display).

If the problem persists, please contact FPD Customer Support.

Specifications

Feature	Detail
Screen Size	75 Inches
Brand	FPD
Display Technology	LCD
Resolution	4K
Refresh Rate	60 Hz (Native), 120 Hz (Display Refresh Rate in Hertz)
Operating System	Google TV
Special Features	Chromecast, Voice Assistant Remote
HDR Format Supported	HDR 10, Dolby Vision
Motion Enhancement Technology	MEMC
Audio	Dolby Atmos, 2 Audio Channels
Connectivity Technology	Bluetooth, HDMI (3 ports), RF, USB (2 ports), Wi-Fi
Product Dimensions	14"D x 65.7"W x 39.7"H
Item Weight	64.46 Pounds
VESA Mount Standard	500 x 300 mm

Warranty and Support

Warranty Information

Your FPD 75 Inch Smart TV (CG75-C3) comes with a**1 Year Manufacturer's Limited Warranty**. Please retain your proof of purchase for warranty claims.

Customer Support

Our dedicated customer service team is always ready to assist with any issues or questions you may have. Feel free to contact us at any time for support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DT5SWCZH

More documents and user manuals: **https://manuals.plus/**