e-vibra G15

e-vibra Potty Training Watch User Manual

Model: G15

Introduction

This manual provides comprehensive instructions for the e-vibra Potty Training Watch, Model G15. This water-resistant, silent vibrating watch is designed to serve as a discreet and convenient reminder for various daily tasks, including potty training, medication reminders, and maintaining a consistent schedule. Please read this manual thoroughly to ensure proper use and maintenance of your device.



Image: The e-vibra Potty Training Watch in grey, displaying the time 8:59 AM. This image shows the watch's sleek design and digital display.



Image: The e-vibra Potty Training Watch in grey, laid flat on a dark surface, providing a full view of the watch face, strap, and buckle.

Key Features

- **Timer Function:** Preset repeat interval timers (1, 5, 10, 15, 20, 30, 45, 60, 90, 120 minutes, or 3 hours) with auto-repeating vibration for scheduled reminders.

- **Multiple Alarm Settings:** Set up to 15 individual vibrating alarms, which do not need to be reset daily.
- **Strong Silent Vibration:** Provides discreet reminders without disturbing others, ideal for potty training, medication, water intake, or wake-up calls.
- **Safety Tested Design:** Features a soft-silicone wristband designed to fit wrists approximately 4 inches (10.16 cm) to 7.4 inches (18.8 cm).
- **Rechargeable & Water Resistant:** Equipped with a Type C charging port. A full charge lasts 6-30 days depending on usage. The watch is water resistant, suitable for hand washing and light water play.
- **Power-Off Memory:** Retains all alarm settings even after the device powers off, eliminating the need for re-configuration.

Setup

Initial Charging

Before first use, fully charge the watch. Connect the provided Type C charging cable to the watch's charging port and plug the other end into a standard USB power adapter or computer USB port. A full charge typically takes a few hours. The battery indicator on the watch will show charging status.

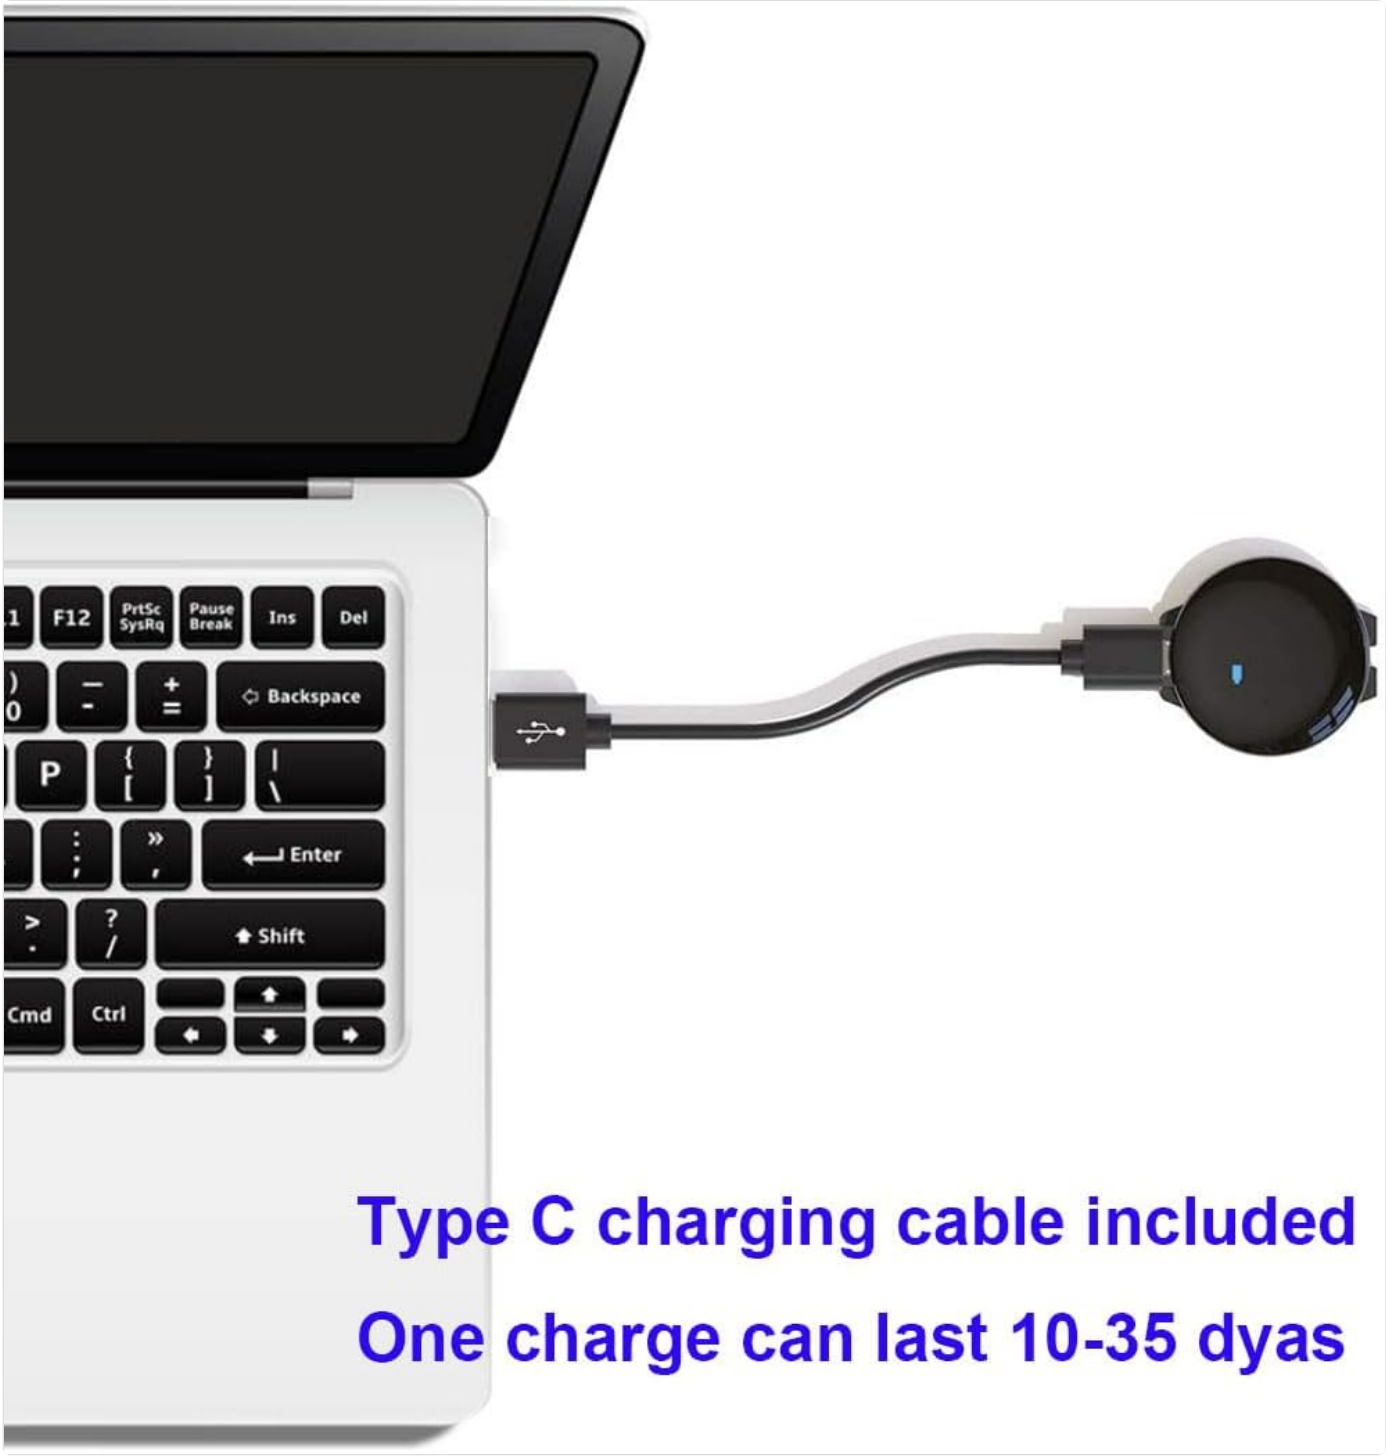


Image: The e-vibra Potty Training Watch being charged via its Type C cable connected to a laptop. This illustrates the charging method.

Wearing the Watch

Adjust the soft-silicone wristband to a comfortable fit on your wrist. The watch is designed to fit wrists between approximately 4 inches (10.16 cm) and 7.4 inches (18.8 cm) in circumference.

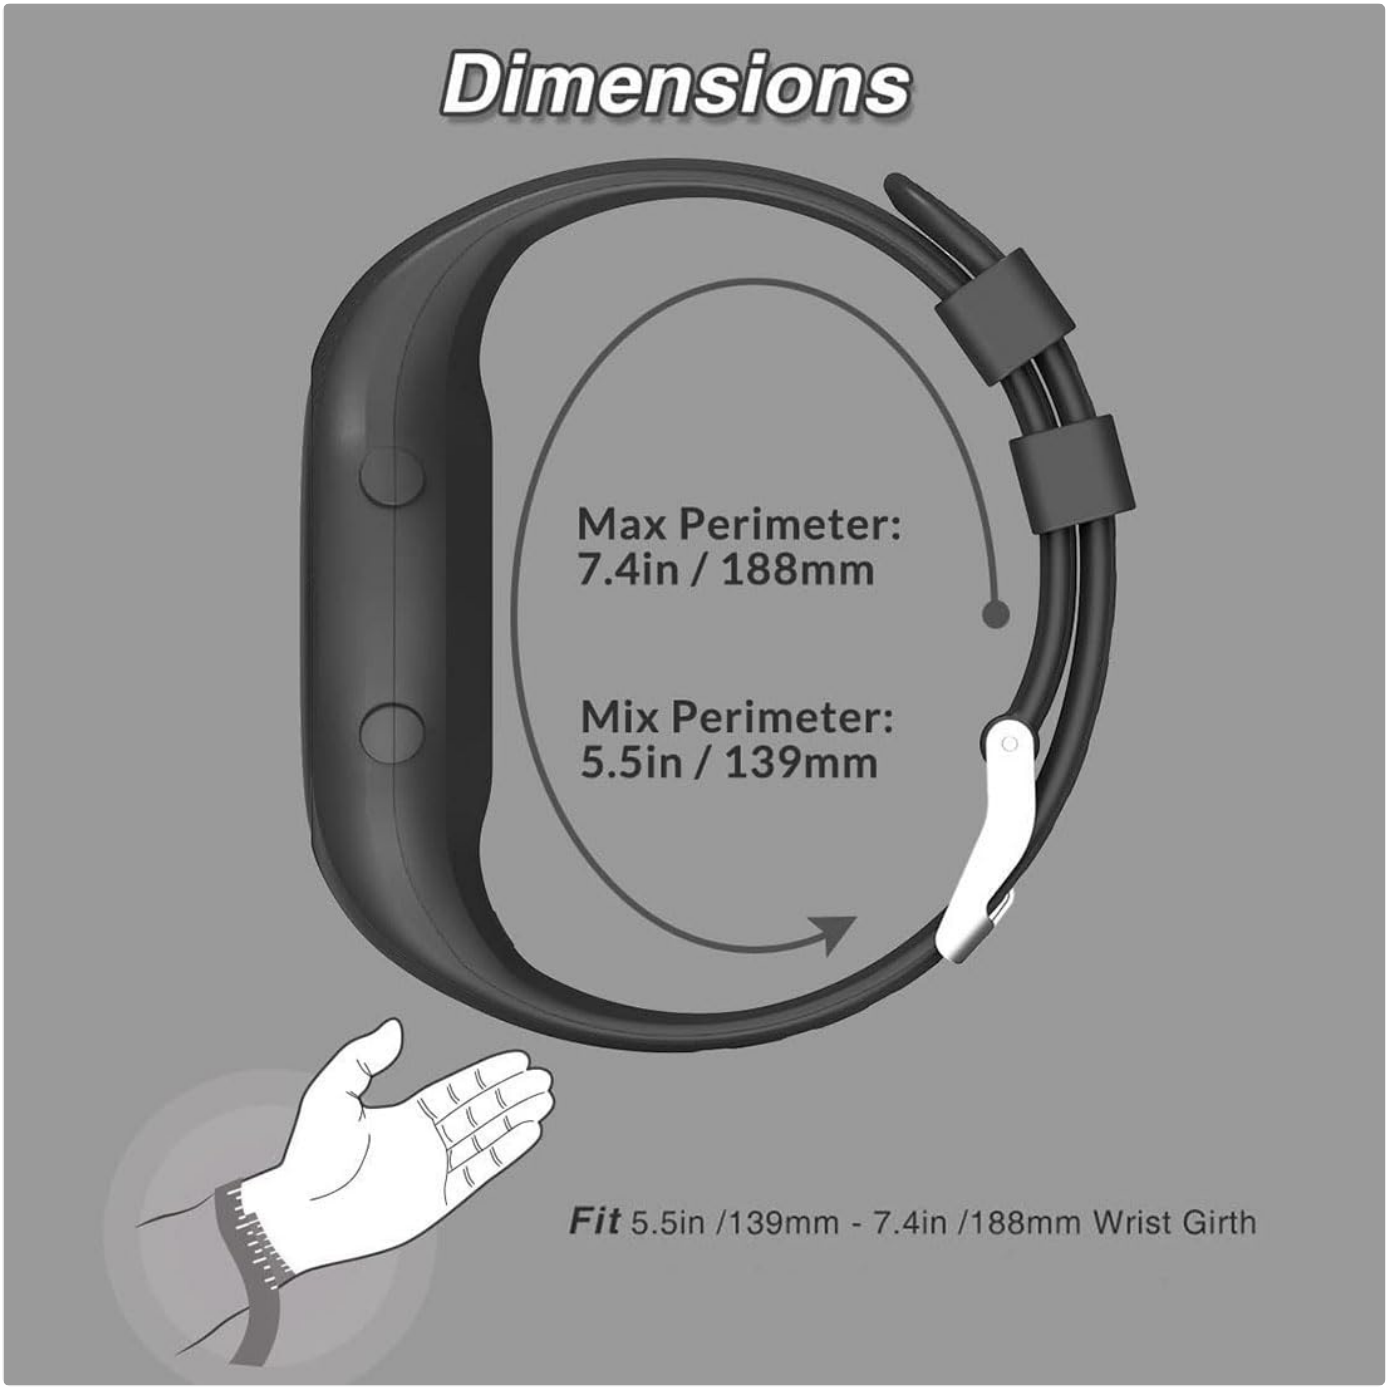


Image: A diagram illustrating the maximum and minimum wrist perimeters (7.4 inches and 5.5 inches) that the watch band can accommodate, ensuring a proper fit.

Operating Instructions

Setting Time and Date

Refer to the watch's physical buttons (usually on the side) for time and date adjustment. Typically, a 'Mode' button cycles through settings, and 'Set' or 'Adjust' buttons modify values. Consult the quick start guide included in your packaging for precise button functions.

Setting Individual Alarms (Up to 15)

1. Access the alarm setting mode (usually by pressing a 'Mode' button multiple times).
2. Select an alarm slot (e.g., A1, A2, etc.).
3. Set the desired hour and minute for the alarm using the adjustment buttons.
4. Confirm the setting. Repeat for up to 15 distinct alarms.

5. The watch will vibrate silently at the set times.

Setting Interval Timer

The interval timer provides recurring vibrations at set intervals. This is useful for regular reminders like drinking water or potty breaks.

1. Enter the interval timer setting mode.
2. Select your desired interval: 1, 5, 10, 15, 20, 30, 45, 60, 90, 120 minutes, or 3 hours.
3. Activate the timer. The watch will vibrate at the chosen interval until deactivated.

Lock Screen Function

To prevent accidental button presses, the watch features a lock screen function. Consult your watch's specific instructions for how to activate and deactivate the lock screen, typically involving holding down a combination of buttons.

Maintenance

Charging

Recharge the watch when the battery indicator is low. A full charge can last between 6 to 30 days, depending on the frequency of vibrations and alarm usage. Use only the provided Type C charging cable.

Water Resistance

The e-vibra Potty Training Watch is water resistant. This means it can withstand splashes, hand washing, and light water play. It is not designed for swimming, showering, or submersion in water for extended periods. Avoid exposing the charging port to water when not in use.



Image: A blue e-vibra Potty Training Watch partially submerged in water, illustrating its water-resistant capabilities for daily activities like hand washing.

Cleaning

Clean the watch and wristband regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish or components.

Troubleshooting

- **Watch not vibrating:**
  - Ensure alarms or timers are correctly set and activated.
  - Check battery level; recharge if low.
- **Watch not charging:**
  - Verify the Type C cable is securely connected to both the watch and the power source.
  - Try a different USB port or power adapter.
  - Ensure the charging port on the watch is clean and free of debris.
- **Screen not responding:**

- Check if the lock screen function is activated; deactivate it if necessary.
- Attempt a soft reset (refer to your watch's specific instructions for reset procedures, usually involves holding down buttons).

- **Time is incorrect:**
  - Re-enter the time and date settings as per the "Operating Instructions" section.

Specifications

Attribute	Detail
Model Number	G15
Brand	e-vibra
Package Dimensions	2.72 x 2.52 x 1.69 inches (6.91 x 6.40 x 4.29 cm)
Item Weight	1.62 ounces (45.93 grams)
Department	Unisex
Batteries	1 Lithium Ion battery (included)
First Available Date	January 16, 2025
Manufacturer	e-vibra

Warranty and Support

For warranty information or technical support, please contact e-vibra directly. Refer to the packaging or the official e-vibra website for contact details. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2025 e-vibra. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question