Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lxlu JY-6010

Lxlu Electric Spin Scrubber JY-6010 User Manual

Model: JY-6010

1. Introduction

Thank you for choosing the Lxlu Electric Spin Scrubber. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before use and retain it for future reference.

2. Safety Information

To ensure safe operation, please observe the following precautions:

- **Charging:** Only use a 5V charger. Higher voltage chargers may damage the device and prevent proper charging.
- **Water Resistance:** The device is IPX7 waterproof, suitable for use in wet environments. However, do not submerge the entire device for extended periods. Ensure the charging port cover is securely closed before exposing to water.
- **Children:** Keep out of reach of children. Adult supervision is required if children are near the device.
- **Brush Heads:** Ensure brush heads are securely attached before operation. Do not operate without a brush head.
- **Storage:** Store the device in a dry place away from direct sunlight and extreme temperatures.

3. Package Contents

Verify that all items are present in your package:

- 1 x Lxlu Electric Spin Scrubber Body
- 1 x Adjustable Extension Handle (Stainless Steel)
- 9 x Replaceable Brush Heads (various types)
- 1 x USB Charging Cable
- 1 x Wall Mount Hook



Image: The Lxlu Electric Spin Scrubber with its main body, extension handle, and a variety of nine brush heads, along with the charging cable and wall mount hook.

4. Product Overview

The Lxlu Electric Spin Scrubber is designed for versatile cleaning tasks. It features a main scrubber unit, an adjustable extension handle, and multiple interchangeable brush heads.

4.1 Main Unit Features

- **Power Button:** Turns the device on/off and cycles through speed settings.
- **Battery Indicator:** LED lights display the current battery level.
- **Charging Port:** USB-C port for charging (located under a waterproof cover).
- **Brush Head Connector:** Securely attaches various brush heads.

4.2 Brush Head Types and Uses

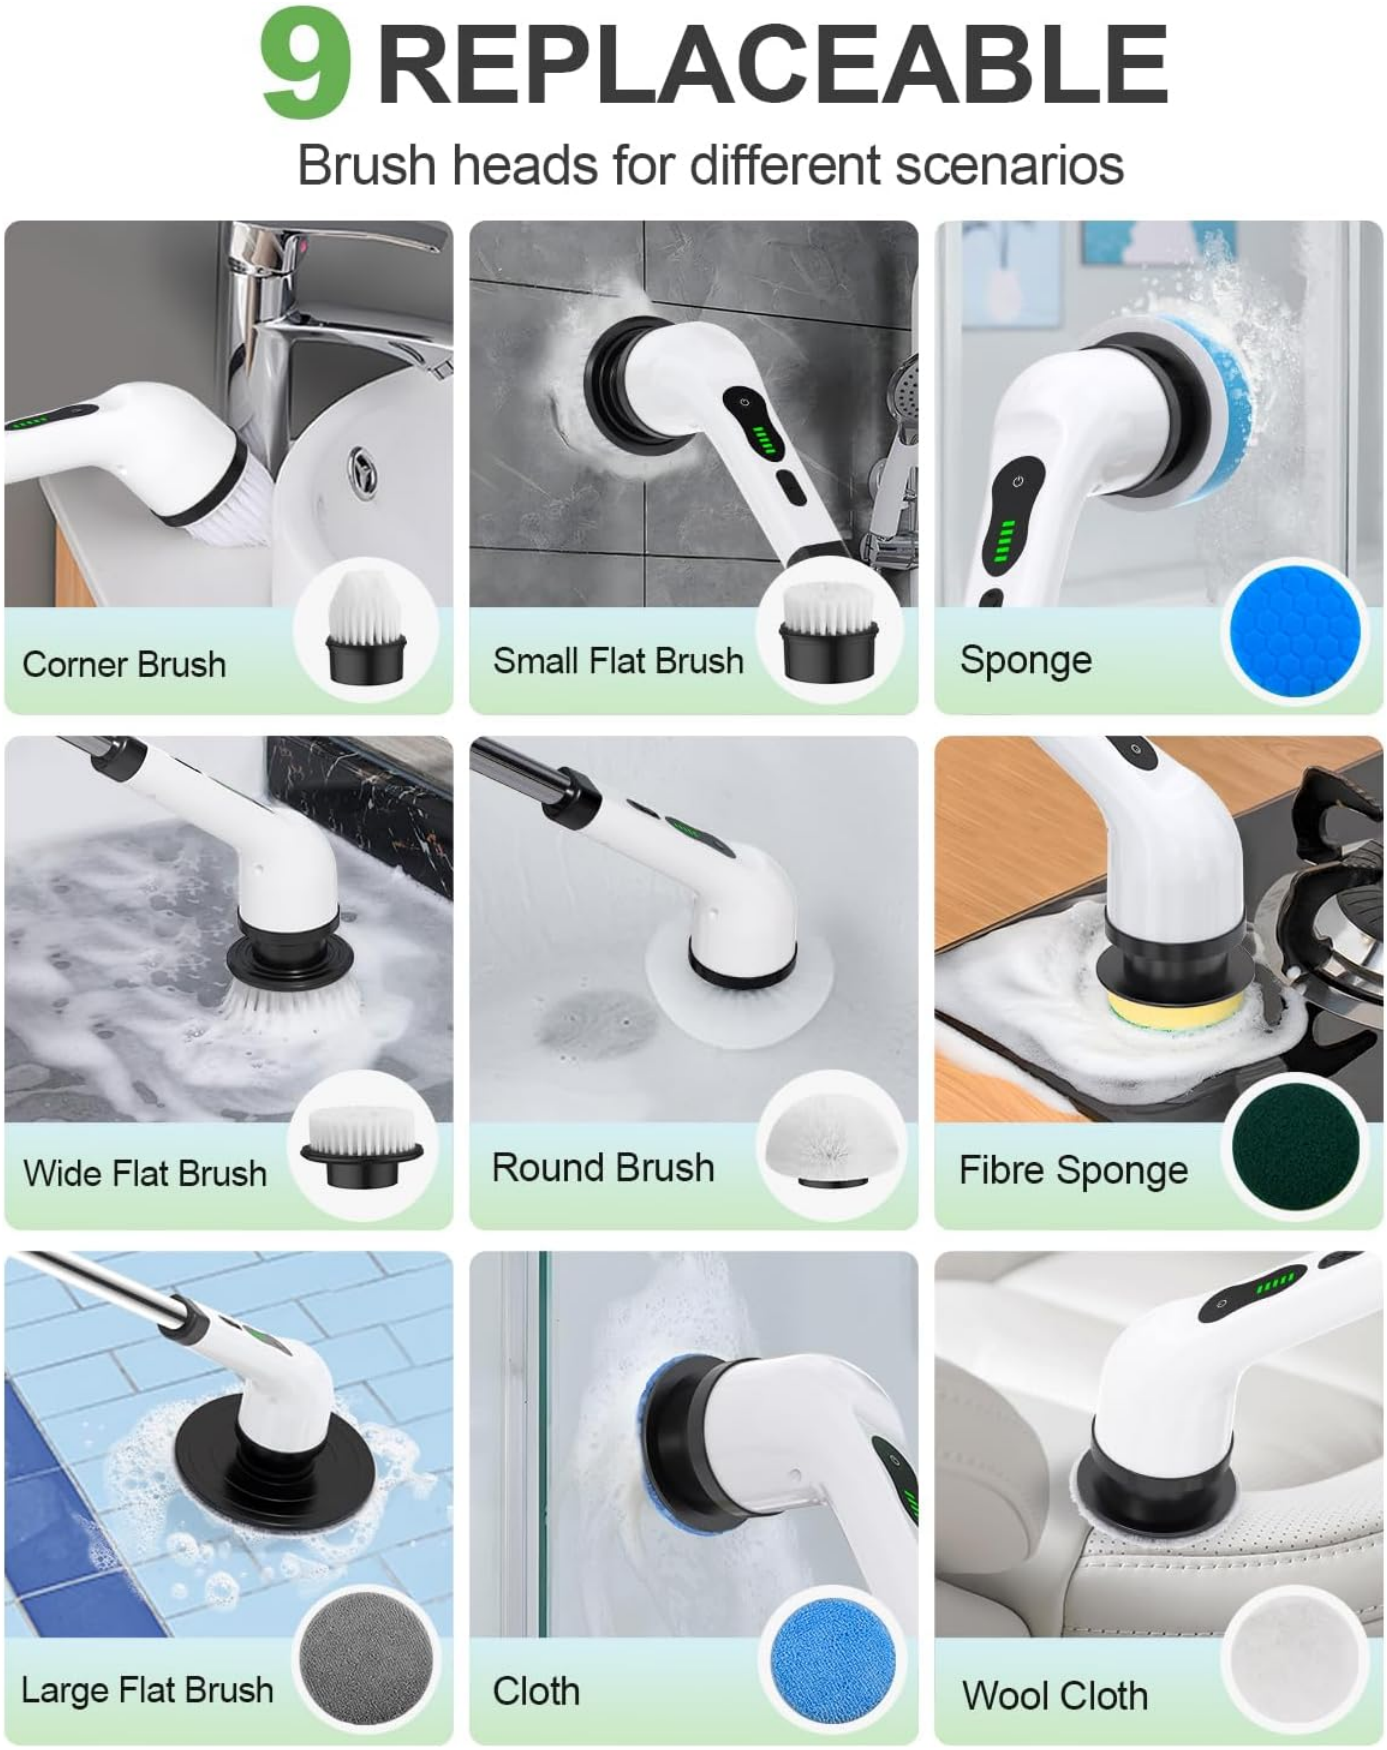


Image: A visual guide to the nine included brush heads, illustrating their shapes and common applications for different cleaning scenarios.

- **Round Brush:** Ideal for curved surfaces such as bathtubs and toilets.
- **Small Flat Brush:** Suitable for detailed cleaning of counters and sinks.
- **Sponge Brush:** For windows and delicate surfaces.
- **Wide Flat Brush:** Great for large flat surfaces like tile floors and drains.
- **Corner Brush:** Designed for tight spaces, corners, and tile grouts.

- **Fibre Sponge:** For general scrubbing tasks.
- **Large Flat Brush:** Recommended for extensive flat areas such as swimming pools.
- **Cloth Pad:** For polishing and gentle cleaning.
- **Wool Cloth Pad:** For delicate surfaces or polishing.

5. Setup

5.1 Charging the Device

1. Locate the charging port on the main scrubber unit and open its waterproof cover.
2. Connect the USB charging cable to the port.
3. Plug the other end of the USB cable into a 5V USB power adapter (not included).
4. The battery indicator lights will illuminate during charging. A full charge takes approximately 3.5 hours.
5. Once fully charged, all indicator lights will be solid. Disconnect the charger and securely close the waterproof cover.



Image: The electric spin scrubber is shown mounted on a wall hook, connected to a power outlet via its charging cable, indicating the charging process.

5.2 Assembling the Handle and Brush Head

1. **Attach Handle:** To use the extension handle, align the main scrubber unit with the handle and twist clockwise until it clicks into place. The handle can be extended from 24.8 inches to 47.3 inches by twisting and pulling the sections.
2. **Attach Brush Head:** Select the desired brush head. Align the brush head with the connector on the main scrubber

unit and push firmly until it locks into place.



Image: A visual representation of the scrubber's adjustable handle, showing its compact 9.4-inch form, a mid-length of 24.8 inches, and its fully extended length ranging from 39.3 to 47.3 inches.

6. Operating Instructions

6.1 Power On/Off and Speed Settings

1. **Power On:** Press the power button once to turn on the scrubber at the default low speed (400 RPM).
2. **Change Speed:** Press the power button a second time to switch to high speed (480 RPM).
3. **Power Off:** Press the power button a third time to turn off the device.

6.2 Cleaning Procedure

1. Ensure the desired brush head is securely attached.
2. Apply appropriate cleaning solution to the surface or directly to the brush head.
3. Turn on the scrubber and select the desired speed.
4. Gently guide the rotating brush over the surface to be cleaned. Avoid excessive pressure, as the motor is designed to provide sufficient torque.
5. For hard-to-reach areas, adjust the handle length as needed.
6. After cleaning, turn off the device.



Image: A woman efficiently cleaning a kitchen floor using the extended Lxlu Electric Spin Scrubber, demonstrating its ease of use for large areas.



Image: The electric spin scrubber with a round brush attachment effectively cleaning the curved surface of a bathtub, showing its adaptability for various fixtures.

7. Maintenance

7.1 Cleaning the Scrubber Unit

- After each use, wipe the main scrubber unit with a damp cloth to remove any residue.
- Ensure the charging port cover is closed during cleaning.
- Do not use abrasive cleaners or solvents on the device.

7.2 Cleaning and Storing Brush Heads

- Remove the brush head from the main unit.
- Rinse brush heads under running water to remove dirt and cleaning solution.
- Allow brush heads to air dry completely before storing.
- Store all components in a clean, dry place.

8. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device for 3.5 hours using a 5V charger.

Problem	Possible Cause	Solution
Device does not charge.	Charger voltage too high; cable not connected properly.	Ensure you are using a 5V charger. Check USB cable connection.
Brush head does not spin or spins weakly.	Low battery; brush head not attached correctly; excessive pressure.	Charge the device. Reattach brush head firmly. Reduce pressure during cleaning.
Water enters the charging port.	Waterproof cover not closed.	Always ensure the charging port cover is securely closed before use in wet conditions. Allow to dry completely before charging.

9. Specifications

Feature	Detail
Model Number	JY-6010
Brand	Lxlu
Battery Capacity	3000mAh
Charging Time	Approx. 3.5 hours (with 5V charger)
Runtime	Up to 120 minutes
Motor Power	25W
Speed Settings	2 speeds: 400 RPM (low), 480 RPM (high)
Waterproof Rating	IPX7
Noise Level	Under 50 dB
Handle Material	Stainless Steel
Adjustable Handle Length	24.8 inches to 47.3 inches
Product Dimensions (compact)	6"L x 3"W x 17"H
Item Weight	2.55 pounds (approx. 1 lb for brush unit)



Image: The electric spin scrubber highlighting its key features and specifications, including 120 minutes working time, 3-4 hours Type-C charge, IPX7 waterproof rating, 320-400 RPM 2-speed control, and 3000mAh upgrade battery.

10. Warranty and Support

Lxlu is committed to providing quality products and customer satisfaction. For any issues, questions, or support needs regarding your Electric Spin Scrubber, please contact our customer service team. Refer to your purchase documentation for specific warranty details and contact information.

© 2025 Lxlu. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DT9DVZ7C

More documents and user manuals: **https://manuals.plus/**