T4TREAM FPSC3DRDS-DWT

T4TREAM Fluted 3 Drawer Dresser Instruction Manual

Model: FPSC3DRDS-DWT
Brand: T4TREAM

Introduction

Thank you for choosing the T4TREAM Fluted 3 Drawer Dresser. This modern chest of drawers features a distinctive wave-like fluted panel design and a curved profile, offering both elegant aesthetics and practical storage. Designed for versatility, it is suitable for various rooms including bedrooms, living rooms, hallways, and entryways. This manual provides essential information for safe assembly, proper usage, and effective maintenance of your new dresser.



Image: The T4TREAM Fluted 3 Drawer Dresser, showcasing its dark walnut finish and unique fluted panel design, positioned in a modern room setting.

Important Safety Information

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Tipping Hazard:** Furniture can tip over, causing serious or fatal injuries. To prevent tipping, this dresser**must** be permanently attached to the wall using the anti-tip kit provided.
- **Adult Assembly Required:** Assembly should be performed by at least two adults. Some steps may require lifting or holding heavy components.
- **Secure Placement:** Ensure the dresser is placed on a flat, level, and stable surface. Uneven surfaces can compromise stability.
- **Weight Limits:** Do not overload drawers. Distribute weight evenly. The top surface has a maximum recommended weight of 100 lbs.
- **Child Safety:** Keep children away from the assembly area. Do not allow children to climb on or play with the

dresser. Always use drawer stops if available.

- **Hardware:** Use only the hardware provided or specified by the manufacturer. Do not substitute parts.

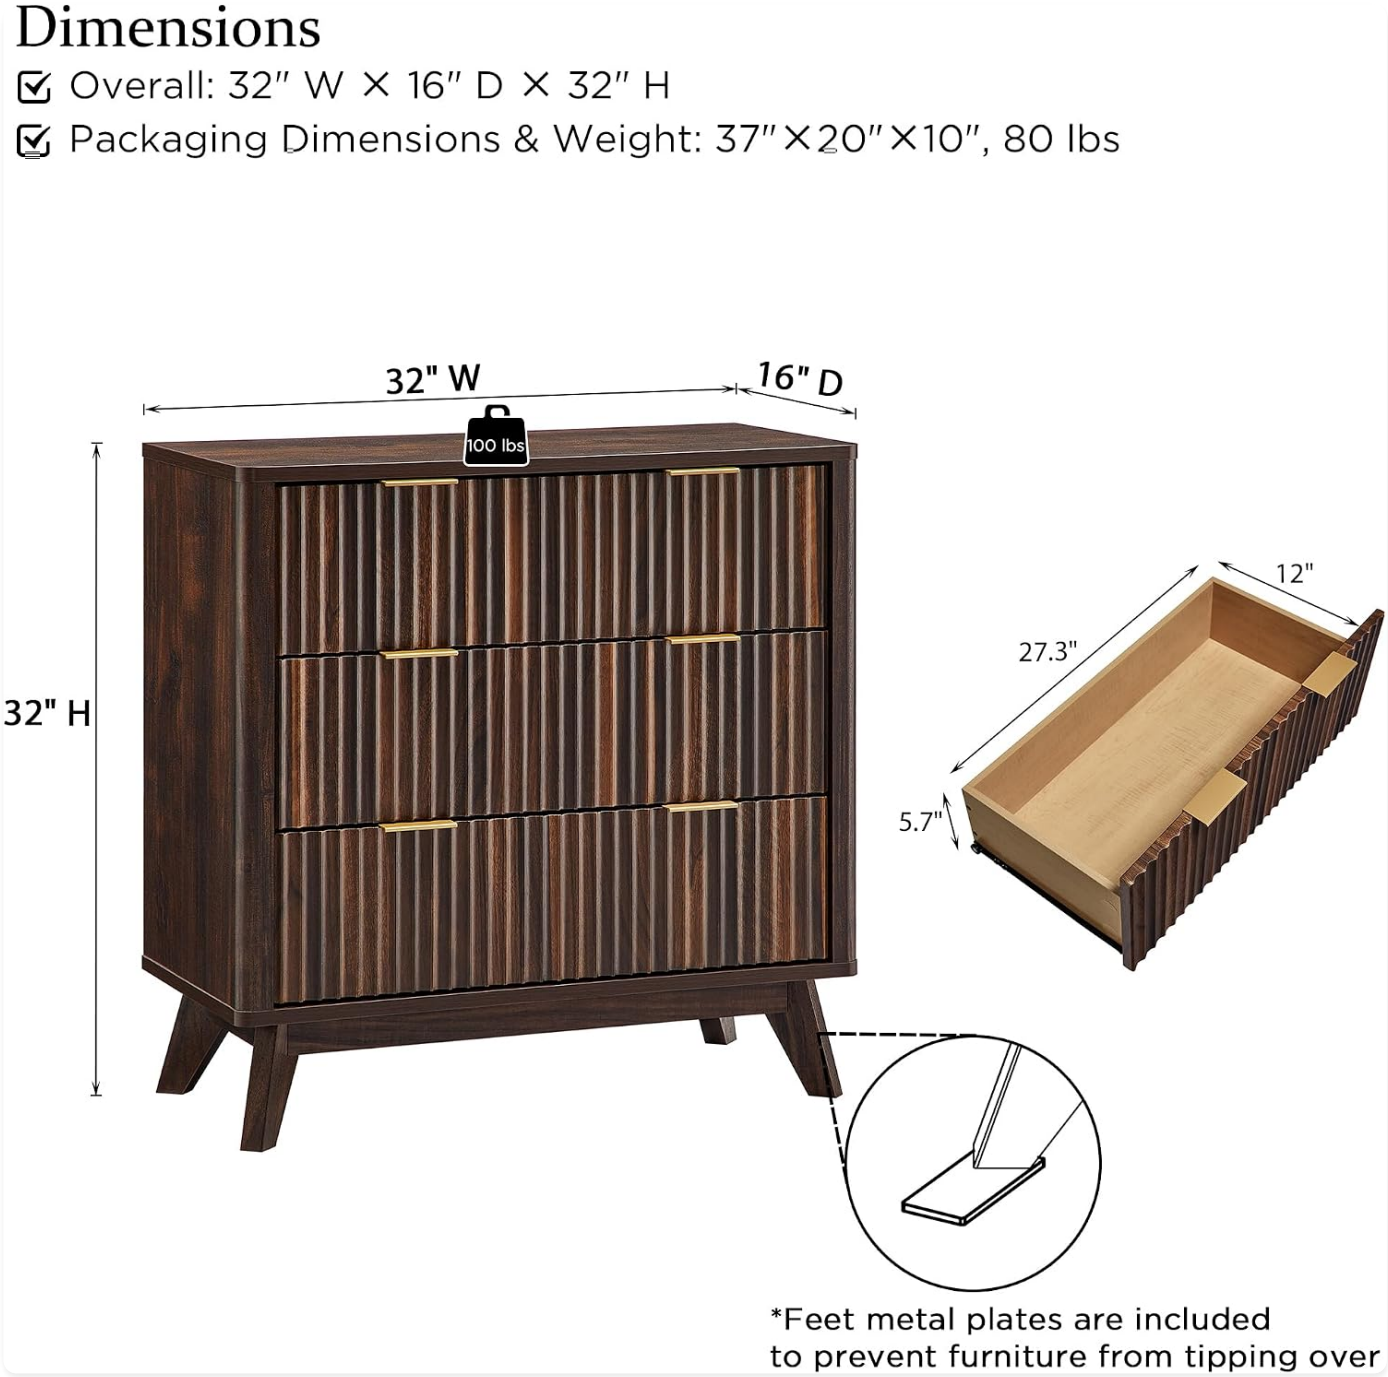


Image: Detailed dimensions of the dresser, showing overall width (32"W), depth (16"D), and height (32"H), along with drawer interior measurements and a note about anti-tipping feet metal plates.

Package Contents

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dresser Panels (Top, Bottom, Sides, Back)
- Drawer Components (Fronts, Sides, Backs, Bottoms)
- Drawer Slides
- Metal Handles
- Legs and Steel Support

- Assembly Hardware (Screws, Dowels, Cam Locks, etc.)
- Anti-Tip Kit (Wall anchor, strap, screws)
- Instruction Manual

Setup and Assembly

Assembly typically requires two adults. Each component is meticulously labeled with serial numbers for easy identification. A pack of spare parts is included in case of loss of hardware during assembly.

1. **Prepare the Area:** Clear a spacious, clean, and soft area (e.g., carpeted floor) to prevent scratching the furniture during assembly.
2. **Unpack and Identify Parts:** Carefully unpack all components and lay them out. Refer to the parts list in the instruction manual to identify each piece and its corresponding label.
3. **Assemble the Main Frame:** Follow the step-by-step diagrams in the provided manual to connect the side panels, top, and bottom panels using the specified hardware. Ensure all connections are secure.
4. **Attach Legs and Base Support:** Securely attach the splayed legs and the steel support at the base of the dresser. This reinforcement enhances stability.
5. **Assemble Drawers:** Construct each of the three drawers by attaching the sides, back, and bottom to the drawer front. Install the drawer slides onto the assembled drawers.
6. **Install Drawer Slides into Frame:** Attach the corresponding drawer slides to the interior of the dresser frame.
7. **Insert Drawers:** Carefully slide the assembled drawers into the dresser frame, ensuring they glide smoothly.
8. **Attach Handles:** Secure the chic metal handles to the front of each drawer.
9. **Install Anti-Tip Kit:** This is a critical safety step. Securely attach the anti-tip strap to the back of the dresser and then to a wall stud using the provided hardware. This prevents accidental tipping.



Image: A detailed view of the dresser's stable support legs and the bottom reinforced with steel, highlighting the structural integrity.

Operating and Usage

Your T4TREAM Fluted 3 Drawer Dresser is designed for efficient organization and aesthetic appeal in various home environments.

- **Drawer Operation:** The drawers feature smooth-glide mechanisms. To open, gently pull the metal handle. To close, push firmly until the drawer is fully seated. Avoid slamming drawers.
- **Storage:** Utilize the three spacious drawers to store clothing, bedding, cosmetics, jewelry, and other personal items. Distribute weight evenly within each drawer to ensure smooth operation and prevent strain on the slides.
- **Top Surface Use:** The spacious tabletop can be used to display decorative items, framed photos, lamps, or other accents. Ensure items placed on top do not exceed the recommended weight limit of 100 lbs.
- **Versatile Placement:** This dresser is suitable for use in bedrooms, living rooms, hallways, or entryways. Consider the dimensions (31.5"W × 15.75"D × 32"H) to ensure it fits your intended space.



Image: The dresser with one drawer partially open, revealing neatly folded items inside, demonstrating its storage capacity and smooth sliding mechanism.

Maintenance

Proper care will help maintain the beauty and longevity of your T4TREAM dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish. The fluted panel uses blister molding technology, which ensures water resistance and easy maintenance.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent staining or damage to the wood finish.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood.
- **Heat and Moisture:** Keep the dresser away from direct heat sources (e.g., radiators, fireplaces) and areas of high humidity. Use coasters under drinks to protect the top surface.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity.



Image: A close-up view of the dresser's top surface, highlighting its unique walnut veins and emphasizing its wear-resistant and waterproof properties for easy cleaning.

Troubleshooting

If you encounter any issues with your dresser, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Dresser feels wobbly or unstable.	Uneven floor; loose hardware; anti-tip kit not installed.	Ensure dresser is on a level surface. Retighten all assembly screws. Install the anti-tip kit securely to a wall stud.
Drawers do not slide smoothly.	Drawer slides misaligned; overloaded drawer; debris in slides.	Check that drawer slides are correctly installed and aligned. Reduce weight in the drawer. Clean any dust or debris from the drawer slides.
Missing parts or damaged components upon arrival.	Shipping damage; packaging error.	Do not proceed with assembly. Contact T4TREAM customer support immediately with your purchase details.
Difficulty with assembly steps.	Instructions unclear; complex step.	Review the instruction manual carefully. If needed, seek assistance from another adult or contact customer support.

Specifications

Feature	Detail
Brand	T4TREAM
Model Name	FPSC3DRDS-DWT
Product Dimensions	16"D x 32"W x 32"H
Color	Dark Walnut
Item Weight	80 Pounds
Room Type	Bedroom, Living Room, Hallway, Entryway, Home Office
Furniture Finish	Oak (referring to the wood type/grain)
Assembly Required	Yes

Feature	Detail
Material	FSC-Certified wood, optimal MDF, P2 engineered wood (fluted panel uses blister molding tech)

Warranty and Support

T4TREAM is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential warranty claims.

If you have any questions, concerns, or require assistance with assembly or parts, please do not hesitate to contact T4TREAM customer support. Our team is ready to assist you.

For more information or to contact support, please visit the official T4TREAM store on Amazon:T4TREAM Store

© 2025 T4TREAM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question