Warner Home Video B0DTQC234V

Companion DVD Instruction Manual

Brand: Warner Home Video | Model: B0DTQC234V

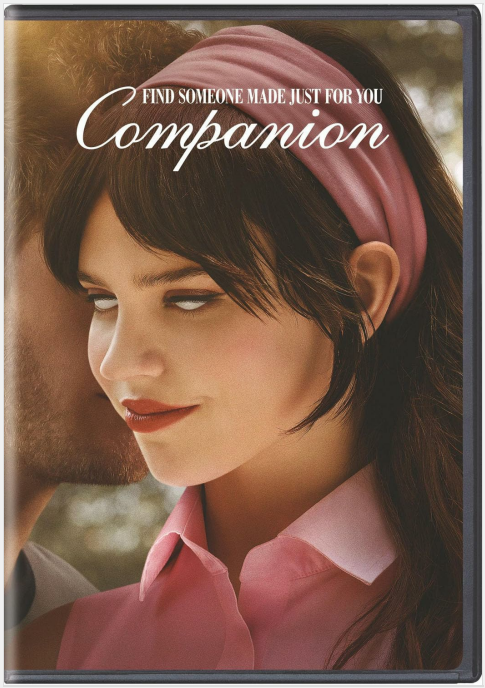


Image: Front cover of the "Companion" DVD. The artwork features a woman with striking white eyes, suggesting an artificial or altered state, with a man's face partially visible in the background. The title "Companion" is prominently displayed.

Introduction

This manual provides essential information for the proper use and care of your*Companion* DVD. This film, directed by Drew Hancock, explores a weekend getaway that turns chaotic when a subservient android malfunctions. For optimal viewing experience, please follow the guidelines provided.

Setup

1. **Unpack the DVD:** Carefully remove the *Companion* DVD disc from its case. Hold the disc by its edges

to avoid touching the playback surface.

2. **Prepare Your DVD Player:** Ensure your DVD player is connected to your television or display device and powered on. Refer to your DVD player's manual for specific connection instructions.
3. **Insert the Disc:** Open the disc tray of your DVD player. Place the*Companion* DVD disc into the tray with the label side facing up. Gently close the disc tray.
4. **Select Input:** On your television or display device, select the correct input source (e.g., HDMI 1, AV) that corresponds to your DVD player's connection.

Operating Instructions

Once the DVD is loaded, the main menu should appear. Use your DVD player's remote control to navigate the menu options.

- **Play Movie:** Select "Play" or "Start Movie" from the main menu to begin playback.
- **Scene Selection:** Choose "Scene Selection" or "Chapters" to jump to specific parts of the film.
- **Audio Options:** Select "Audio" or "Languages" to change the audio track (e.g., English, French, Spanish) or enable/disable subtitles.
- **Subtitles:** Choose "Subtitles" to select available subtitle languages.
- **Special Features:** If available, select "Special Features" to access bonus content.
- **Basic Controls:**
  - **Play/Pause:** Press the Play/Pause button to start or temporarily stop the movie.
  - **Stop:** Press the Stop button to end playback and return to the main menu or stop the disc.
  - **Fast Forward/Rewind:** Use the FF/REW buttons to quickly scan through the movie.
  - **Skip:** Use the Skip (>>|) or Previous (|<<) buttons to jump to the next or previous chapter.

Maintenance and Care

Proper handling and care will ensure the longevity and optimal performance of your*Companion* DVD.

- **Handling:** Always hold the DVD by its outer edges or by inserting a finger into the center hole. Avoid touching the shiny playback surface.
- **Storage:** Store the DVD in its original case when not in use to protect it from dust, scratches, and direct sunlight.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe the playback surface with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Avoid Extreme Conditions:** Do not expose the DVD to extreme temperatures, high humidity, or direct sunlight for extended periods.



Image: Back cover of the "Companion" DVD. This image displays the movie's synopsis, cast and crew information, technical specifications like audio formats and run time, and the UPC barcode (0883929833887).

Troubleshooting

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty, scratched, or inserted incorrectly. Player malfunction.	Clean the disc (see Maintenance). Ensure the disc is inserted label-side up. Try playing another DVD to check player functionality.
Picture or sound skips/freezes.	Disc surface is dirty or damaged.	Clean the disc thoroughly. If damage is visible (deep scratches), the disc may be unplayable.
No sound.	TV/player volume is low or muted. Incorrect audio settings.	Check TV and player volume. Ensure audio cables are securely connected. Verify audio settings on the DVD menu.
No picture.	Incorrect TV input. Loose video cables.	Select the correct input source on your TV. Check video cable connections between the player and TV.

Specifications

- **Title:** Companion
- **Format:** DVD, Subtitled
- **MPAA Rating:** R (Restricted)
- **Run Time:** 1 hour and 37 minutes
- **Release Date:** April 1, 2025
- **Director:** Drew Hancock
- **Actors:** Harvey Guillén, Jack Quaid, Lukas Gage, Megan Suri, Sophie Thatcher
- **Studio:** Warner Home Video

- **Languages:** English (Dolby Digital 5.1), French (Dolby Digital 5.1), Spanish (Dolby Digital 5.1)
- **Product Dimensions:** 1 x 1 x 1 inches; 1.92 ounces
- **ASIN:** B0DTQC234V
- **UPC:** 0883929833887

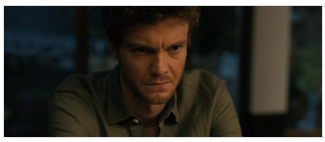


Image: A still from the movie "Companion," featuring actor Jack Quaid with a focused and intense expression.



Image: Another still from "Companion," showing actress Sophie Thatcher with a slight smile, wearing a headband.

Warranty and Support

For information regarding the warranty of this DVD, please refer to the terms and conditions provided by the retailer at the time of purchase, or contact the distributor, Warner Home Video, directly. Specific warranty details for media products like DVDs typically cover manufacturing defects.
For content-related inquiries or technical support concerning the film itself, please visit the official website of Warner Home Video or consult their customer service resources.