ALLIMITY ERF2AD36

ALLIMITY ERF2AD36 Voice Remote Control User Manual

For Hisense E7 and E7-Pro QLED TVs

1. Introduction

This manual provides instructions for the ALLIMITY ERF2AD36 Voice Remote Control, designed for use with various Hisense E7 and E7-Pro QLED TV models. This remote control is a direct replacement and requires no programming for compatible models.

Compatible Hisense TV Models:

- E7-Pro Series: 55E7NQ-Pro, 65E7NQ-Pro, 75E7NQ-Pro, 85E7NQ-Pro, 100E7NQ-Pro
- E7NQ Series: 43E7NQ, 50E7NQ, 55E7NQ, 58E7NQ, 65E7NQ, 75E7NQ, 85E7NQ, 100E7NQ

2. Setup and Battery Installation

The ALLIMITY ERF2AD36 remote control is designed for immediate use with compatible Hisense TV models without requiring any complex setup or programming. Simply install the batteries, and the remote will be ready to operate your television.

2.1 Battery Requirements

This remote control requires two AA or AAA batteries (not included). Refer to the battery compartment for the correct battery type and orientation.

2.2 Installing Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AA or AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.





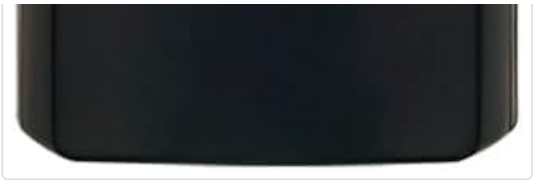


Figure 1: Back view of the remote control, indicating the battery compartment.

3. Operating the Remote Control

The ALLIMITY ERF2AD36 remote control provides full functionality for your Hisense TV. It features an ergonomic design for comfortable handling and a stable infrared signal for reliable performance up to 10 meters.

3.1 Button Layout and Functions





Figure 2: Front view of the ALLIMITY ERF2AD36 Voice Remote Control.

The remote features 25 buttons, including dedicated buttons for popular streaming services and voice control functionality.

Table 1: Remote Control Button Functions

Button	Function
Power ( )	Turns the TV on or off.
Input Source	Selects the input source (HDMI, AV, etc.).
Netflix, YouTube, Disney+, etc.	Direct access to specified streaming applications.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates menus and confirms selections.
Back / Return	Returns to the previous screen or menu.
Exit	Exits the current menu or application.
Volume Up/Down (+VOL / -VOL)	Adjusts the TV volume.
Channel Up/Down (CH▲ / CH▼)	Changes TV channels.
Mute	Mutes or unmutes the TV audio.
Microphone / Voice Control	Activates voice control features (if supported by TV).
Home	Returns to the TV's home screen.
Subtitle	Toggles subtitles on/off.
Text / Info	Displays teletext or information about the current program.
Numeric Keypad (0-9)	Direct channel entry.

Button	Function
Guide	Opens the electronic program guide.
CH.LIST	Displays the channel list.
Menu / **Settings**	Accesses the TV's main menu or settings.
Play/Pause, Fast Forward, Rewind	Media playback controls.







Figure 3: Remote control with emphasis on the Voice Control (microphone) button.

4. Maintenance and Care

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, high humidity, or liquids.
- **Dropping:** Handle the remote with care to prevent damage from drops or impacts.

5. Troubleshooting

If you encounter issues with your ALLIMITY ERF2AD36 remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AA or AAA batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
  - Confirm the remote is pointed directly at the TV's infrared sensor.
- **Limited Range:**
  - Ensure batteries are fresh. Low battery power can reduce the remote's effective range.
  - Remove any objects that might be blocking the signal path.
  - The maximum effective range is approximately 10 meters. Operating beyond this distance may result in unreliable performance.
- **Specific Buttons Not Working:**
  - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might

be preventing proper contact.
    - If only certain buttons are unresponsive after checking batteries and cleaning, the remote may be faulty and require replacement.
- **Voice Control Not Working:**
    - Ensure your Hisense TV model supports voice control functionality with this type of remote.
    - Check the TV's settings to ensure voice control is enabled.
    - Ensure the remote's batteries are sufficiently charged.

6. Specifications

Feature	Detail
Brand	ALLIMITY
Model Number	ERF2AD36
Compatibility	Hisense E7 and E7-Pro QLED TV series (e.g., 55E7NQ-Pro, 43E7NQ)
Connectivity Technology	Infrared (IR)
Special Features	Ergonomic design, Voice Control capability
Number of Buttons	25
Power Source	2 x AA or AAA batteries (not included)
Maximum Range	10 meters
Dimensions (L x W x H)	21.5 x 4.5 x 1 cm (approximately)
Weight	59 g (without batteries)
Color	Black





Figure 4: Dimensions of the remote control.

7. Warranty and Support

Specific warranty information for the ALLIMITY ERF2AD36 remote control is typically provided at the point of purchase or within the product packaging. Please retain your proof of purchase for any warranty claims.

For technical support or further assistance, please refer to the contact information provided by your retailer or the ALLIMITY brand's official support channels, if available.

© 2025 ALLIMITY. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question