Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hitachi LTTH0JWTPFB

Hitachi 10kg Top Load Twin Tub Washing Machine LTTH0JWTPFB User Manual

Model: LTTH0JWTPFB

1. Introduction

Thank you for choosing the Hitachi 10kg Top Load Twin Tub Washing Machine, Model LTTH0JWTPFB. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and keep it for future reference.



This image displays the Hitachi 10.5kg Twin Tub Washing Machine, highlighting its key features: Twin Tub design, 10.5 kg capacity, Air Jet Dry technology for efficient drying, and the Zen Wave Impeller for powerful washing.

2. Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Keep this manual handy for quick reference.

- Ensure the washing machine is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the machine before cleaning or performing any maintenance.

3. Product Features


The Hitachi LTTH0JWTPFB washing machine is designed with several features to enhance your laundry experience:

3.1. High Capacity Twin Tub Design

This model features a 10kg wash capacity and an 8kg spin capacity, making it suitable for medium to large families. The twin tub design allows for simultaneous washing and spinning, optimizing your laundry routine.

3.2. Air Jet Dry Technology

Equipped with a 1350 RPM spin speed and Air Jet Dry technology, this feature enhances spin drying efficiency. It draws in air through a 4-sided intake and circulates it inside the tub at high spin speeds, effectively reducing moisture in your laundry and minimizing drying time, even in humid conditions.

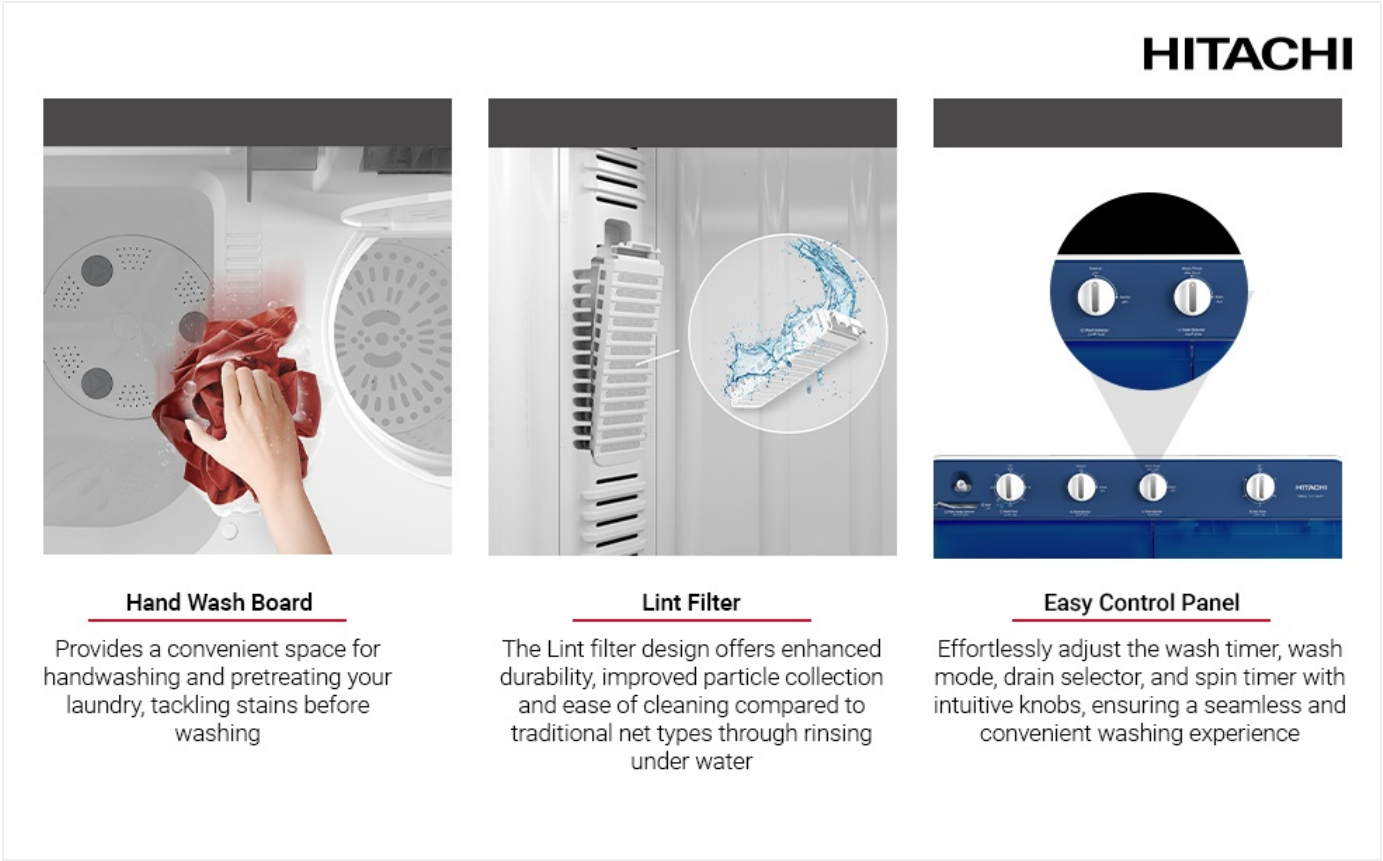

This image illustrates the Air Jet Dry function, showing air circulating to reduce moisture, and the Zen Wave Impeller, depicting its powerful water movement for thorough cleaning.

3.3. Zen Wave Impeller

The innovative Zen Wave Impeller features a large wing design with additional rotating components. This system generates powerful water movement for a thorough and deep clean, while also being gentle on fabrics.

3.4. Shower Rinse System

The spray rinse system ensures even detergent removal and a thorough rinse. This second rinse in the spin tub removes detergent residue and prevents lint from sticking to your clothes before the final spin cycle.

3.5. Hand Wash Board & Lint Filter

A convenient hand wash board is integrated for pre-treating stains or handwashing delicate items. The efficient lint filter effectively collects particles, ensuring cleaner clothes and easy maintenance.



Visual representation of the Shower Rinse removing detergent, the Hand Wash Board for pre-treating clothes, and the Lint Filter for collecting particles, all contributing to an enhanced laundry experience.

3.6. Durable Construction

The washing machine features a robust, rust-resistant, and dent-resistant body, ensuring long-lasting durability and reliable performance for years of usage. It also includes a transparent lid for monitoring the wash cycle.

A view of the washing machine's robust construction, highlighting its rust-free and dent-resistant materials designed for long-lasting durability.

3.7. Easy Control Panel

The user-friendly control panel includes intuitive knobs for the wash timer (up to 35 minutes), spin timer (up to 5 minutes), wash selector (Normal/Gentle), and drain selector (Wash/Rinse/Drain), ensuring a seamless and convenient washing experience.



A close-up of the washing machine's control panel, featuring a 35-minute wash timer, 5-minute spin timer, wash selector (Normal/Gentle), and drain selector (Wash/Rinse/Drain), designed for user convenience.

4. Setup

Proper installation is crucial for optimal performance and safety. Please follow these general guidelines:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the machine for any damage.
2. **Placement:** Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. Refer to the dimensions: 52.5 cm (Depth) x 87.5 cm (Width) x 102 cm (Height).
3. **Water Connection:** Connect the fill hose to a water tap and to the water inlet on the washing machine. Ensure connections are secure to prevent leaks.
4. **Drainage:** Position the drain hose to allow for proper water discharge. Ensure it is not kinked or blocked.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.



An illustration showing the optimal dimensions of the Hitachi Twin Tub Washing Machine (1020mm height, 895mm width, 485mm depth), emphasizing its space-smart design for effortless placement.

5. Operating Instructions

Follow these steps for effective washing and spinning:

1. **Load Laundry:** Place clothes loosely into the wash tub, ensuring not to overload.
2. **Add Detergent:** Add the appropriate amount of detergent to the wash tub.
3. **Fill with Water:** Use the water source selector to fill the wash tub with water to the desired level.
4. **Select Wash Mode:** Turn the Wash Selector knob to 'Normal' for regular clothes or 'Gentle' for delicate items.
5. **Set Wash Timer:** Set the Wash Timer knob for the desired wash duration (up to 35 minutes). The machine will start automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the Drain Selector knob to 'Drain' to empty the water from the wash tub.
7. **Rinse Cycle:** For rinsing, you can either refill the wash tub with clean water and run a short wash cycle, or transfer clothes to the spin tub for a shower rinse.
8. **Spin Cycle:** Transfer washed clothes to the spin tub. Close the spin tub lid. Set the Spin Timer knob for the desired spin duration (up to 5 minutes). The Air Jet Dry feature will activate during the spin cycle to aid drying.
9. **Unload:** Once the spin cycle is complete, carefully remove your laundry.

Note: For pre-treating stubborn stains, utilize the integrated Hand Wash Board before starting the main wash cycle.

6. Maintenance

Regular maintenance ensures the longevity and efficiency of your washing machine.

6.1. Cleaning the Lint Filter

The lint filter should be cleaned after every few washes to maintain optimal performance. Remove the filter, clear any accumulated

lint, and rinse it under running water. Reinstall the filter securely.

6.2. Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the surface.

6.3. Internal Cleaning

Periodically run a wash cycle with hot water and a washing machine cleaner (or white vinegar) without any clothes to clean the tubs and remove any detergent buildup.

7. Troubleshooting

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, power outage, lid not closed properly.	Check power connection, ensure lid is fully closed.
Water does not fill	Water tap off, fill hose kinked or blocked.	Open water tap, straighten fill hose.
Water does not drain	Drain hose kinked or blocked, drain selector not set to 'Drain'.	Straighten drain hose, set drain selector correctly.
Excessive vibration/noise	Uneven load, machine not level.	Redistribute laundry evenly, adjust machine's feet to level.

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Brand	Hitachi
Model Number	LTTH0JWTPFB
Product Type	Twin Tub Washing Machine
Wash Capacity	10 kg
Spin Capacity	8 kg
Spin Speed	1350 RPM
Dimensions (D x W x H)	52.5 cm x 87.5 cm x 102 cm
Item Weight	35 kg
Material (Body)	Durable Plastic / Enamel Coated Steel (Rust & Dent Resistant)
Washing Machine Drum Material	Plastic / Enamel Coated Steel
Color	Blue (Lid) and White/Grey (Body)
Access Location	Top Load
Operation Mode	Semi-Automatic

Control Type	Push Button / Rotary Knobs
Included Components	Drain Hose, Fill Hose, Power Cord, Cover
Country of Origin	Thailand

9. Warranty and Support

This Hitachi washing machine comes with a **Two-Year Warranty**. For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Hitachi website.

Please retain your proof of purchase for warranty validation.

10. Product Overview Video

[redacted]

This video provides a quick overview of the Hitachi Twin Tub Washing Machine, showcasing its key features such as the Air Jet Dry system, Zen Wave Impeller for deep cleaning, effective rinse cycle, user-friendly control panel, and durable, rust-resistant body.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DW46SYSW

More documents and user manuals: **https://manuals.plus/**