Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Terk TKTC4GB

TERK TKTC4GB Rechargeable Universal Remote Control User Manual

Model: TKTC4GB

1. Introduction

The TERK TKTC4GB Universal Remote Control is designed to consolidate control of up to four of your home entertainment devices into a single, easy-to-use unit. Featuring a built-in rechargeable battery, backlit keypad, and long-range infrared (IR) signal, it offers convenient control for a wide range of devices including TVs, streaming players, cable/satellite boxes, and other audio/video equipment.

2. Package Contents

Please check the package for the following items:

- 1 x TERK TKTC4GB Universal Remote Control
- 1 x USB-C Charging Cable
- 1 x User Manual (this document)



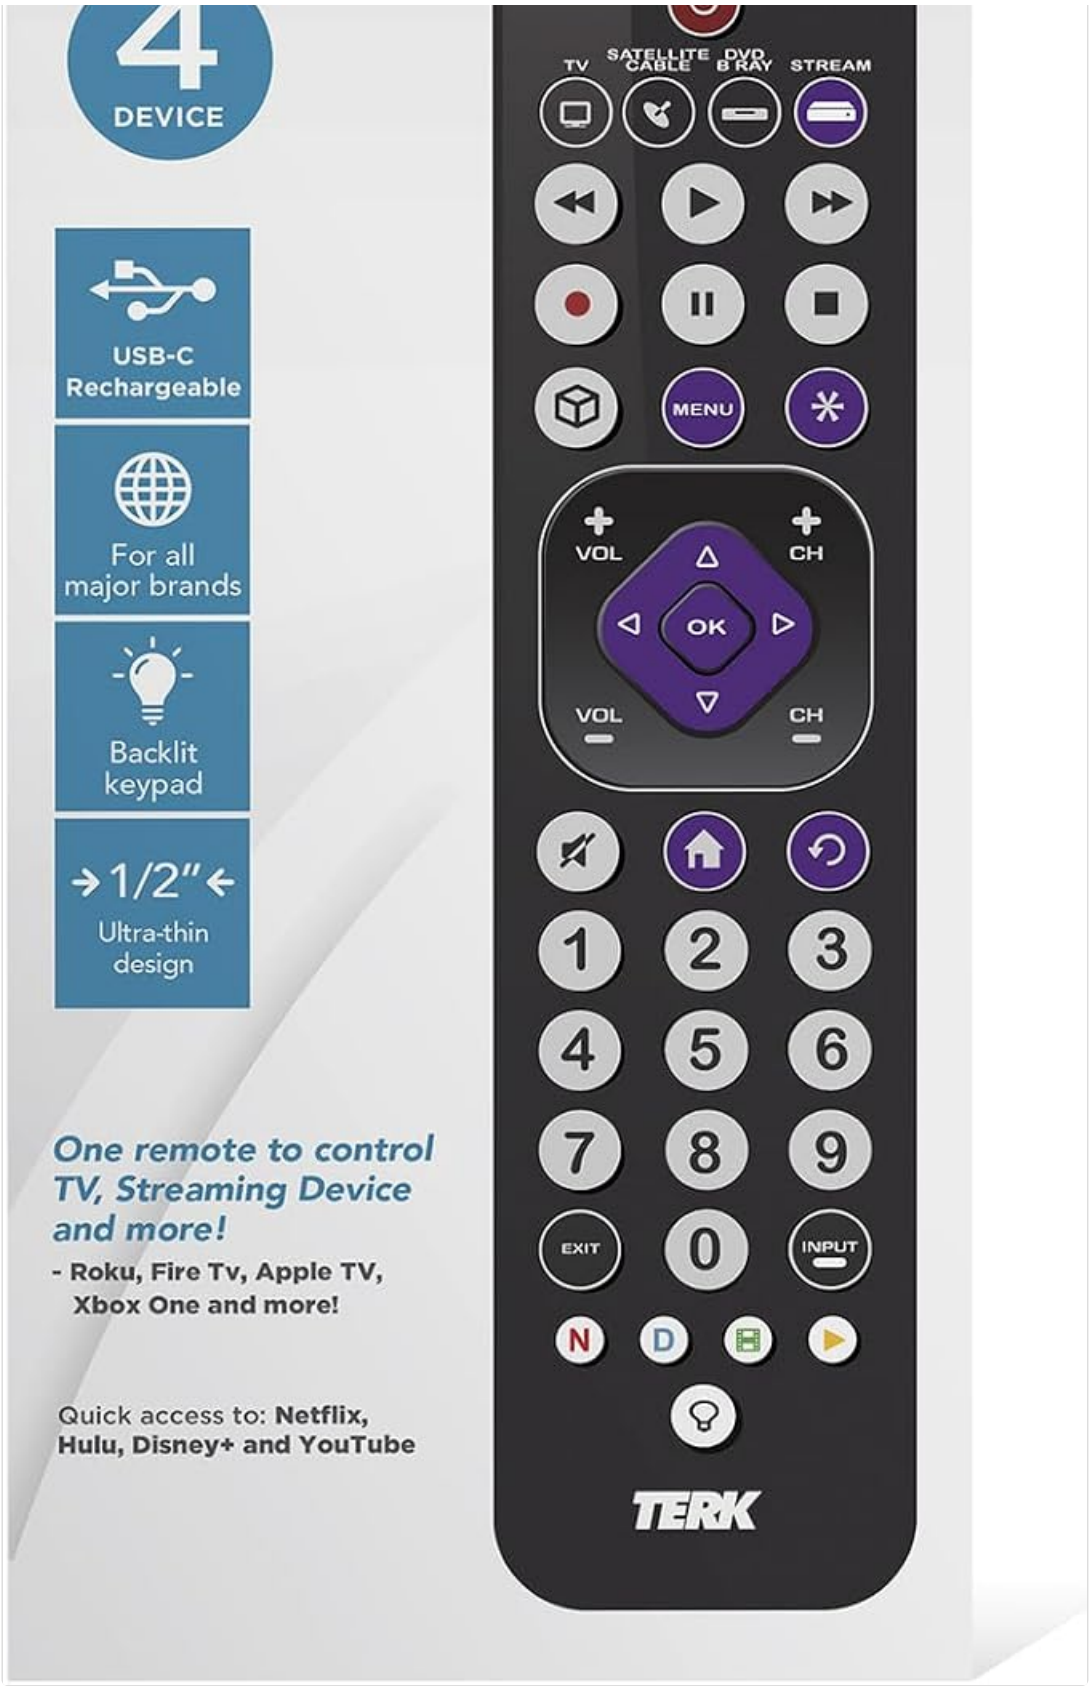


Figure 1: TERK TKTC4GB Universal Remote Control product packaging, illustrating contents and key features.

3. Remote Control Layout

Familiarize yourself with the buttons and their functions on your TERK TKTC4GB remote control.



Figure 2: TERK TKTC4GB Universal Remote Control with key features highlighted.

- **POWER:** Turns the selected device on or off.
- **DEVICE SELECTORS (TV, SATELLITE/DVD, STREAM):** Selects the device you wish to control.
- **PLAYBACK CONTROLS (REW, PLAY, FF, PREV, PAUSE, NEXT, STOP, REC):**Controls media playback functions.
- **MENU:** Accesses the menu of the selected device.
- **EXIT:** Exits the current menu or screen.
- **NAVIGATION (UP, DOWN, LEFT, RIGHT, OK):**Navigates through menus and confirms selections.
- **VOL +/-:** Adjusts the volume.
- **CH +/-:** Changes channels.
- **NUMBER PAD (0-9):** Enters channel numbers or other numerical inputs.
- **INPUT:** Changes the input source on your TV.
- **STREAMING APP BUTTONS (NETFLIX, HULU, DISNEY+, YOUTUBE):**Direct access to popular streaming services.

4. Charging the Remote

The TERK TKTC4GB remote control features a built-in rechargeable battery for convenience and extended use.



Figure 3: Detail view of the TERK TKTC4GB remote showing the USB-C charging port and illuminated keypad.

1. Locate the USB-C charging port on the side or bottom of the remote control.
2. Connect the supplied USB-C cable to the remote's charging port.
3. Connect the other end of the USB-C cable to a standard USB power adapter (not included) or a USB port on a computer.
4. The charging indicator light on the remote will illuminate during charging.
5. The indicator light will turn off or change color when the battery is fully charged. A full charge provides up to 6 months of typical use.

5. Setup: Programming Your Devices

To program the TERK TKTC4GB remote control to operate your devices, you will typically need to enter a specific code

for each device or use an auto-search function. Please refer to the included quick start guide or the manufacturer's website for the most up-to-date device codes and detailed programming instructions. General steps often include:

1. **Turn on the device** you wish to control (e.g., your TV, cable box, or streaming player).
2. **Press and hold the desired device button** on the remote (TV, SATELLITE/DVD, or STREAM) until the indicator light for that device stays on.
3. **Enter the 4-digit code** for your device's brand. These codes are usually found in a code list provided with the remote or online.
4. **Test the remote's functions** (e.g., Power, Volume, Channel). If the device responds correctly, the programming is complete.
5. If the device does not respond, try the next code listed for your brand or consult the quick start guide for auto-search programming methods.

Repeat this process for each device you wish to control with the remote.

6. Operating the Remote

Once your devices are programmed, operating them with the TERK TKTC4GB remote is straightforward:

1. **Select the device:** Press the corresponding device button (TV, SATELLITE/DVD, or STREAM) for the device you want to control. The indicator light for that device will illuminate.
2. **Control the device:** Use the remote's buttons (e.g., Power, Volume, Channel, Playback, Menu) to operate the selected device.
3. To control a different device, simply press its corresponding device button.

7. Special Features

7.1 Backlit Keypad

The TERK TKTC4GB remote features an illuminated keypad, making it easy to control your devices in low-light conditions or at night. The backlight activates automatically when buttons are pressed and will turn off after a few seconds of inactivity to conserve battery life.

7.2 Dedicated Streaming Buttons

For quick access to your favorite entertainment, the remote includes dedicated buttons for popular streaming services: Netflix, Hulu, Disney+, and YouTube. When your streaming device is selected, pressing these buttons will directly launch the respective application.

8. Maintenance and Care

- **Cleaning:** Clean the remote with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or solvents, as these can damage the remote's finish or internal components.
- **Environment:** Avoid exposing the remote to extreme temperatures, high humidity, direct sunlight, or dusty environments.
- **Handling:** Do not drop the remote or subject it to strong impacts. Do not attempt to disassemble the remote, as this will void any warranty.

9. Troubleshooting

If you encounter issues with your TERK TKTC4GB universal remote, try the following solutions:

- **Remote not responding:**
  - Ensure the remote is fully charged.
  - Check that you have selected the correct device (TV, SATELLITE/DVD, or STREAM).
  - Ensure there is a clear line of sight between the remote and the device you are trying to control.
  - Verify that the device is powered on.
- **Specific buttons not working:**
  - The device may not support that specific function with a universal remote.
  - Try reprogramming the device with a different code, if available.
- **Backlight not illuminating:**
  - The battery may be low. Recharge the remote.
- **Device not programming:**
  - Ensure you are following the programming steps precisely.
  - Try all available codes for your device brand.
  - Consult the manufacturer's website for updated code lists or alternative programming methods.

10. Specifications

Brand	Terk
Model Number	TKTC4GB
Max Number of Supported Devices	4
Connectivity Technology	Infrared (IR)
Maximum Range	40 feet
Battery Type	Rechargeable Battery Pack (USB-C)
Special Feature	Backlit Keypad
Compatible Devices	TV, Streaming Device, Cable/Satellite Box, Other Audio/Video Devices
Color	Black

11. Warranty and Support

For warranty information, technical support, and further assistance with your TERK TKTC4GB Universal Remote Control, please refer to the product packaging, the manufacturer's official website, or contact TERK customer service directly. Please retain your proof of purchase for any warranty claims.

© [Current Year] TERK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DWJ5G4H3

More documents and user manuals: **https://manuals.plus/**