Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit Replacement Remote Control

ZdalaMit Replacement Remote Control User Manual

For ViewSonic LED Displays

Introduction

This manual provides instructions for the ZdalaMit Replacement Remote Control, designed for use with various ViewSonic LED Display models. Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize its lifespan.





Image: Front view of the ZdalaMit Replacement Remote Control. The remote is black with various function buttons, including a red power button at the top, number keys, navigation buttons, and special function keys.

Safety Information

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or any other liquid.
- Keep the remote control out of reach of children and pets.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

Package Contents

- 1x ZdalaMit Replacement Remote Control
- *Note: AAA batteries are not included and must be purchased separately.*

Setup

Battery Installation

The remote control requires two (2) AAA 1.5V Alkaline batteries for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

The remote control is pre-programmed and ready for use immediately after battery installation. No additional programming is required.

Operating Instructions

Basic Functions

- **Power Button (●):** Turns the ViewSonic LED Display on or off.
- **Number Keys (0-9):** Used to directly select channels or input numerical values.
- **Input:** Cycles through available input sources (e.g., HDMI, VGA).
- **Volume Up/Down (VOL+/VOL-):** Adjusts the audio volume.
- **Channel Up/Down (CH+/CH-):** Changes the television channel.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **Menu:** Opens the display's main menu.
- **Back/Exit (ESC/EXIT):** Returns to the previous menu or exits the current menu.
- **Display:** Shows current display information.
- **P.MODE:** Cycles through picture modes.
- **Freeze:** Pauses the current image on the screen.
- **Sleep:** Sets a sleep timer for the display.
- **Aspect:** Adjusts the aspect ratio of the display.
- **D.MENU/START:** Digital menu or start function.
- **D.TITLE:** Digital title function.
- **F1-F12:** Function keys, their specific use may vary depending on the ViewSonic display model.

Compatibility

This ZdalaMit Replacement Remote Control is compatible with the following ViewSonic LED Display models:

- IFP5550
- IFP6550
- IFP7550
- IFP8650

- IFP6550-2EP
- IFP7550-2
- IFP50-5
- IFP5550-5A
- IFP7550-5A
- IFP8650-5A
- IFP6550-5A
- VS19315
- VS17223
- VS19283
- VS19284
- IFP5550-3
- IFP5550-3A
- IFP5550-3B
- IFP6550-3
- IFP6550-3A
- IFP6550-3B
- IFP7550-3
- IFP7550-3A
- IFP7550-3B
- IFP8650-3
- IFP8650-3A
- IFP8650-3B
- VS18105
- VS18106
- VS17117
- VS17118
- IFP5550-5F
- IFP7550-5F
- IFP8650-5F
- IFP6550-5F

Troubleshooting

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the display's infrared receiver.
  - Ensure you are within the effective range of the display's IR receiver.
- **Specific buttons not working:**
  - Some advanced functions or specific keys (e.g., F1-F12) may only be supported by certain ViewSonic display models. Refer to your display's original manual for specific button functionalities.
  - Clean the remote control's surface and buttons if there is any visible dirt or residue.

SPECIFICATIONS

Product Dimensions	8.54 x 1.99 x 0.55 inches (21.7 x 5.05 x 1.4 cm)
Item Weight	1.41 ounces (40 grams)
Power Supply	2x 1.5V AAA Alkaline Batteries (Not Included)
Color	Black
Special Feature	Pre-Programmed (No setup required)

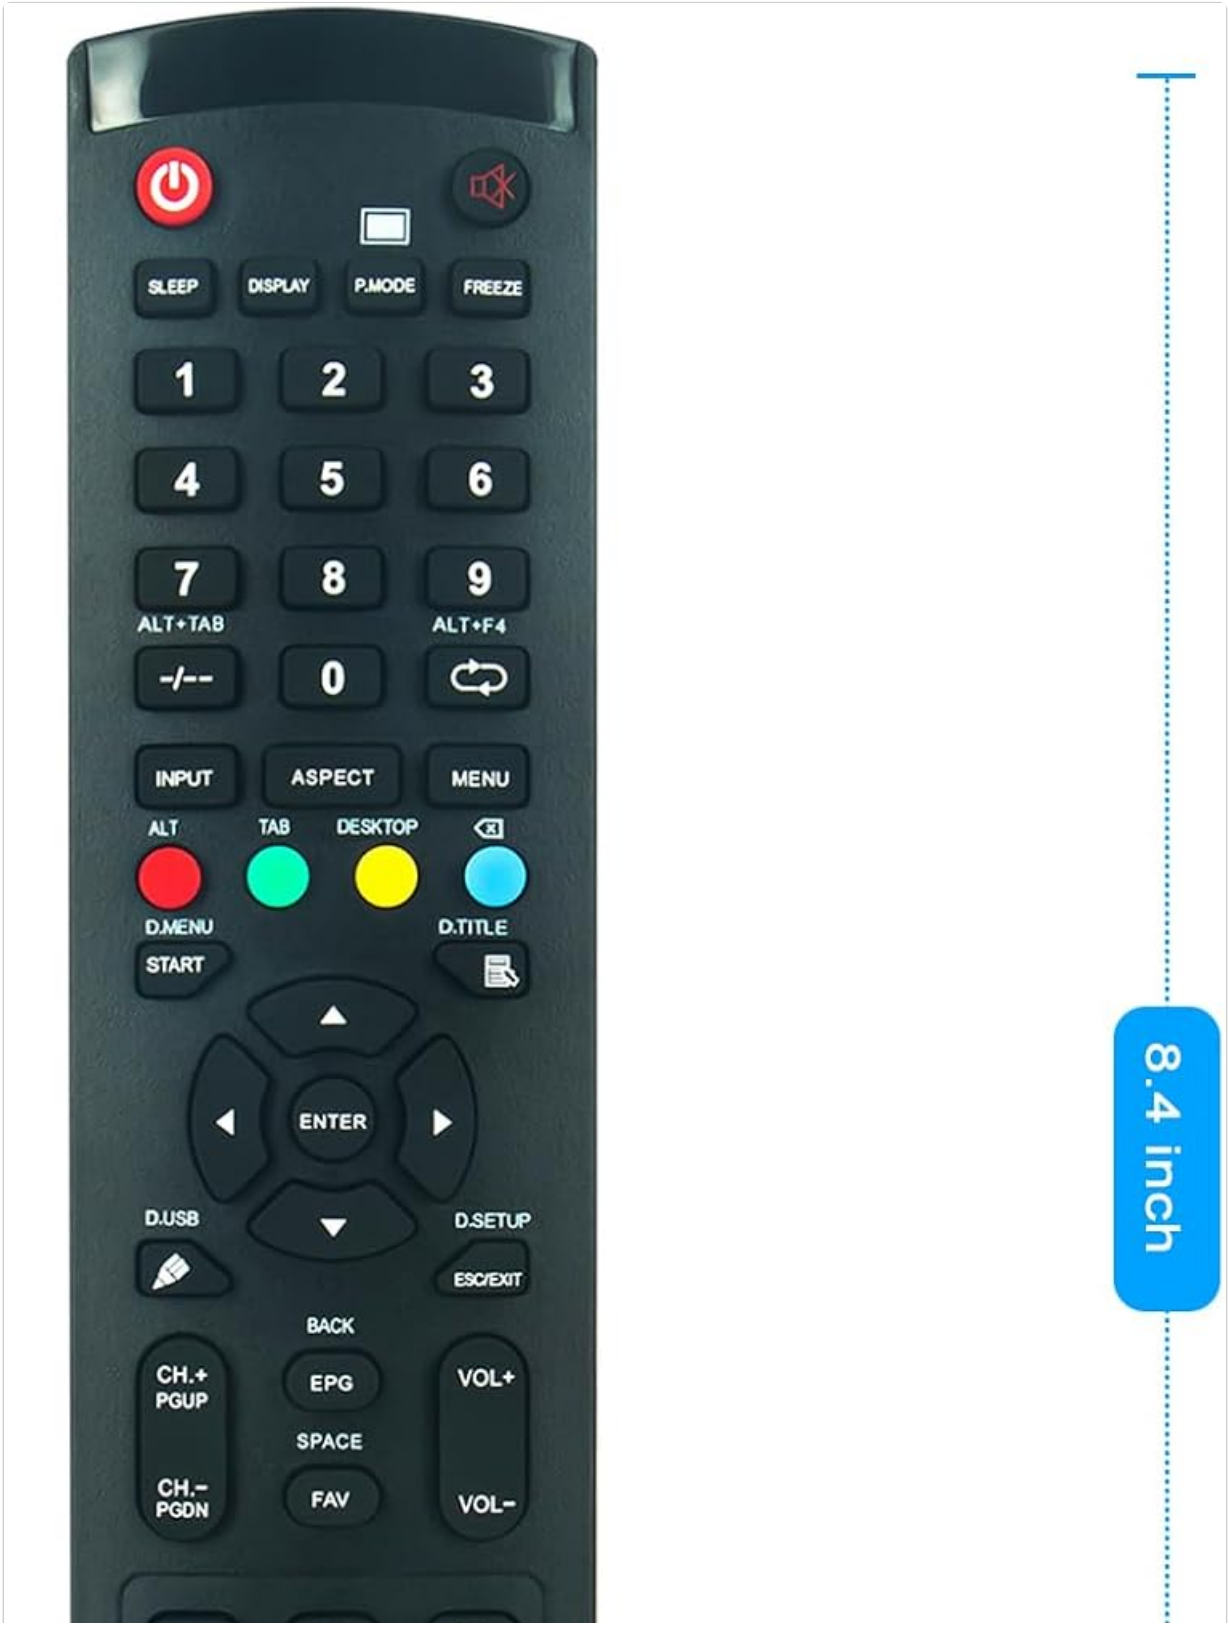




Image: Front view of the ZdalaMit Replacement Remote Control with indicated dimensions: 8.4 inches in length and 2.0 inches in width.

Warranty and Support

This product is covered by a standard manufacturer's warranty. For warranty claims, technical support, or further assistance, please contact your retailer or the ZdalaMit customer service department. Please retain your proof of purchase for warranty purposes.

© 2025 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DWM6G8JX

More documents and user manuals: **https://manuals.plus/**