Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kienzle 14982

Kienzle DCF Radio-Controlled Outdoor Wall Clock with Thermometer

Model: 14982 | Brand: Kienzle

1. Introduction

Thank you for choosing the Kienzle DCF Radio-Controlled Outdoor Wall Clock with Thermometer. This clock is designed to provide accurate time and temperature readings in outdoor environments. Its robust construction and radio-controlled mechanism ensure reliability and ease of use.

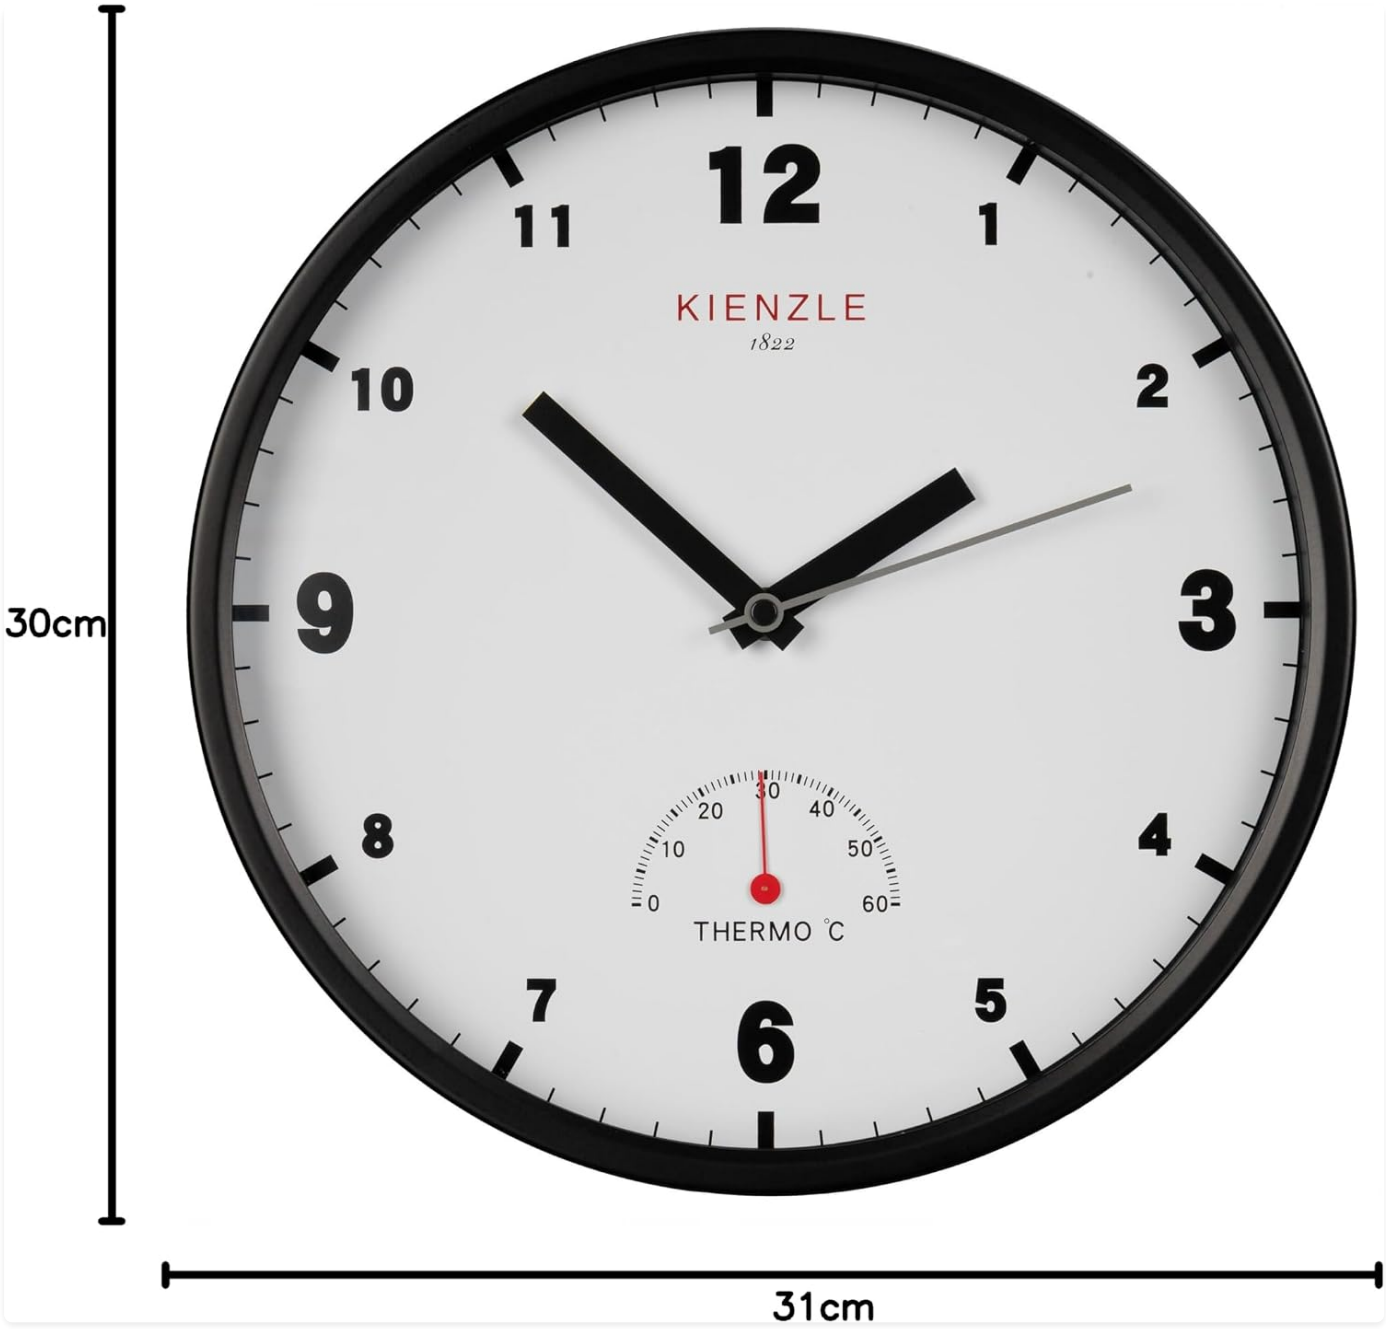


Image: Kienzle DCF Radio-Controlled Outdoor Wall Clock in an outdoor setting.

2. Product Features

- **DCF Radio-Controlled Time:** Automatic time synchronization ensures optimal precision and automatic adjustment for daylight saving time.
- **Integrated Thermometer:** Displays real-time outdoor temperature.
- **Silent Movement:** Equipped with a smooth, silent second hand for undisturbed outdoor relaxation.
- **Robust and Splash-Proof:** Designed for outdoor use with a protected casing to withstand weather conditions.
- **High-Quality Steel Frame:** Provides stability and an elegant appearance.
- **Battery Operated:** Requires 1 AA/LR6 battery (not included) for convenient outdoor placement.



Image: Detailed view of the clock face with integrated thermometer.

3. Setup

3.1 Battery Installation

1. Carefully remove the protective cover on the back of the clock.
2. Insert one AA/LR6 battery (not included) into the battery compartment, ensuring correct polarity (+/-).
3. Replace the protective cover securely.



Image: Rear view of the clock, highlighting the battery compartment.

3.2 Initial Synchronization

After battery insertion, the clock will automatically search for the DCF radio signal. The hands will move to the 12 o'clock position and then adjust to the correct time. This process may take several minutes, especially if the signal is weak. Ensure the clock is placed in an area with good reception, away from strong electromagnetic interference.

3.3 Mounting

The clock is designed for wall mounting. Use a suitable screw or hook (not included) in your desired outdoor location. Ensure the mounting point is secure and can support the weight of the clock.

Your browser does not support the video tag.

Video: A Closer Look at the Kienzle DCF Radio-Controlled Outdoor Wall Clock, demonstrating battery installation and initial setup.

4. Operating Instructions

4.1 Time Display

Once synchronized, the clock will continuously display the precise time. The DCF signal ensures automatic adjustment for seasonal time changes (Daylight Saving Time).

4.2 Temperature Display

The integrated thermometer provides a real-time reading of the ambient outdoor temperature. No manual adjustment is required for the thermometer.

5. Maintenance

- **Cleaning:** Wipe the clock with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the AA/LR6 battery annually or when the clock stops functioning. Dispose of used batteries responsibly.
- **Splash Protection:** While the clock is splash-proof, avoid submerging it in water or exposing it to direct, high-pressure water jets.

6. Troubleshooting

- **Clock not setting time:**
  - Ensure the battery is correctly inserted and has sufficient charge. Replace if necessary.
  - Move the clock to a different location, preferably near a window or an open area, to improve DCF signal reception.
  - Allow up to 24 hours for the clock to receive the signal and set the time, especially after initial setup or battery change.
- **Hands are stuck or moving erratically:**
  - Replace the battery with a fresh one.
  - Check for any obstructions preventing the hands from moving freely.
- **Thermometer not accurate:**
  - Ensure the clock is not exposed to direct sunlight or other heat sources that could affect the reading.
  - Allow some time for the thermometer to adjust to the ambient temperature after placement.

7. Specifications

Brand	Kienzle
Model Number	14982
Display Type	Analog
Special Feature	Temperature Display, Radio-Controlled
Product Dimensions (W x H)	30 cm x 31 cm
Power Source	Battery Powered (1 AA battery required, not included)
Usage	Outdoor
Frame Material	Alloy Steel
Mounting Type	Wall Mount



Image: Clock with indicated dimensions.

8. Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Kienzle customer service. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DWQNZTD3

More documents and user manuals: **https://manuals.plus/**