UREVO URTM030

UREVO Under Desk Treadmill User Manual

Model: URTM030
Brand: UREVO

Introduction

Thank you for choosing the UREVO Under Desk Treadmill. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new walking pad. Please read this manual thoroughly before initial use and retain it for future reference.

Safety Information

WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual before using the treadmill.

- Always place the treadmill on a flat, stable surface.
- Ensure adequate clear space around the treadmill (at least 2 feet on sides and 6 feet behind).
- Keep children and pets away from the treadmill during operation.
- Do not use the treadmill if you weigh over 242 pounds (110 kg).
- Always wear appropriate athletic footwear.
- Unplug the treadmill from the power outlet when not in use or before cleaning/maintenance.
- Do not operate the treadmill if it has a damaged cord or plug, or if it is not working properly.
- Use the safety key feature for emergency stops.

Setup

Your UREVO Under Desk Treadmill comes pre-assembled for convenience. Follow these steps for initial setup:

1. **Unboxing:** Carefully remove the treadmill from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the treadmill on a firm, level surface. Ensure there is sufficient space around the unit for safe operation and heat dissipation. It can be placed under a standing desk or used as a standalone walking pad.
3. **Power Connection:** Locate the power input port on the front of the treadmill. Connect the provided power cord

to the treadmill and then plug it into a grounded electrical outlet.

4. **Power On:** Locate the main power switch, typically near the power cord input. Flip the switch to the 'ON' position. The LED display should illuminate.



Image: The UREVO Under Desk Treadmill ready for use, demonstrating its compact design and remote control functionality.

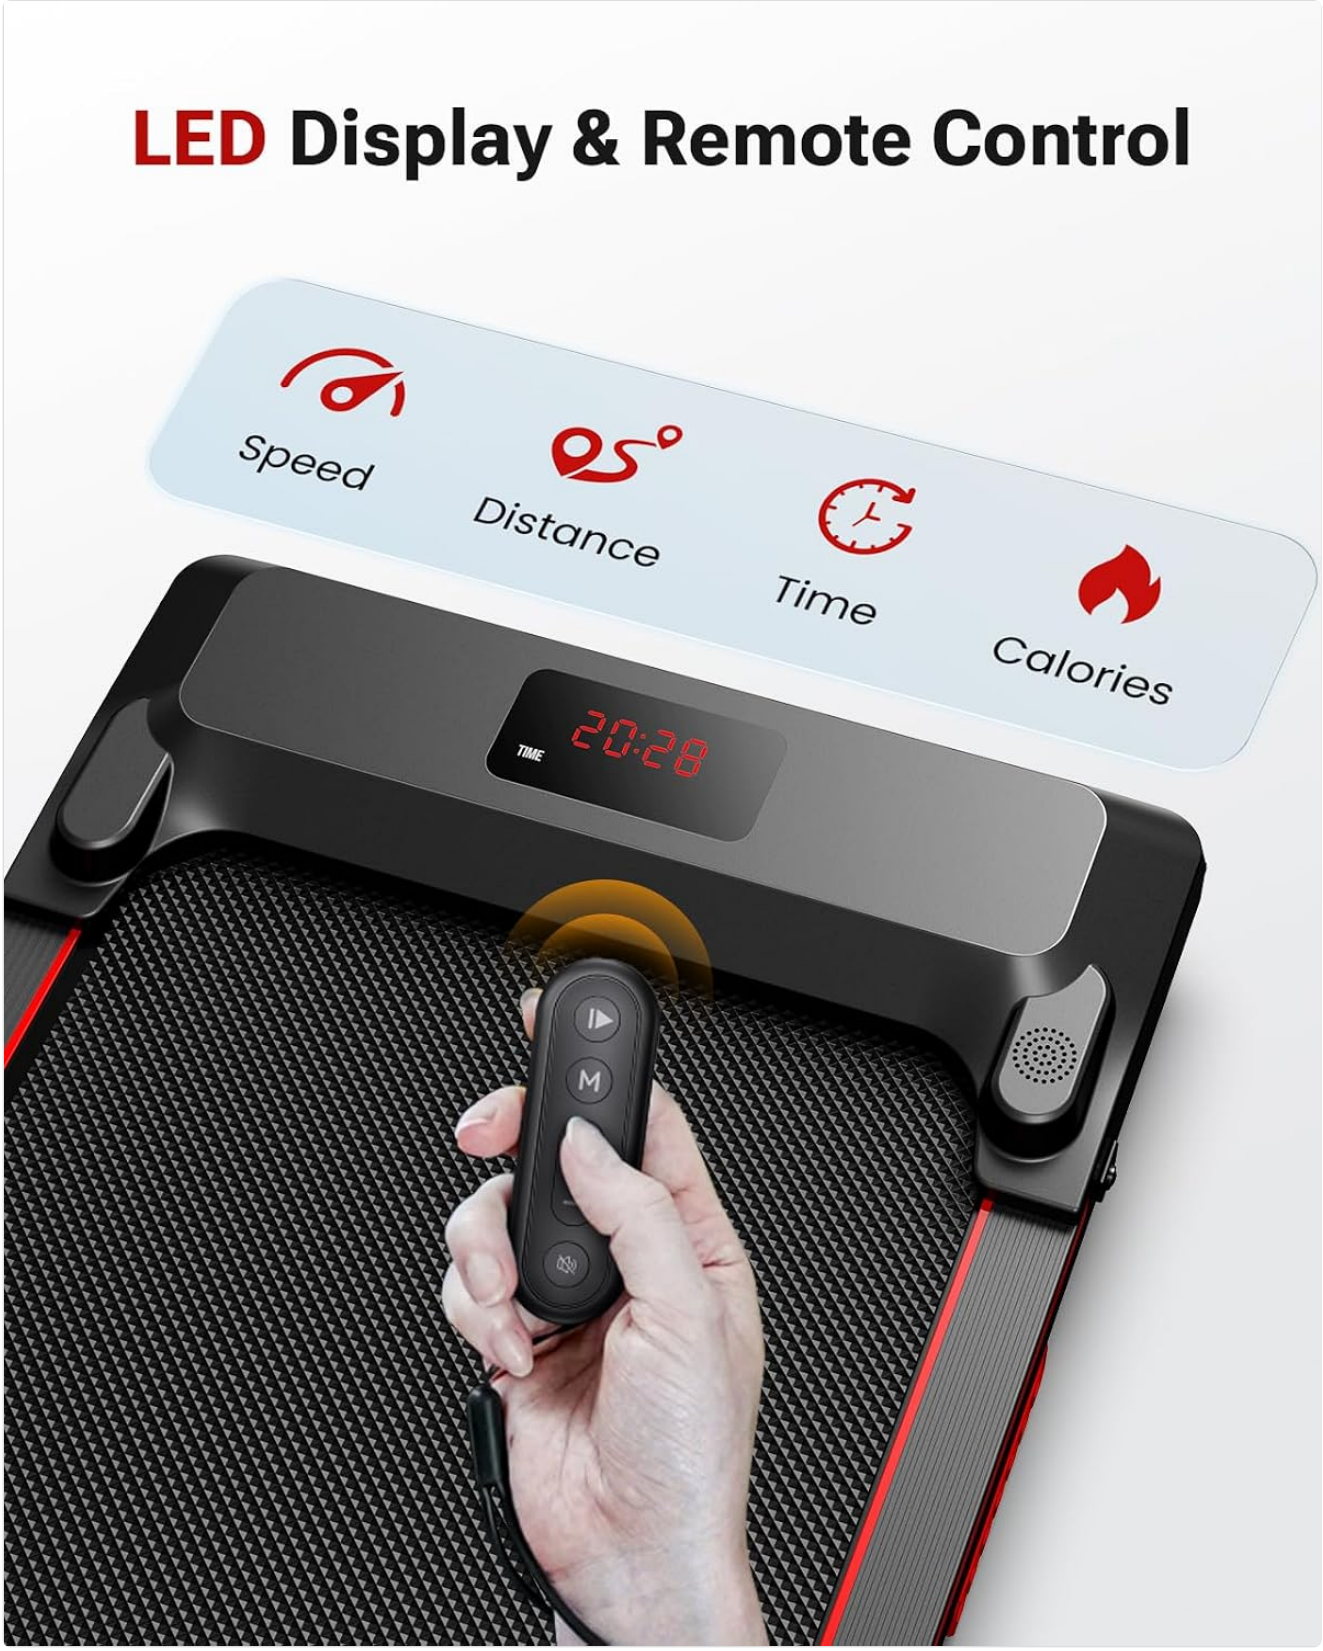


Image: The treadmill's slim profile allows for easy storage under furniture like beds or sofas.

Operating Instructions

Your UREVO Under Desk Treadmill is controlled via the included remote control and features an intuitive LED display.

Remote Control Functions

- **Start/Stop Button:** Press to start or stop the treadmill belt.

- **Speed +/- Buttons:** Adjust the walking speed in increments.
- **Mode Button:** Cycle through different display modes (Time, Distance, Calories, Speed).
- **Mute Button:** Mute or unmute the treadmill's sounds.

LED Display

The integrated LED display provides real-time workout data:

- **Time:** Duration of your workout.
- **Speed:** Current walking speed (Miles per Hour).
- **Distance:** Total distance covered during the workout.
- **Calories:** Estimated calories burned.

Starting a Workout

1. Ensure the treadmill is plugged in and the main power switch is ON.
2. Stand on the side rails of the treadmill, not directly on the belt.
3. Press the 'Start' button on the remote control. The belt will begin to move at a low speed.
4. Carefully step onto the moving belt.
5. Use the 'Speed +' button to increase the speed to your desired pace.

Ending a Workout

1. Press the 'Stop' button on the remote control. The belt will gradually slow down and stop.
2. Once the belt has completely stopped, step off the treadmill.
3. For safety, always turn off the main power switch and unplug the treadmill after use.



Image: The LED display shows workout data, and the remote control allows for easy speed adjustments.



Image: User operating the treadmill with the remote control for convenient speed and mode changes.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your UREVO Under Desk Treadmill.

- **Cleaning:** Wipe down the treadmill with a damp cloth after each use to remove sweat and dust. Do not use abrasive cleaners or solvents.
- **Belt Lubrication:** The running belt requires periodic lubrication to reduce friction and extend its lifespan. Apply silicone oil (included) under the belt every 3-6 months, or after 100 hours of use, depending on usage frequency. Refer to the detailed user manual for specific lubrication instructions.

- **Belt Adjustment:** If the running belt starts to slip or drift to one side, it may need adjustment. Use the provided hex tool to turn the rear roller adjustment bolts. Turn clockwise to tighten or counter-clockwise to loosen, making small adjustments until the belt is centered and taut.
- **Storage:** When not in use, unplug the treadmill and store it in a dry, cool place. Its compact design allows it to be stored under a bed or sofa.



Image: The treadmill's honeycomb shock absorption system, designed for knee protection and smooth operation.

TROUBLESHOOTING

If you encounter any issues with your treadmill, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Treadmill does not power on.	Power cord not connected; Main switch off; Outlet issue.	Check power cord connection; Ensure main switch is ON; Test outlet with another device.
Belt slips or hesitates.	Belt too loose; Lack of lubrication.	Adjust belt tension (see Maintenance); Lubricate the running belt.
Unusual noise during operation.	Loose parts; Belt friction; Motor issue.	Check for loose screws; Lubricate belt; Contact customer support if noise persists.
Remote control not responding.	Battery low/dead; Remote not paired.	Replace remote battery; Refer to user manual for remote pairing instructions.
Display shows error code.	Specific malfunction.	Consult the full user manual for error code definitions and solutions, or contact customer support.

Specifications

Feature	Specification
Brand	UREVO
Model Name	URTM025
Part Number	URTM030
Product Dimensions	46.8"D x 19.3"W x 4.8"H
Item Weight	37.5 Pounds
Material	Alloy Steel
Maximum Speed	4 Miles per Hour
Maximum Weight Recommendation	242 Pounds
Motor Horsepower	2 Horsepower
Number of Programs	12
Screen Size	15.7 Inches
Included Components	User Manual, Safety Key, Remote Control

Warranty & Support

UREVO is committed to providing high-quality products and excellent customer service. Your UREVO Under Desk Treadmill comes with a **one-year warranty** from the date of purchase.
For warranty claims, technical support, or any inquiries regarding your product, please contact UREVO customer service through the official UREVO website or the retailer where you purchased the product.
You can also refer to the official User Manual PDF for more detailed information.UREVO User Manual (PDF)