**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Tecaki Mini Portable Projector X3

# Tecaki Mini Portable Projector X3 User Manual

Model: Mini Portable Projector X3

## 1. Introduction

This manual provides detailed instructions for the safe and efficient operation of your Tecaki Mini Portable Projector X3. Please read this manual thoroughly before use and retain it for future reference. This projector is designed to deliver a high-quality visual experience for home theater and outdoor entertainment.

## 2. Package Contents

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- Tecaki Mini Portable Projector
- X3 Projector Remote Control
- Power Adapter
- User Manual

## 3. Product Overview

### 3.1 Projector Features

- **Stunning 1080P Full HD Resolution:** Supports up to 1920 x 1080 resolution for clear, sharp images and vibrant colors.
- **Multi-Angle Projection with 180° Rotatable Lens:** Project content in any direction, including walls, floors, or ceilings.
- **Auto Keystone Correction:** Automatically adjusts the image for perfect alignment and angle.
- **Compact Size:** Designed for portability and easy placement.
- **Upgraded Two-way Bluetooth 5.2:** Connect to external audio devices or use the projector as a Bluetooth speaker.

- **Timer Shutdown:** Automatically shuts down the projector after a set time (up to 4 hours).

### 3.2 X3 Projector Remote Control





Image: The X3 Projector Remote Control, showing various buttons for power, navigation, volume, and media playback.

The X3 remote control provides convenient access to all projector functions. Familiarize yourself with the button layout:

- **Power Button:** Turns the projector on or off.
- **Mute Button:** Mutes or unmutes the audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Menu Button:** Accesses the main menu.
- **Source Button:** Selects input sources (HDMI, USB, etc.).
- **Volume Up/Down:** Adjusts the audio volume.
- **Play/Pause, Previous/Next:** Controls media playback.

## 4. Setup

### 4.1 Power Connection

1. Connect the power adapter to the projector's power input port.
2. Plug the power adapter into a standard electrical outlet.

### 4.2 Projector Placement

Position the projector on a stable, flat surface. The 180° rotatable lens allows for flexible projection angles. Consider the desired screen size and projection distance.




Image: The Tecaki projector demonstrating its 180-degree rotation capability, allowing projection onto walls, floors, or ceilings from various angles.




Image: A diagram illustrating the compact size of the Tecaki projector and the varying projection distances required for screen sizes of 30 inches, 80 inches, and up to 200 inches.

### 4.3 Initial Power On

Press the Power button on the projector or the X3 remote control to turn on the device.

## 5. Operating Instructions

### 5.1 Focus and Keystone Adjustment

The projector features **Auto Keystone Correction** to automatically adjust the image for a rectangular display. If further adjustment is needed, use the manual focus ring (if present) or digital zoom function.




Image: A visual representation of the projector's auto keystone correction, which adjusts the image angle, and the zoom function, which allows for screen size adjustment from 75% to 100%.

## 5.2 Source Selection

Press the **Source** button on the remote control to cycle through available input sources (e.g., HDMI, USB, Screen Mirroring).

## 5.3 Bluetooth Connection

To connect to Bluetooth devices:

1. Navigate to the Bluetooth settings in the projector's menu.
2. Enable Bluetooth and search for available devices.
3. Select your desired device (e.g., Bluetooth speaker, headphones) from the list to pair.

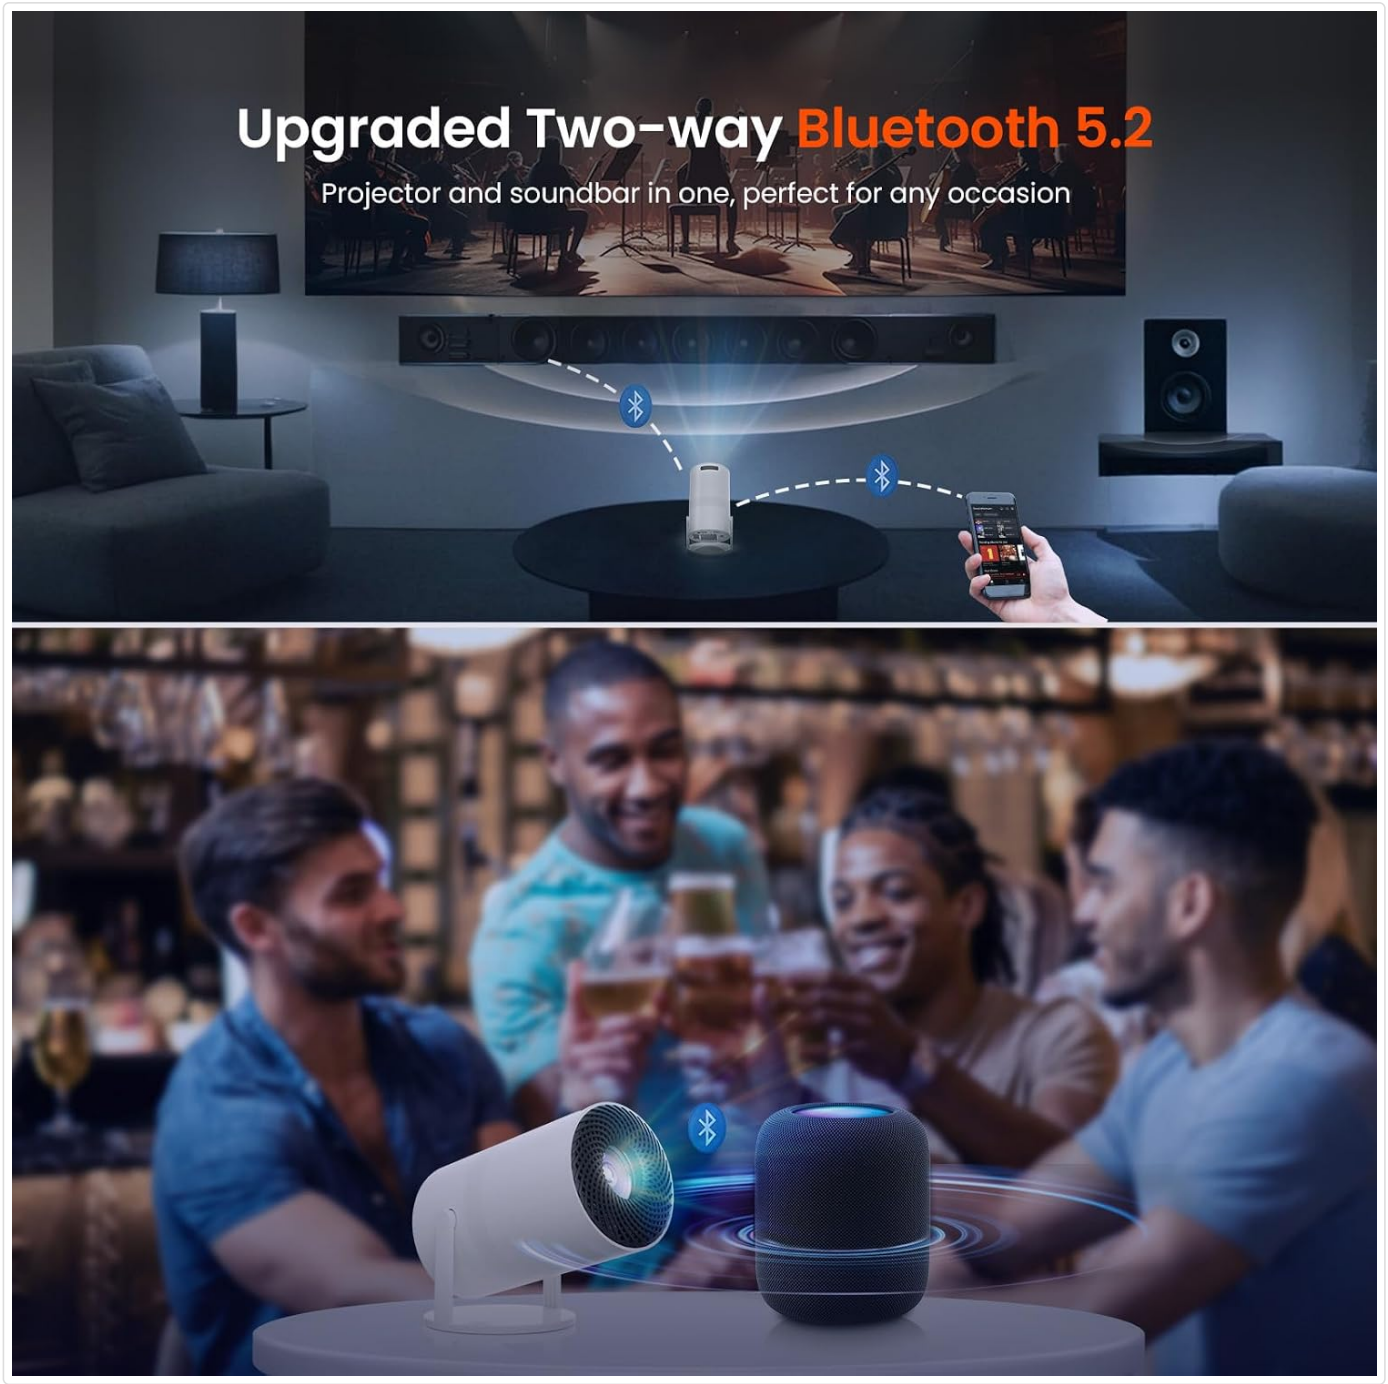



Image: The Tecaki projector demonstrating its two-way Bluetooth 5.2 capability, allowing it to connect to a soundbar or act as a Bluetooth speaker itself.

## 5.4 Timer Shutdown

To set the automatic shutdown timer:

1. Access the projector's settings menu.
2. Locate the 'Timer Shutdown' option.
3. Select the desired shutdown duration (e.g., 1 hour, 2 hours, up to 4 hours).




Image: A visual explanation of the projector's timer shutdown feature, showing options for automatic shutdown after 1, 2, 3, or 4 hours to save energy and ensure uninterrupted sleep.

### 5.5 Using a TV Stick

For expanded entertainment options, connect a compatible TV stick to the projector's HDMI port. Ensure the TV stick is powered correctly (sold separately).




Image: The Tecaki projector displayed with various movie posters in the background, indicating its compatibility with a TV stick for accessing unlimited entertainment content.

## 6. Maintenance

### 6.1 Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid using abrasive cleaners or excessive force.

### 6.2 General Care

- Keep the projector in a cool, dry environment.
- Avoid exposing the projector to direct sunlight or extreme temperatures.
- Ensure proper ventilation around the projector during operation.

## 7. Troubleshooting

### 7.1 No Image Displayed

- Check if the projector is powered on.
- Verify that the input source is correctly selected.
- Ensure all cables (e.g., HDMI) are securely connected.

### 7.2 Blurry Image

- Adjust the focus manually if available.
- Ensure the projection surface is flat and the projector is stable.
- Check if the lens is clean.

### 7.3 No Sound

- Increase the volume on both the projector and the connected source device.
- Check if the projector is muted.
- If using external speakers, ensure they are properly connected and powered.

### 7.4 Remote Control Not Responding

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the projector.

## 8. Specifications

| Feature | Specification |
| --- | --- |
| Brand | Tecaki |
| Display Resolution | 1920 x 1080 (FHD Supported) |
| Display Type | DLP |
| Image Contrast Ratio | 1000:1 |
| Native Resolution | 1920 x 1080 |
| ASIN | B0DWXD2X3T |




Image: An infographic highlighting the Tecaki projector's key features including 1920x1080 resolution support, 10000:1 contrast, increased brightness, vivid colors, stereo sound system, and portable size.

## 9. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact Tecaki customer service through the official website or your retailer. Please have your product model and ASIN (B0DWXD2X3T) ready when contacting support.

© 2026 Tecaki. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0DWXD2X3T**

More documents and user manuals: **https://manuals.plus/**