Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Passky KDM72PLY8B01R1

Passky 72-inch Black Caged Ceiling Fan with Light and Remote Control

Model: KDM72PLY8B01R1

1. Introduction

Thank you for choosing the Passky 72-inch Black Caged Ceiling Fan with Light and Remote Control. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before installation and keep them for future reference.

This ceiling fan features a reversible DC motor, 6-speed settings, a dimmable LED light with 3 color temperature options (3000K, 4000K, 6000K), and a convenient remote control. It is designed for quiet operation and is suitable for various indoor and outdoor spaces (not directly exposed to rain).



Figure 1: Passky 72-inch Black Caged Ceiling Fan with Light and its key features.

2. Safety Information

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Read all instructions and safety information before installing your fan and save these instructions.
- All wiring must be in accordance with national and local electrical codes.
- Installation must be performed by a qualified electrician.
- Ensure the installation site allows the fan blades to rotate without obstruction.
- The fan must be mounted with a minimum of 7 feet (2.1 meters) clearance from the floor to the trailing edge of the blades.
- Do not operate the fan if any part is damaged.
- Turn off power at the circuit breaker before installation or servicing.
- Do not connect the fan to a dimmer switch or fan gear switch, as this may cause abnormal operation.

3. Package Contents

Carefully unpack your fan and check that all contents are included. If any items are missing or damaged, please contact customer support.

- Ceiling Fan Unit
- Light Kit
- Remote Control
- Mounting Hardware
- User Manual

4. Specifications

Brand	Passky
Model Number	KDM72PLY8B01R1
Size	72 Inch
Color	Black-Cage
Power Source	AC 120V Power, DC Motor
Wattage	55 watts
Motor Type	DC Motor
Number of Blades	8
Air Flow Capacity	6300 Cubic Feet Per Minute
Noise Level	35 Decibels
Light Type	LED (Dimmable, 3CCT: 3000K, 4000K, 6000K)
Control Method	Remote Control
Special Features	6 Speeds, Reversible, 1/4/8 Hour Timer, Memory Function
Product Dimensions (D x W x H)	31.9"D x 12.6"W x 8.3"H
Item Weight	26.2 Pounds
Indoor/Outdoor Usage	Indoor (Suitable for covered outdoor spaces, not direct rain exposure)



Figure 2: Product Information and Dimensions.

5. Installation

The installation of this ceiling fan requires electrical wiring and secure mounting. It is recommended that installation be performed by a qualified electrician. A step-by-step illustrated guide is included in the physical manual.

Pre-Installation Checklist:

- Ensure power is disconnected at the circuit breaker.
- Verify that the mounting location can support the fan's weight (26.2 lbs).
- Confirm that the ceiling junction box is rated for fan support.
- Gather all necessary tools (screwdriver, wire strippers, ladder, etc.).

Important Notes:

- This fan is designed for AC 120V power. It is not applicable to 220V systems.

- Do not connect the fan to a dimmer switch or fan gear switch. Use only standard on/off switches for power control.

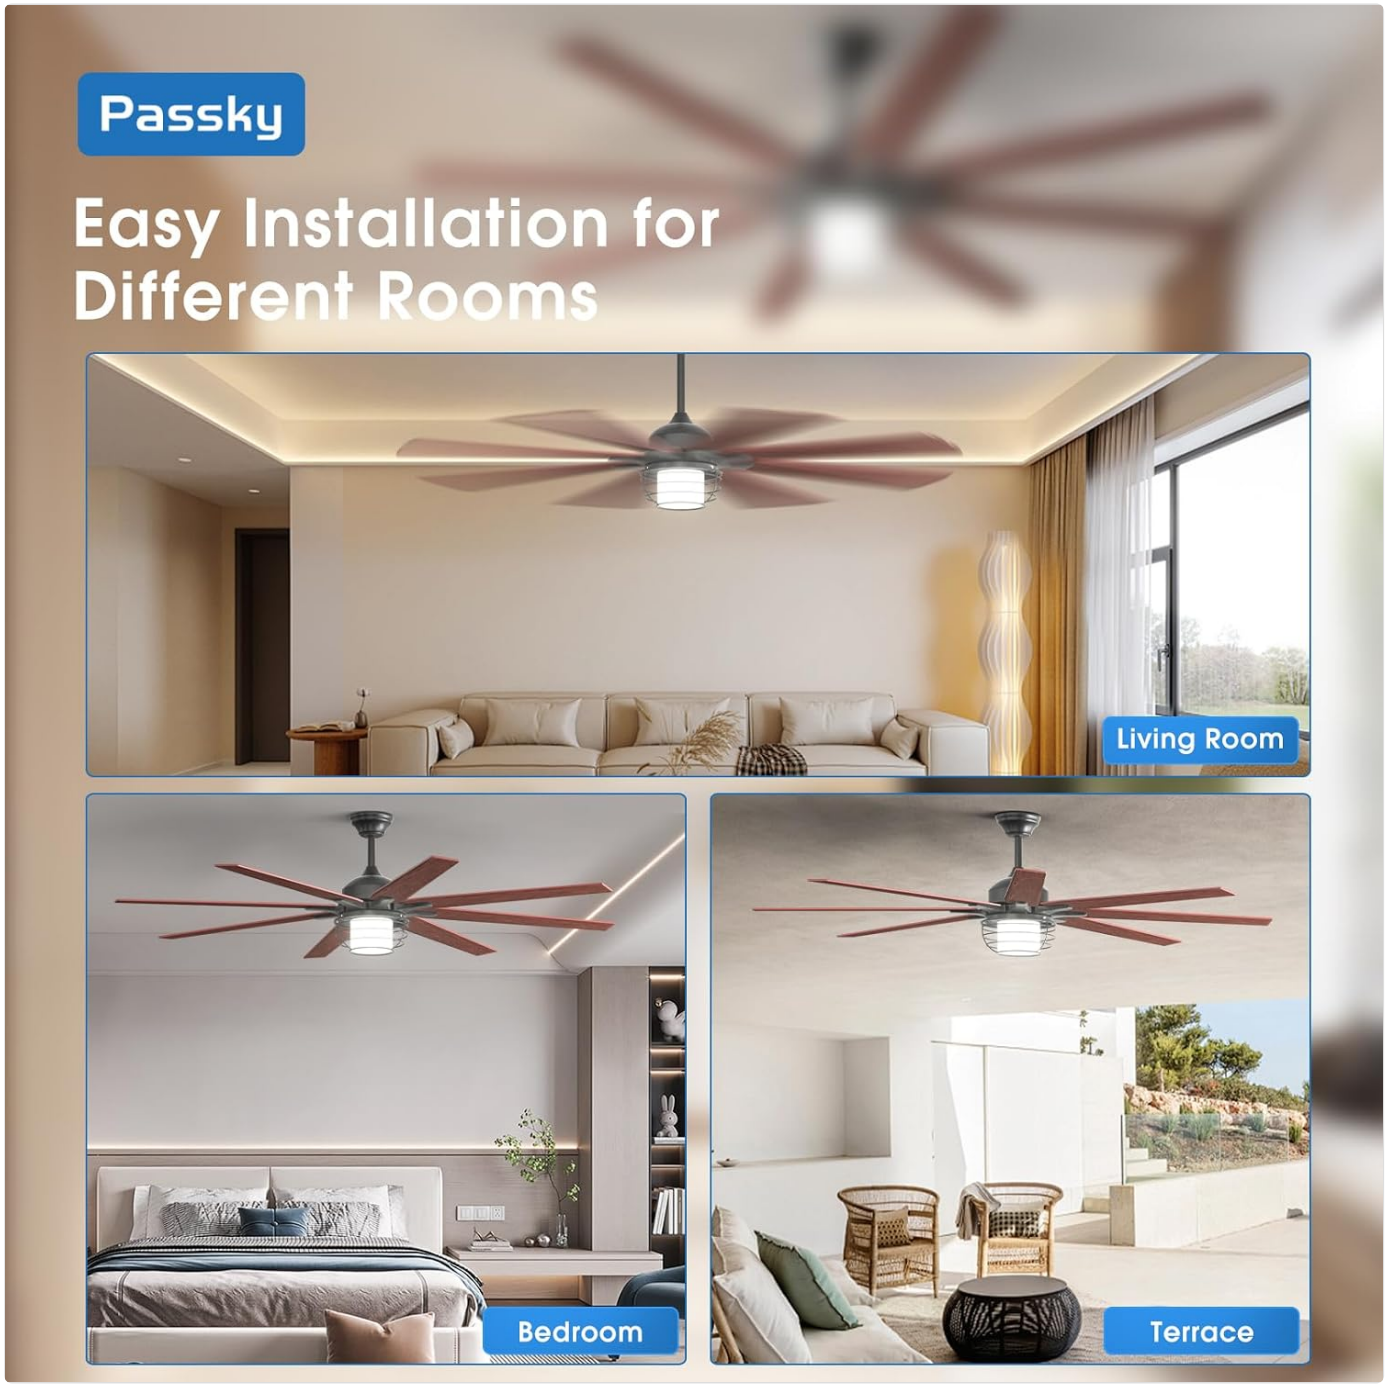


Figure 3: Example installations in different room types.

6. Operation

Your Passky ceiling fan is operated using the included remote control. Ensure the remote has fresh batteries installed.



Figure 4: Remote Control Functions.

Remote Control Functions:

- **ALL OFF:** Turns off both the fan and the light.
- **Light ON/OFF:** Toggles the light on or off.
- **Adjust Brightness:** Dims the light from 10% to 100%.
- **Change Color Temperature:** Cycles through 3000K (warm white), 4000K (cool white), and 6000K (daylight white).
- **Fan Speed 1-6:** Adjusts the fan speed from 1 (lowest) to 6 (highest).
- **Reverse:** Changes the direction of the fan blades for summer (downward airflow) or winter (upward airflow).
- **Natural Wind:** Activates a mode that simulates natural breeze by varying fan speeds.
- **2H/4H Timer:** Sets the fan to turn off automatically after 2 or 4 hours.

Fan Speed Settings:

- **Level 1-2:** Low, comfortable wind for gentle air circulation.
- **Level 3-4:** Medium, natural wind for moderate cooling.

- **Level 5-6:** High, strong cooling wind for maximum airflow.



Figure 5: Fan Speed Levels.

Reversible DC Motor:

The reversible DC motor allows you to change the direction of the fan blades.

- **Summer Mode:** Downward airflow creates a cooling effect.
- **Winter Mode:** Upward airflow circulates warm air trapped near the ceiling, helping to warm the room.



Figure 6: Reversible DC Motor Function.

Customizable LED Light:

The integrated LED light offers adjustable brightness and color temperature to suit your preferences.

- **Brightness:** Adjust from 10% (dim) to 100% (bright).
- **Color Temperature:** Choose between 3000K (warm light), 4000K (cool white), and 6000K (daylight white).



Figure 7: Customizable Light Settings.

Memory Function:

The fan and light settings (color temperature, brightness, and fan speed) will be remembered when the unit is turned off and back on, whether by remote or a wall switch.

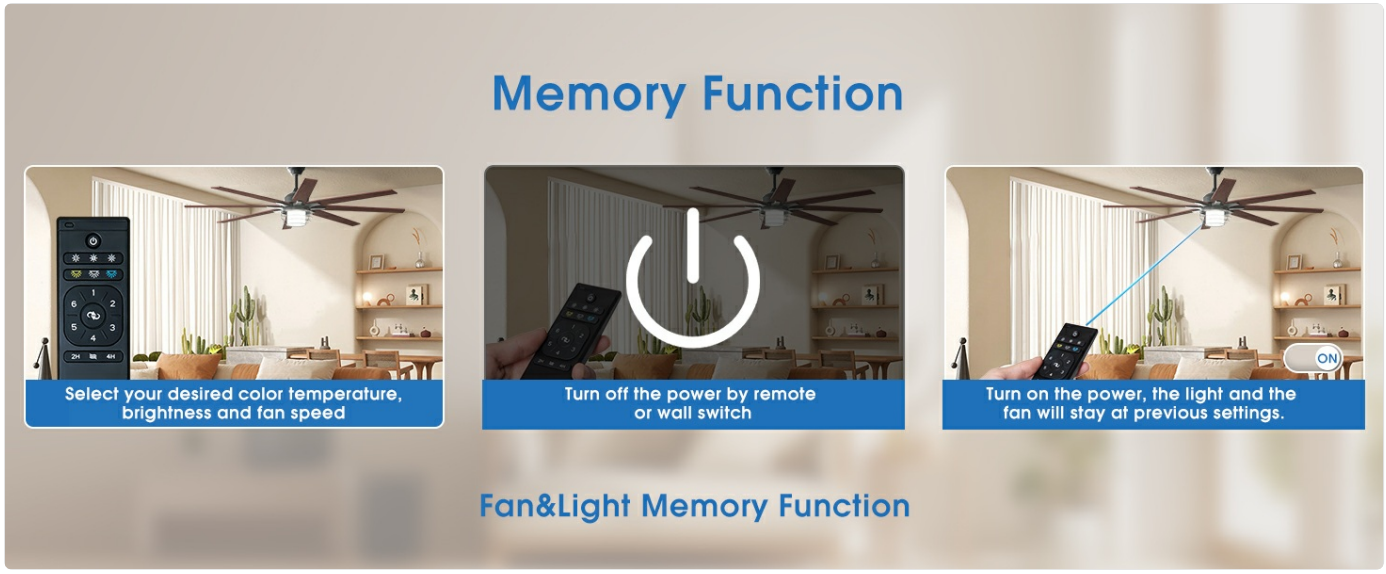


Figure 8: Memory Function in action.

7. Maintenance

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tight and that blades are not bent or damaged. A balancing kit (not included) may be used if necessary.
- **Light Kit:** The LED light source is integrated and generally does not require replacement. If issues arise, contact customer support.
- **Power Off:** Always turn off power at the circuit breaker before performing any cleaning or maintenance.

8. Troubleshooting

If you experience issues with your fan, refer to the following common troubleshooting steps.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Ensure all connections are secure (consult electrician if unsure); Replace remote control batteries.
Light does not work	No power to the light; Loose wire connections; LED driver issue.	Check circuit breaker; Ensure connections are secure; Contact customer support if LED is faulty.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Use a balancing kit (if available); Ensure mounting bracket is securely fastened.
Remote control not working	Low battery; Remote not paired; Obstruction between remote and receiver.	Replace batteries; Refer to remote pairing instructions (if applicable); Ensure clear line of sight.
Fan makes unusual noise	Loose screws; Motor issue; Blades hitting an obstruction.	Check and tighten all screws; Ensure no obstructions; Contact customer support if motor noise persists.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact Passky customer support.

9. Warranty and Support

Passky is committed to customer satisfaction and provides comprehensive support for your product.

- **Motor Warranty:** 10 years
- **Other Parts Warranty:** 2 years
- **Customer Service:** 24-hour technical support via email (7 days a week) and phone customer service (Monday through Friday).
- **Logistics Damage:** If any part of the package is damaged due to logistics, please contact us for compensation or a satisfactory solution.

For any questions regarding installation, operation, or warranty claims, please refer to the contact information provided in your physical manual or visit the official Passky website.



Figure 9: Warranty and Support Details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DWXLBYCX

More documents and user manuals: **https://manuals.plus/**