EUREKA NEW730

Eureka RapidWash NEW730 Cordless Wet/Dry Vacuum Floor Cleaner User Manual

Model: NEW730 | Brand: EUREKA

1. Introduction

Thank you for choosing the Eureka RapidWash NEW730 Cordless Wet/Dry Vacuum Floor Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This includes:

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle the plug or appliance with wet hands.
- Exercise extreme caution when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Unplug from outlet when not in use and before servicing.
- This appliance is for household use only.

3. Package Contents

Please check the package contents to ensure all items are present and undamaged:

- Eureka RapidWash NEW730 Main Unit
- Battery
- Charging Dock
- User Manual
- Roller Brush (pre-installed or spare)
- Cleaning Solution
- Cleaning Brush
- HEPA Filter (pre-installed or spare)



Image: Eureka RapidWash NEW730 main unit with its accessories including the charging dock, cleaning solution, roller brush, cleaning brush, and filter.



Image: A visual representation of the Eureka RapidWash NEW730 and all components included in the package, such as the main unit, charging base, user manual, cleaning solution, roller brush, cleaning brush, and filter.

4. Product Overview and Key Features

The Eureka RapidWash NEW730 is a powerful cordless wet/dry vacuum floor cleaner designed for efficient and thorough cleaning. Key features include:

- **Anti-tangle 2.0 Roller Brush Design:** Features a denser comb and coordinated scraper to minimize hair tangling, ensuring consistent cleaning performance.
- **Enhanced Edge Cleaning:** An innovative rotating brush cleans close to walls and corners, leaving no area untouched.
- **Hot Water Self-Cleaning:** Utilizes 85°C hot water to effectively remove stubborn stains and thoroughly rinse the roller brush.
- **5-Minute Rapid Self-Drying:** Dries the brush completely with 85°C hot air in just 5 minutes, preventing mold and odors.

- **Larger Water Tanks:** Equipped with a 700 ml clean water tank and a 50% larger dirty water tank for extended cleaning sessions.
- **Long Battery Life:** A 4,000 mAh*6 battery provides up to 40 minutes of continuous cleaning.
- **Smart LED Display and Alerts:** A bright LED screen shows battery level, cleaning mode, dirty water tank alerts, and floor dirt level. Includes voice reminders and a silent mode.
- **170° Reclining Design:** Allows for effortless cleaning under furniture and in low spaces without dirty water leakage.
- **Powerful 21,600 Pa Suction:** Efficiently vacuums and washes, reducing cleaning time for stubborn stains.
- **Multi-Mode Cleaning:** Includes a rapid mode for efficient water absorption, suitable for humid conditions or bathroom cleaning.



Image: The anti-tangle 2.0 roller brush design, featuring a dense comb and scraper to prevent hair from wrapping around the brush during cleaning.



Image: The Eureka RapidWash NEW730 effectively cleaning different types of spills, highlighting its powerful suction and multi-mode functionality for various cleaning needs.

5. Setup and Assembly

Follow these steps to set up your Eureka RapidWash NEW730 for first use:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Assemble Handle:** Insert the handle into the main unit until it clicks securely into place.
3. **Install Battery:** If the battery is not pre-installed, insert it into its compartment until it locks.
4. **Charge Battery:** Place the main unit onto the charging dock. Ensure the power adapter is connected to the dock and plugged into a wall outlet. The LED display will indicate charging status. Fully charge the battery before first use (approximately 4-5 hours).
5. **Fill Clean Water Tank:** Remove the clean water tank from the main unit. Fill it with clean water and, if desired, a

small amount of Eureka cleaning solution (do not overfill). Reattach the tank securely.

6. Operating Instructions

Your Eureka RapidWash NEW730 is designed for both wet and dry cleaning. Here's how to use it:

6.1 Starting the Appliance

1. Ensure the clean water tank is filled and the dirty water tank is empty.
2. Press the Power button to turn on the appliance. The LED display will illuminate.
3. Select your desired cleaning mode using the Mode button (e.g., Standard, Rapid).

6.2 Cleaning Your Floors

- Gently tilt the main unit back to engage the roller brush.
- Move the cleaner slowly forward and backward over the area to be cleaned. The appliance will spray water, scrub, and vacuum simultaneously.
- For stubborn stains, you may pause over the area for a few seconds to allow the solution to work.
- Utilize the 170° reclining design to clean under furniture and in hard-to-reach areas.
- The innovative rotating brush ensures thorough edge cleaning on both sides.



Image: A user demonstrating the one-step cleaning process, where the device vacuums, washes, and collects dirty water simultaneously.



Image: Two Eureka RapidWash NEW730 units cleaning along the edges of kitchen cabinets, illustrating the effective dual-side edge cleaning capability.

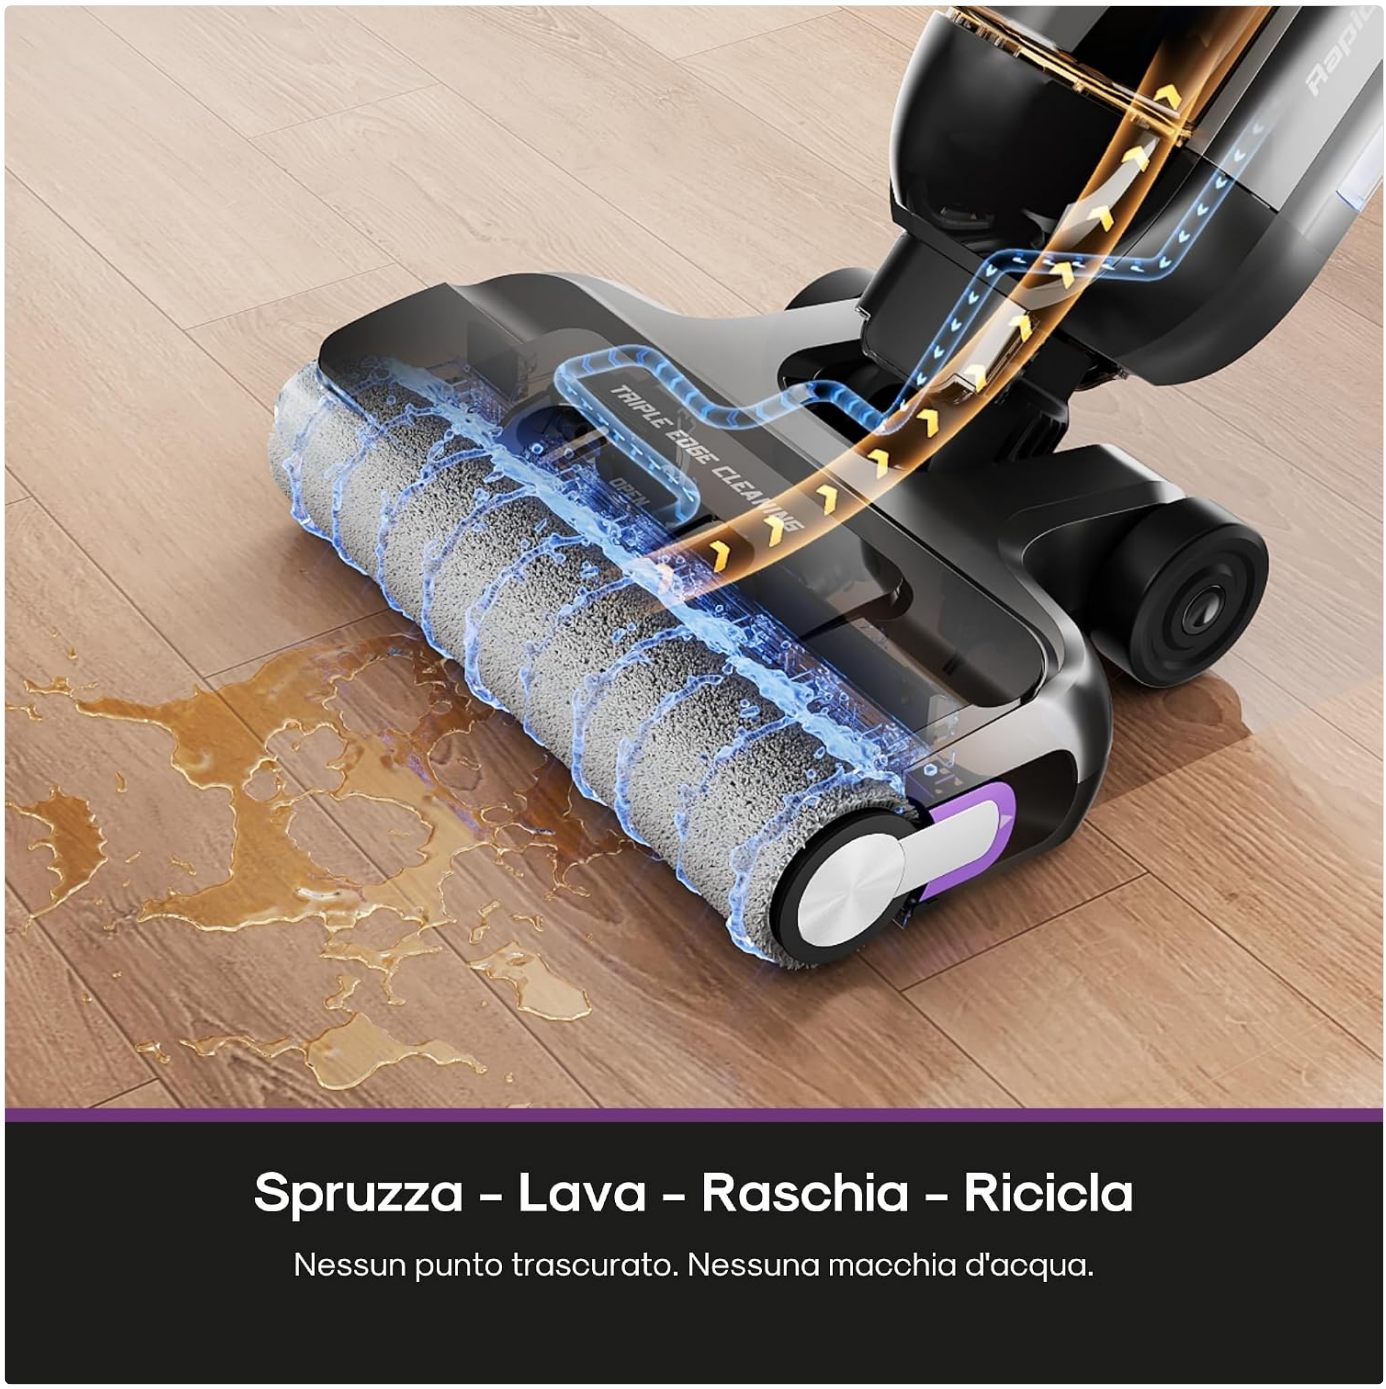


Image: A detailed view of the brush head's operation, demonstrating the spray, wash, scrape, and dirty water recycling process for thorough cleaning.



Image: The Eureka RapidWash NEW730 reclined at a 170-degree angle, effectively cleaning under a coffee table, showcasing its ability to reach low spaces.

6.3 LED Display and Voice Prompts

The LED screen provides real-time information. Pay attention to alerts for battery level, cleaning mode, and when the dirty water tank is full. Voice prompts offer convenient guidance, which can be toggled off for silent operation.

7. Maintenance and Care

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

7.1 Hot Water Self-Cleaning and Rapid Self-Drying

1. After each cleaning session, place the appliance back on the charging dock.
2. Initiate the self-cleaning cycle (refer to the LED display or user interface for instructions). The appliance will use

85°C hot water to thoroughly clean the roller brush.

3. Following self-cleaning, the rapid self-drying mode will activate, using 85°C hot air to dry the brush in approximately 5 minutes, preventing mold and odors.



Image: The Eureka RapidWash NEW730 on its charging dock, performing a hot water self-cleaning cycle, indicated by visible steam, to keep the roller brush clean and hygienic.

7.2 Emptying and Cleaning the Dirty Water Tank

- After each use, or when the LED display indicates, remove the dirty water tank.
- Carefully empty the contents into a drain.
- Rinse the tank thoroughly with clean water. Ensure any debris or hair is removed.
- Allow the tank to air dry completely before reattaching it to the appliance.

7.3 Cleaning the Roller Brush and Filter

- Even with self-cleaning, periodically inspect the roller brush for any remaining tangled hair or debris. Use the

provided cleaning brush to remove stubborn residue.

- Remove the HEPA filter and tap it gently to dislodge dust. Rinse under running water if necessary, but ensure it is completely dry before reinserting.
- Replace the HEPA filter every 3-6 months, or as needed, to maintain optimal suction and air quality.

8. Troubleshooting

If you encounter any issues with your Eureka RapidWash NEW730, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted. Check charging dock connection.
Poor suction or cleaning performance.	Dirty water tank full, clean water tank empty, clogged roller brush, or dirty filter.	Empty dirty water tank. Refill clean water tank. Clean roller brush and filter.
Water leakage.	Water tanks not properly sealed or installed.	Ensure both clean and dirty water tanks are securely attached and their seals are intact.
Roller brush not rotating.	Obstruction in the brush area or motor issue.	Turn off and unplug the appliance. Remove any obstructions from the roller brush. If the problem persists, contact customer support.
Unpleasant odor during self-drying.	Dirty water tank not emptied/cleaned, or roller brush not thoroughly cleaned.	Ensure dirty water tank is emptied and rinsed after each use. Run self-cleaning cycle again. Manually clean roller brush if necessary.

If the problem persists after trying these solutions, please contact Eureka customer support.

9. Technical Specifications

Feature	Specification
Brand	EUREKA
Model	RapidWash NEW730
Special Feature	High Power
Filter Type	HEPA Filter
Cordless	Yes
Suction Power	21,600 Pa

Feature	Specification
Battery Capacity	4,000 mAh*6
Run Time	Up to 40 minutes
Clean Water Tank Capacity	700 ml
Hot Water Self-Cleaning Temperature	85°C
Hot Air Drying Temperature	85°C
Drying Time	5 minutes

10. Warranty and Customer Support

Your Eureka RapidWash NEW730 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty duration and coverage.
For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact Eureka customer support:

- **Website:** Visit the official EUREKA website for support resources and contact information.
- **Email/Phone:** Refer to your warranty card or the EUREKA website for specific email addresses or phone numbers for your region.

When contacting support, please have your model number (NEW730) and purchase date available.

© 2024 EUREKA. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question