Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Yixinxin YXXUP006B01

Yixinxin YXXUP006B01 Waterproof Digital Camera User Manual

Model: YXXUP006B01

1. Introduction

Thank you for choosing the Yixinxin YXXUP006B01 Waterproof Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

2. Package Contents

Verify that all items listed below are included in your package:

- Yixinxin YXXUP006B01 Digital Camera Body
- 1500mAh Lithium-ion Battery
- 32GB Micro SD Card
- Type-C USB Cable
- Pouch
- Lanyard
- User Manual (this document)



Image 2.1: Included accessories with the Yixinxin YXXUP006B01 camera.

3. Product Overview

The Yixinxin YXXUP006B01 is a robust digital camera designed for various environments, including underwater use. It features 4K Ultra HD video recording, 64MP high-resolution photos, and is waterproof up to 33 feet (10 meters). The camera includes autofocus, 16X digital zoom, and a dual-screen design for versatile shooting.



Image 3.1: Front view of the Yixinxin YXXUP006B01 camera, highlighting the front screen and lens.



Image 3.2: Overview of key features including 4K UHD video, 33FT waterproof rating, anti-shake, 16X zoom, and macro photography.

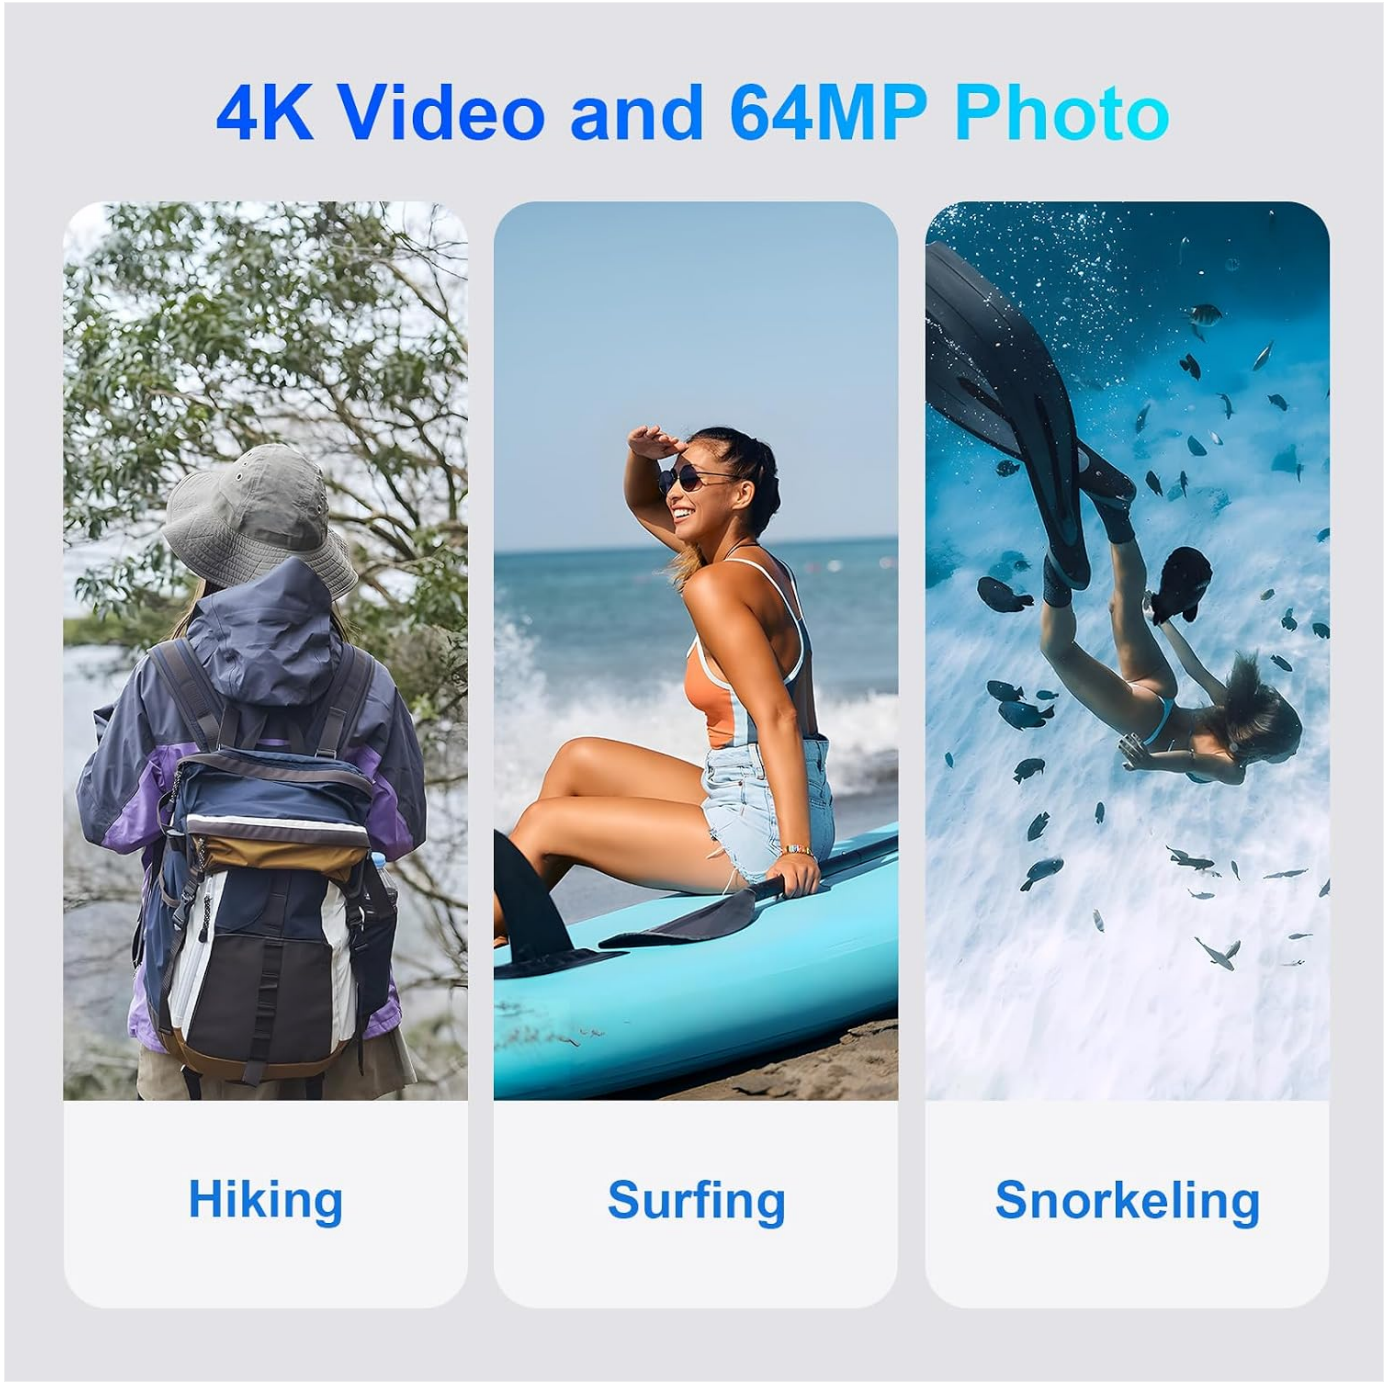


Image 3.3: The camera is suitable for various activities such as hiking, surfing, and snorkeling.

4. Setup

4.1 Inserting the Battery and Memory Card

1. Locate the battery/memory card compartment door on the side of the camera.
2. Slide the lock mechanism to the 'OPEN' position and carefully open the door.
3. Insert the 1500mAh Lithium-ion battery, ensuring the correct orientation as indicated inside the compartment.
4. Insert the 32GB Micro SD card into the designated slot until it clicks into place.
5. Close the compartment door firmly and slide the lock mechanism to the 'CLOSE' position to ensure a waterproof seal.

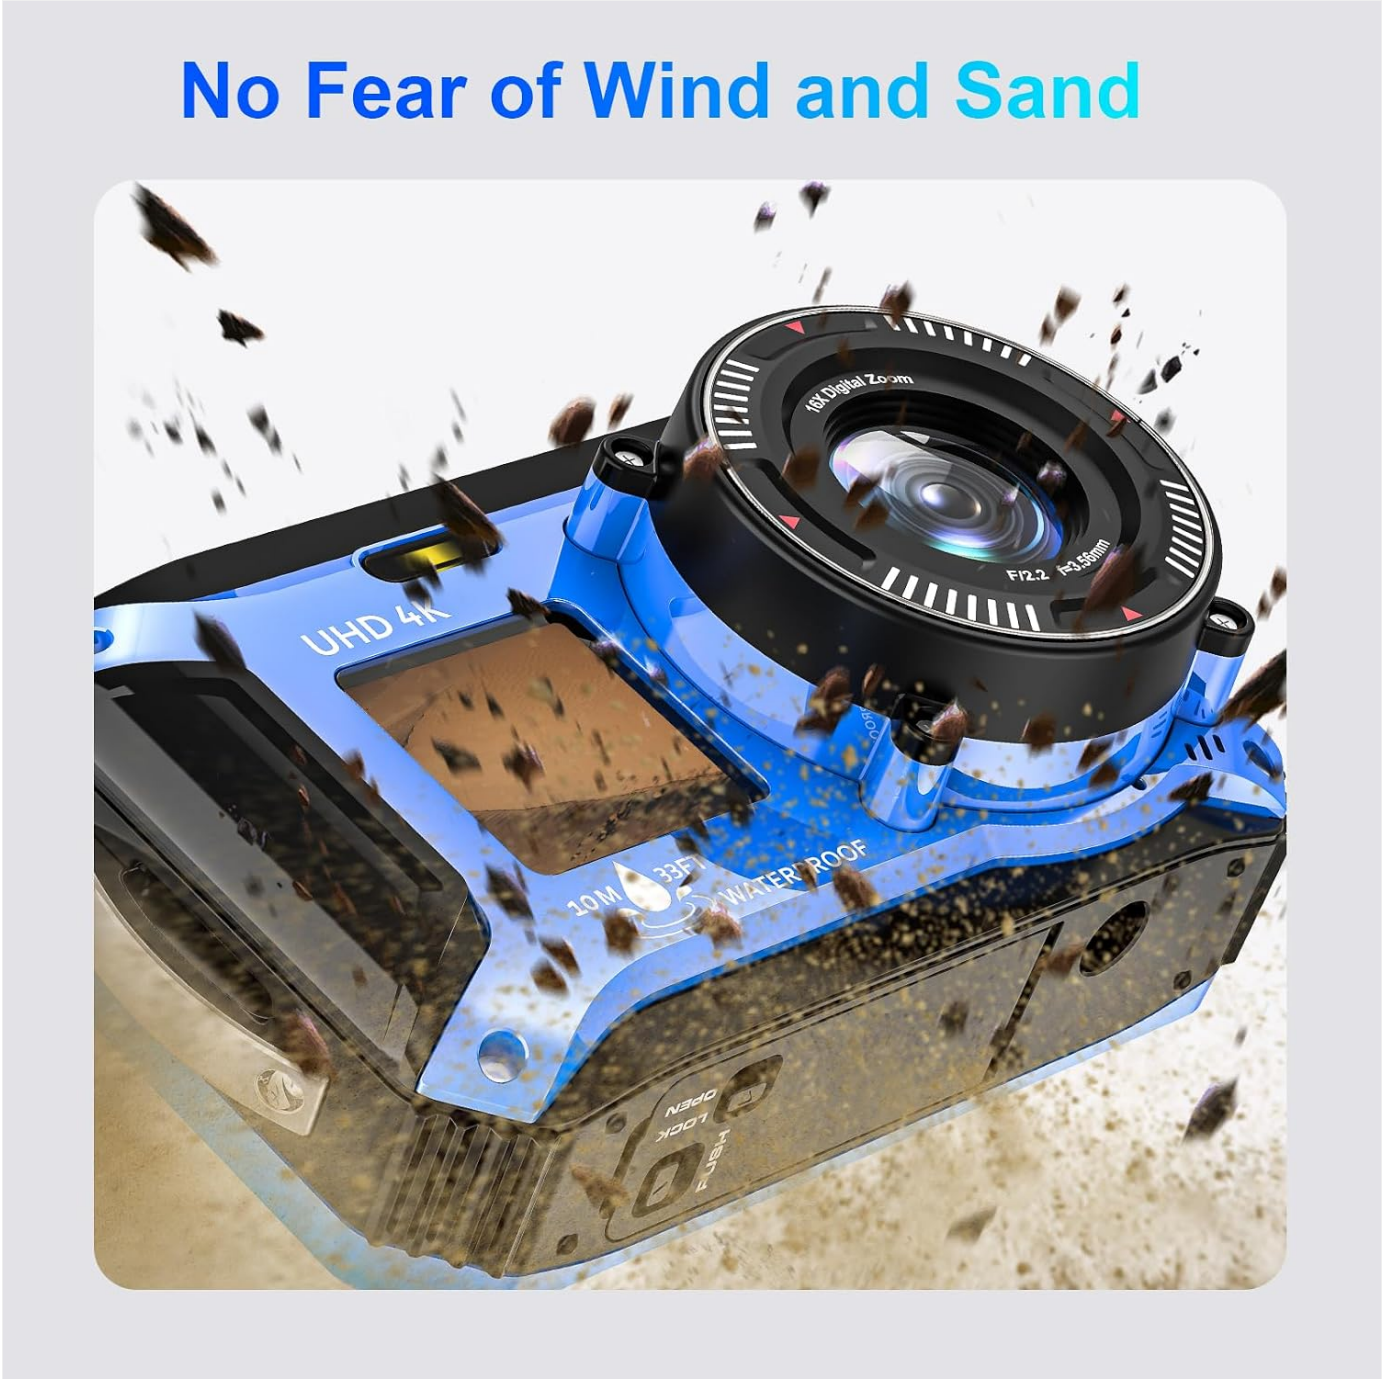


Image 4.1: Side view of the camera, indicating the battery and memory card compartment.

4.2 Charging the Camera

1. Connect the Type-C USB cable to the camera's USB port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will turn off or change color once charging is complete.
4. A full charge provides approximately 100 minutes of continuous 4K video recording.



Image 4.2: The 1500mAh battery provides extended usage time.

5. Operating Instructions

5.1 Power On/Off

- To power on: Press and hold the Power button for a few seconds.
- To power off: Press and hold the Power button again until the camera shuts down.

5.2 Basic Photography

1. Turn on the camera.
2. Frame your shot using either the front or rear display.
3. Half-press the shutter button to activate autofocus. The focus frame will turn green when focus is achieved.
4. Fully press the shutter button to capture the photo.



Image 5.1: The autofocus system ensures clear and sharp images with a half-press of the shutter button.

5.3 Video Recording

1. Switch to video mode using the Mode button.
2. Press the shutter button to start recording. A red indicator will typically appear on the screen.
3. Press the shutter button again to stop recording.

5.4 Underwater Use

The camera is designed to be waterproof up to 33 feet (10 meters). Before each underwater use, ensure the battery/memory card compartment door is securely closed and locked. Rinse the camera with fresh water after use in saltwater and allow it to dry completely before opening any compartments.

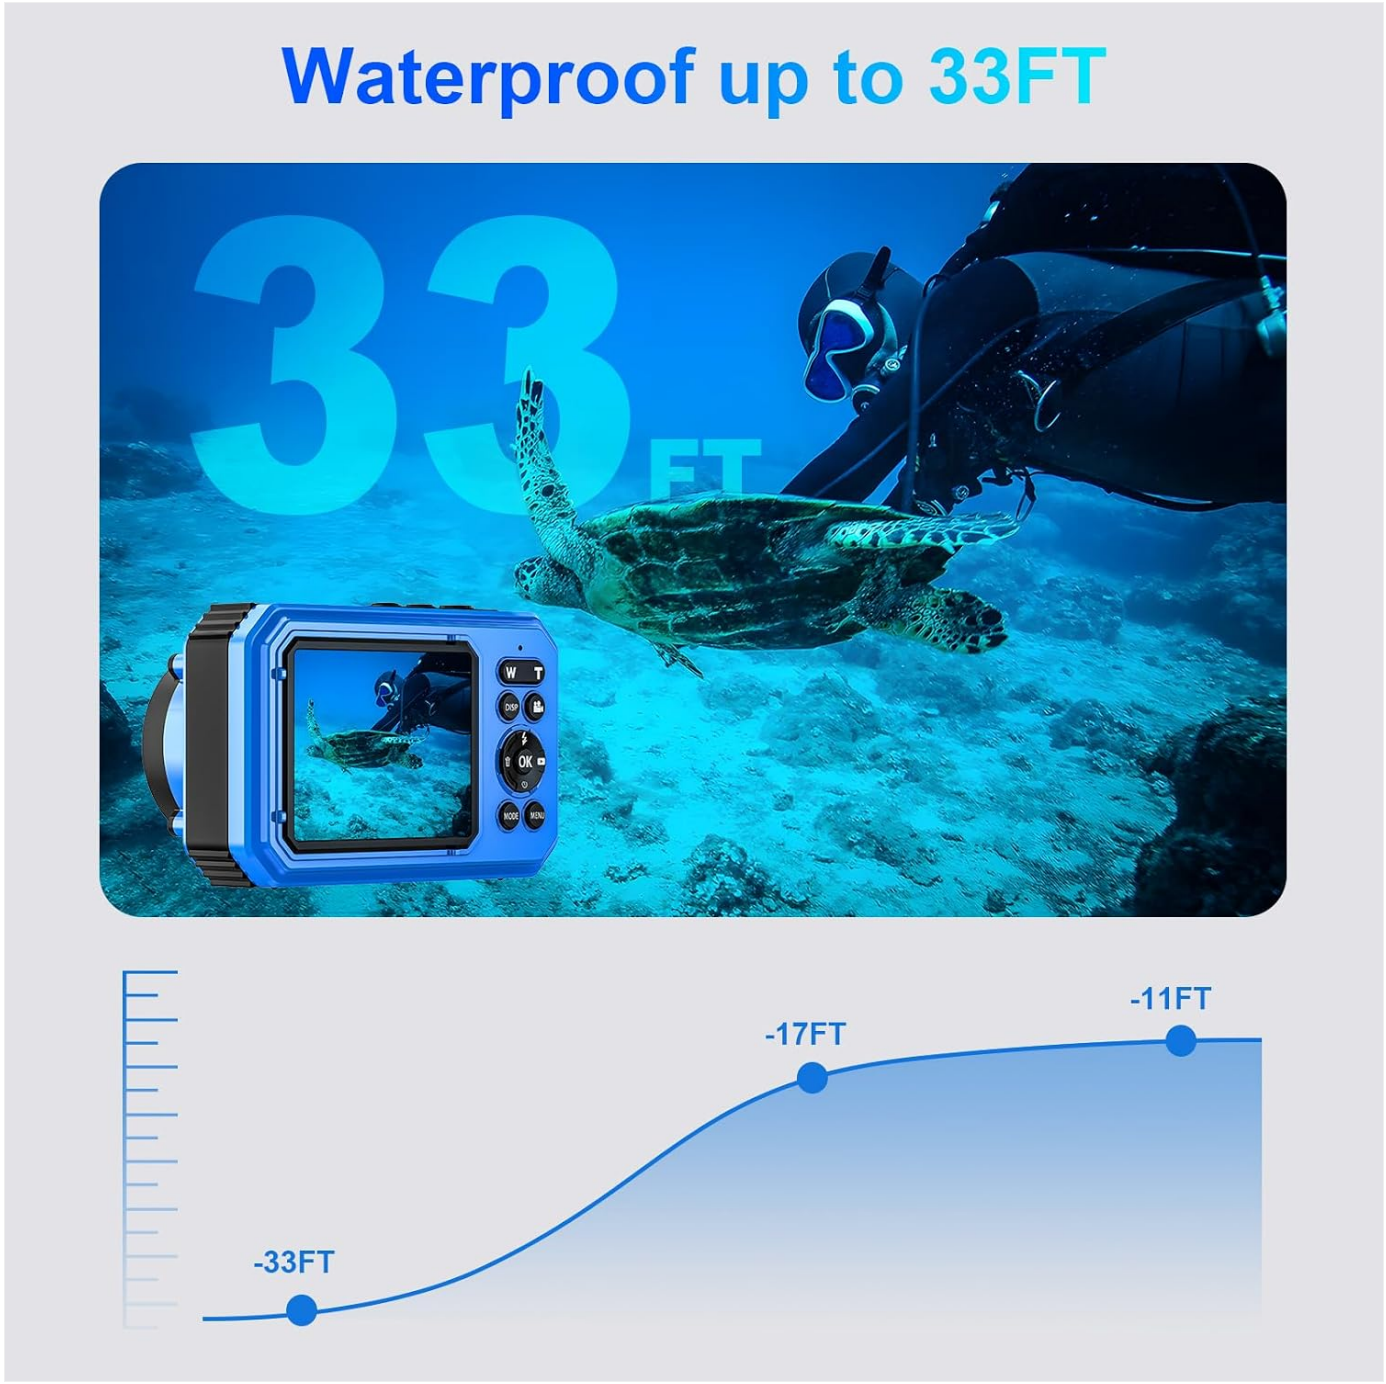


Image 5.2: The camera is waterproof up to 33 feet (10 meters) for underwater adventures.

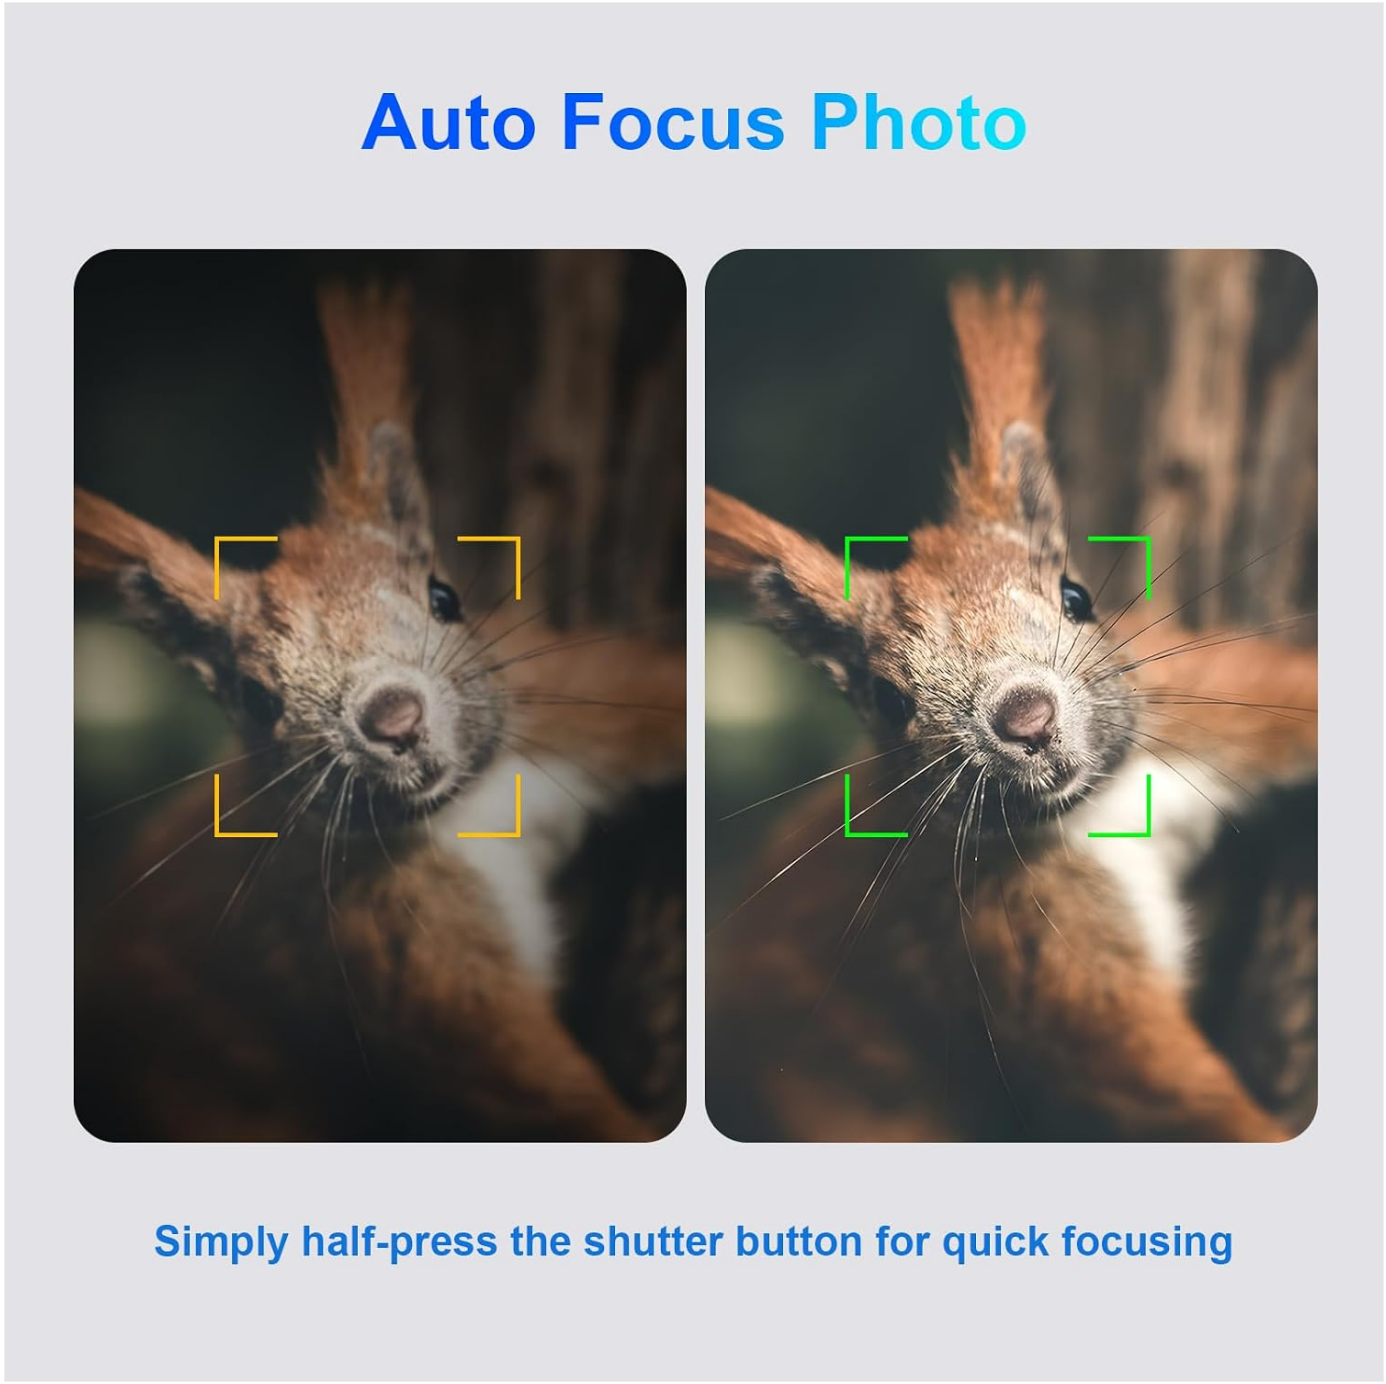


Image 5.3: The camera's dustproof design allows for use in challenging environments.

5.5 Dual Screen Functionality

The camera features a 2.8-inch rear IPS HD screen and a 1.4-inch front HD screen. This allows for easy framing of selfies and vlogs. Use the dedicated button (if available) or menu option to switch between the front and rear displays.



Image 5.4: The camera features a dual-screen design with a 1.4-inch front screen and a 2.8-inch rear screen for versatile viewing.

6. Maintenance

6.1 Cleaning

- **Camera Body:** Wipe with a soft, damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly with fresh water. Ensure all compartments are sealed during cleaning.
- **Lens and Screens:** Use a specialized lens cleaning cloth and solution. Avoid abrasive materials that could scratch the surfaces.
- **After Saltwater Use:** Rinse the entire camera thoroughly with fresh water to remove salt residue. Do not open any compartments until the camera is completely dry.

6.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the battery to prevent leakage.
- Keep the camera in its protective pouch to prevent scratches and dust accumulation.

7. Troubleshooting

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Camera does not power on	Low battery; Battery incorrectly inserted; Camera malfunction	Charge the battery; Reinsert battery correctly; Contact support if issue persists
Cannot take photos/videos	Memory card full; Memory card error; Incorrect mode selected	Delete files or replace card; Reformat card (backup data first); Switch to photo/video mode
Images are blurry	Lens dirty; Out of focus; Insufficient light	Clean the lens; Ensure autofocus engages (half-press shutter); Use in better lighting conditions
Water leakage after underwater use	Compartment door not properly sealed; Seal damaged	Ensure door is securely closed and locked before use; Inspect seals for damage and contact support if necessary

Problem	Possible Cause	Solution
Camera freezes or becomes unresponsive	Software glitch; Battery issue	Remove and reinsert battery to reset; Ensure battery is charged; Update firmware if available

8. Specifications

Key technical specifications for the Yixinxin YXXUP006B01 camera:

Feature	Specification
Brand	Yixinxin
Model Number	YXXUP006B01
Color	Blue
Product Type	Compact Digital Camera
Video Resolution	4K (2160p)
Max Image Resolution	64 Megapixels
Waterproof Level	33FT (10 meters)
Display Screens	2.8-inch rear IPS HD, 1.4-inch front HD
Zoom Type	16X Digital Zoom
Focus Type	Autofocus
Image Stabilization	Digital
Battery Type	1500mAh Lithium-ion
Supported Storage	Micro SD (up to 256GB, 32GB included)
Connectivity	USB Type-C
ISO Range	100-12800
Aperture	F2.2
Burst Mode Speed	30 frames per second

9. Warranty and Support

9.1 Warranty Information

This Yixinxin product is covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Yixinxin YXXUP006B01 camera, please contact our customer support team. Refer to your purchase documentation or the retailer's website for specific contact details.

© 2025 Yixinxin. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DXZZKL4Q

More documents and user manuals: **https://manuals.plus/**