GOBOULT XO Pro

GOBOULT XO Pro Wired Earphones User Manual

Model: XO Pro

INTRODUCTION

Thank you for choosing the GOBOULT XO Pro Wired Earphones. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new earphones. Please read it carefully to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Verify that all items are present in your package:

- GOBOULT XO Pro Earphones
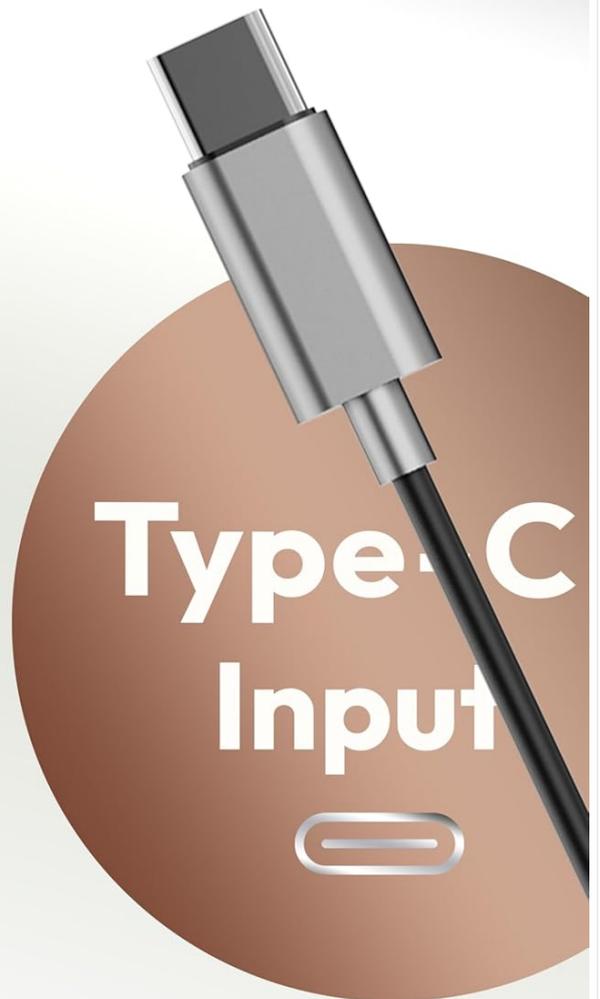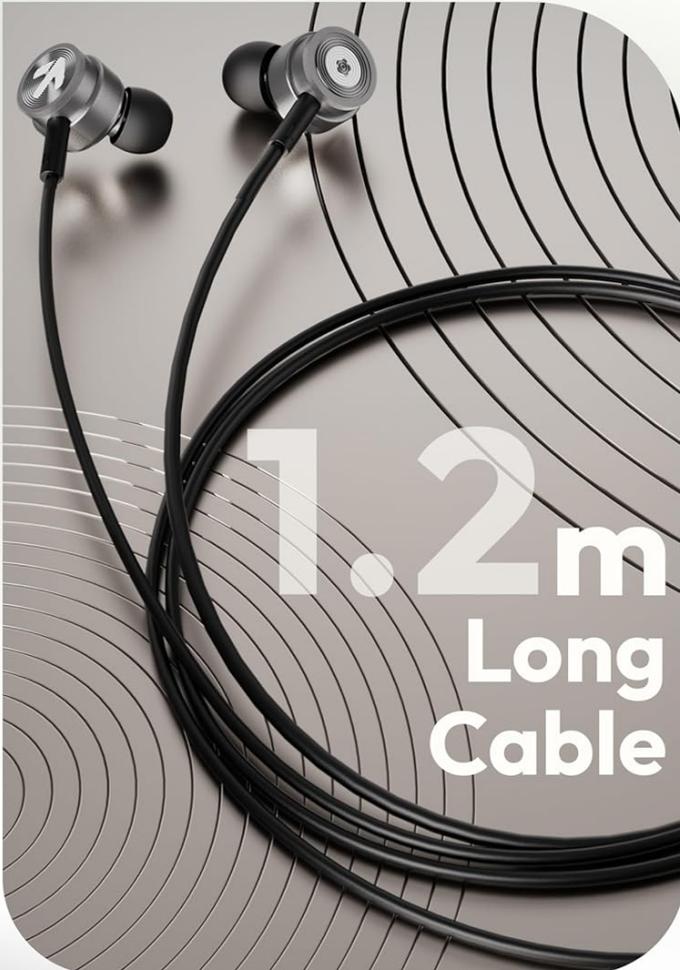- Extra Pair of Eartips (various sizes)
- Warranty Card

SETUP

1. Connecting to Your Device

The GOBOULT XO Pro earphones feature a Type-C connector for direct digital audio transmission.

1. Locate the Type-C port on your smartphone, tablet, laptop, or gaming device.
2. Insert the Type-C connector of the earphones firmly into the device's Type-C port.
3. Your device should automatically recognize the earphones. If not, check your device's audio output settings.

Image: The GOBOULT XO Pro earphones feature a 1.2m long Type-C cable for reliable connectivity.

2. Choosing the Right Eartips

Properly sized eartips are crucial for comfort, sound quality, and noise isolation.

1. Experiment with the different sizes of eartips provided.
2. Select the size that creates a snug seal in your ear canal without causing discomfort. A good seal enhances bass response and blocks external noise.

3. Wearing the Earphones

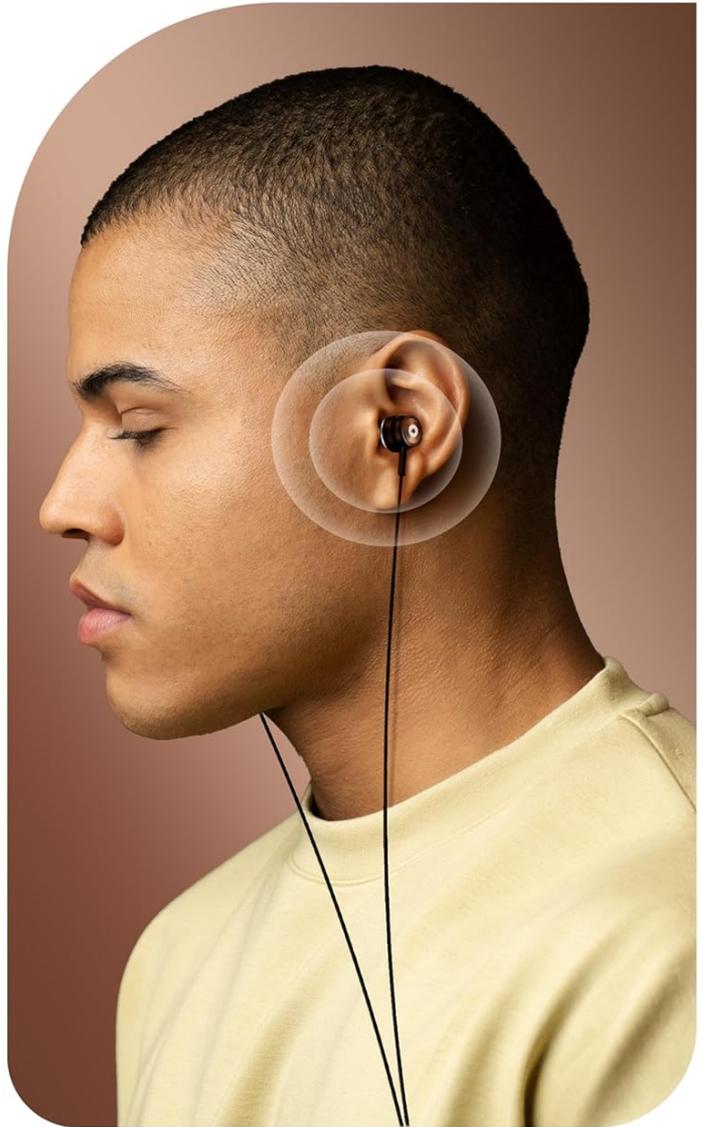Insert the earphones gently into your ears. The ergonomic design ensures a secure and comfortable fit for extended listening sessions.

Image: The earphones are designed for comfort with an ergonomic, feather-light, and snug fit.

OPERATING INSTRUCTIONS

The GOBOULT XO Pro earphones are equipped with an in-line remote for easy control of audio and calls.

Image: The in-line connector provides convenient access to music and call controls.

Music Playback

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Press the multi-function button twice quickly.
- **Previous Track:** Press the multi-function button three times quickly.
- **Volume Control:** Use the volume up (+) and volume down (-) buttons on the in-line remote.

Call Management

- **Answer/End Call:** Press the multi-function button once during an incoming call or an active call.
- **Reject Call:** Press and hold the multi-function button for approximately 2 seconds during an incoming call.

Voice Assistant

- **Activate Voice Assistant:** Press and hold the multi-function button for approximately 2 seconds (when not on a call) to activate your device's voice assistant (e.g., Google Assistant, Siri).

Image: The earphones offer IPX5 water resistance and support voice assistant activation.

MAINTENANCE

Cleaning

- Gently wipe the earphones and cable with a soft, dry, lint-free cloth.
- Remove eartips and clean them separately with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.

Storage

- Store the earphones in a clean, dry place when not in use.
- Avoid extreme temperatures and direct sunlight.
- Do not wrap the cable too tightly to prevent damage. The tangle-free cable design helps maintain its integrity.

Water Resistance (IPX5)

The GOBOULT XO Pro earphones are IPX5 water resistant, meaning they can withstand splashes and sweat. This makes them suitable for workouts and light rain exposure.

- Do not submerge the earphones in water.
- Avoid exposing them to pressurized water or high-velocity water streams.
- Ensure the Type-C port is dry before connecting to a device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	- Earphones not properly connected. - Device volume too low or muted. - Incorrect audio output selected on device. - Damaged cable/connector.	- Ensure the Type-C connector is fully inserted. - Increase device volume. - Check device audio settings and select the earphones as output. - Test with another device to rule out earphone damage.
Microphone not working	- Microphone muted on device. - Incorrect input device selected. - Microphone port blocked or damaged.	- Check device call/microphone settings. - Ensure the earphones are selected as the input device. - Clean any debris from the microphone area.
Sound quality is poor (e.g., weak bass, tinny sound)	- Improper eartip seal. - Earphones not inserted correctly. - Audio source quality is low.	- Try different eartip sizes to achieve a snug fit. - Adjust earphone position in your ear. - Test with a high-quality audio file or streaming service.
In-line controls not responding	- Earphones not fully connected. - Device compatibility issue.	- Reconnect the earphones. - Ensure your device supports in-line controls for Type-C earphones.

SPECIFICATIONS

Image: The GOBOULT XO Pro features 10mm dynamic drivers for enhanced bass and high-fidelity sound.

Feature	Detail
Model Name	XO Pro
Connectivity Technology	Wired (Type-C)
Audio Driver Type	Dynamic Driver
Audio Driver Size	10 Millimetres
Frequency Response	20 Hz
Sensitivity	102 dB
Water Resistance Level	IPX5 Water Resistant
Control Type	Push Button, Voice

Feature	Detail
Noise Control Features	Sound Isolation
Cable Length	Approximately 1.2 meters
Material	Metal, Silicone
Item Weight	13 Grams
Compatible Devices	Cellphones, Desktops, Laptops, Tablets (with Type-C audio output)

WARRANTY AND SUPPORT

Your GOBOULT XO Pro earphones come with a warranty. Please refer to the included Warranty Card for detailed information regarding warranty terms, conditions, and duration.

For technical support, service, or further inquiries, please contact GOBOULT customer service through the contact information provided on your Warranty Card or the official GOBOULT website.