Psisuvry 60HC

Psisuvry 5.1 Cub Large Safe User Manual

Model: 60HC | Brand: Psisuvry

Introduction

Thank you for choosing the Psisuvry 5.1 Cub Large Safe. This safe is designed to provide robust security for your valuable possessions, offering fire and water resistance, anti-theft features, and convenient access through a digital keypad or emergency key. Please read this manual thoroughly before operating your safe to ensure proper setup, optimal performance, and long-term durability.



Image: The Psisuvry 5.1 Cub Large Safe, showcasing its sleek black exterior and integrated digital keypad.

Safety Information

Always adhere to the following safety guidelines to prevent injury or damage to the safe and its contents:

- **Keep Emergency Keys Secure:** Store emergency keys in a safe location away from the safe itself and out of reach of children. Do not store them inside the safe.
- **Avoid Blocking Vents:** Ensure the safe is placed in a location where its ventilation is not obstructed.
- **Children and Safe:** Never allow children to play with or inside the safe. The safe is heavy and can cause serious injury if it falls or closes unexpectedly.
- **Proper Handling:** Due to its weight, always use proper lifting techniques or seek assistance when moving the safe to prevent injury.
- **Fire and Water Resistance:** While designed to be fire and water resistant, no safe is completely impervious to extreme conditions. Follow all instructions for proper sealing and placement.



Image: Visual representation of the safe's fire and water resistant properties, indicating protection against extreme elements.

Package Contents

Verify that all items are present in your package:

- 1 x Psisuvry 5.1 Cub Large Safe
- 2 x Emergency Keys
- 4 x Expansion Screws (for mounting)
- 1 x User Manual (this document)
- 1 x Floor Mat (for interior protection)



Image: The Psisuvry safe shown alongside its included accessories: expansion screws, spare keys, user manual, and floor mat.

Product Features

The Psisuvry 5.1 Cub Large Safe is equipped with advanced features for superior protection:

- **Extra Large Capacity:** 5.1 cubic feet of interior space, ideal for documents, jewelry, firearms, and other valuables.
- **Fire and Water Resistance:** Designed to withstand high temperatures (up to 1700°F for 1 hour) and repel water, protecting contents from fire and water damage.
- **Robust Anti-Theft Construction:** Features a 78mm thick explosion-proof steel door, 5*30mm high-strength solid core lock bolts, and tamper-proof hidden hinges.
- **Dual Locking Mechanism:** Secure access via a programmable digital keypad or traditional emergency keys.
- **Smart Alarm System:** Activates an alarm after 3 consecutive incorrect passcode entries, deterring unauthorized access.
- **Removable Shelves:** Three adjustable shelves allow for flexible organization of the interior space.
- **LED Sensor Light:** Built-in interior lighting for improved visibility in low-light conditions.
- **Mounting Capability:** Pre-drilled holes and included hardware for secure wall or floor mounting.



Image: Close-up view highlighting the safe's durable cold-rolled steel structure, micro-seam design, and robust 30mm steel locking bolts for enhanced security.

Setup

1. Unboxing and Placement

Carefully remove the safe from its packaging. It is recommended to place the safe on a flat, stable, and level surface. Ensure there is adequate space around the safe for the door to open fully.

2. Battery Installation

The digital keypad requires batteries to operate. Locate the battery compartment on the back of the keypad. Insert the required number of AA batteries (not included), ensuring correct polarity. Close the battery compartment cover securely.

3. Initial Setup of Digital Keypad

Upon first use, you will need to set your personal passcode. Refer to the instructions provided with the keypad for specific steps on setting the initial code. Typically, this involves pressing a reset button inside the safe (with the door open), entering your desired code, and confirming it.

4. Emergency Key Usage

In case of battery failure or forgotten passcode, the emergency keys can be used to open the safe. Insert the emergency key into the keyhole, turn it, and then turn the handle to open the door. Remember to store these keys in a secure location outside the safe.



Image: Diagram illustrating the two methods of opening the safe: using a personal passcode with the knob, or using the emergency key with the knob.

5. Mounting (Wall or Floor)

For enhanced security, the safe can be mounted to a wall or floor using the provided expansion screws.

1. **Step 1:** Choose a suitable location on a solid wall or floor. Mark the drilling points through the pre-drilled holes at the back or bottom of the safe.
2. **Step 2:** Drill holes at the marked points using an appropriate drill bit for your wall/floor material.
3. **Step 3:** Align the safe with the drilled holes. Insert the expansion screws through the safe's holes and into the wall/floor. Tighten the screws firmly to secure the safe in place.

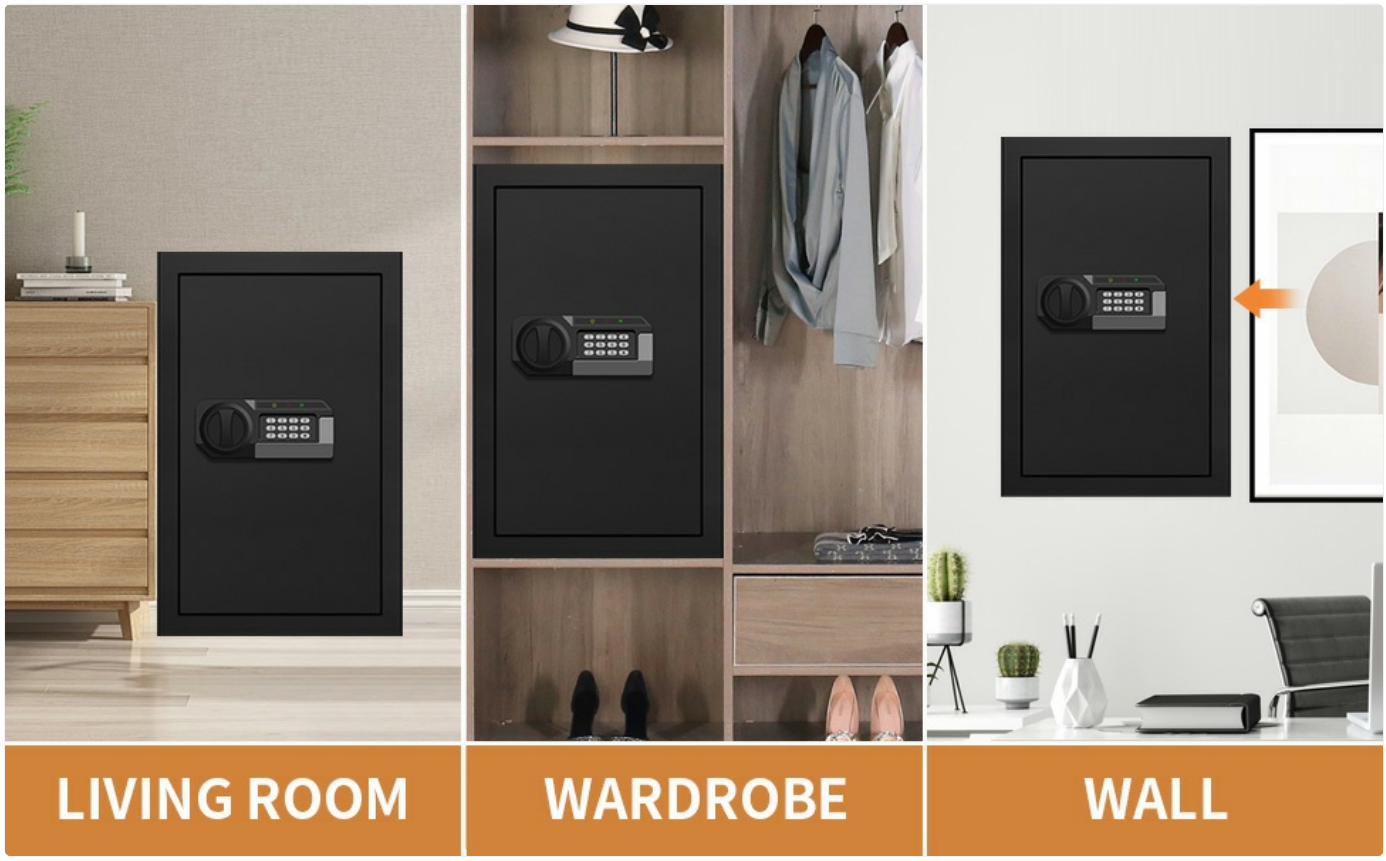


Image: Step-by-step visual guide for wall or floor mounting the safe, demonstrating drilling and securing with screws.

Operating Instructions

1. Opening the Safe with Digital Code

To open the safe using the digital keypad:

1. Enter your personal passcode on the digital keypad.
2. Press the 'OK' or '#' button (refer to keypad markings).
3. Within 5 seconds of successful code entry, turn the knob clockwise to open the safe door.

2. Closing and Locking the Safe

To close and lock the safe:

1. Close the safe door firmly.
2. Turn the knob counter-clockwise until the locking bolts are fully extended and the door is secure.

3. Changing Passcode

To change your personal passcode:

1. With the safe door open, locate the reset button on the inside of the door or near the battery compartment.
2. Press the reset button. The keypad will indicate it's ready for a new code (e.g., a beep or flashing light).
3. Enter your new desired passcode (4-8 digits).
4. Press the 'OK' or '#' button to confirm. Test the new code with the door open before closing.

4. Smart Alarm System

The safe is equipped with an anti-theft alarm. If an incorrect passcode is entered 3 consecutive times, the alarm will activate, and the safe will lock for 20 seconds. During this time, no further entries can be made. The alarm will cease after the lockout period or if the correct code is entered.



Image: Illustration depicting the smart alarm system, showing a red alarm light and a figure attempting unauthorized access, with mute and locking icons.

5. Using Removable Shelves

The safe includes three removable shelves to customize the interior storage space. To adjust or remove a shelf, simply lift it slightly and slide it out from its supports. Reinsert by aligning it with the desired support slots and lowering it into place.

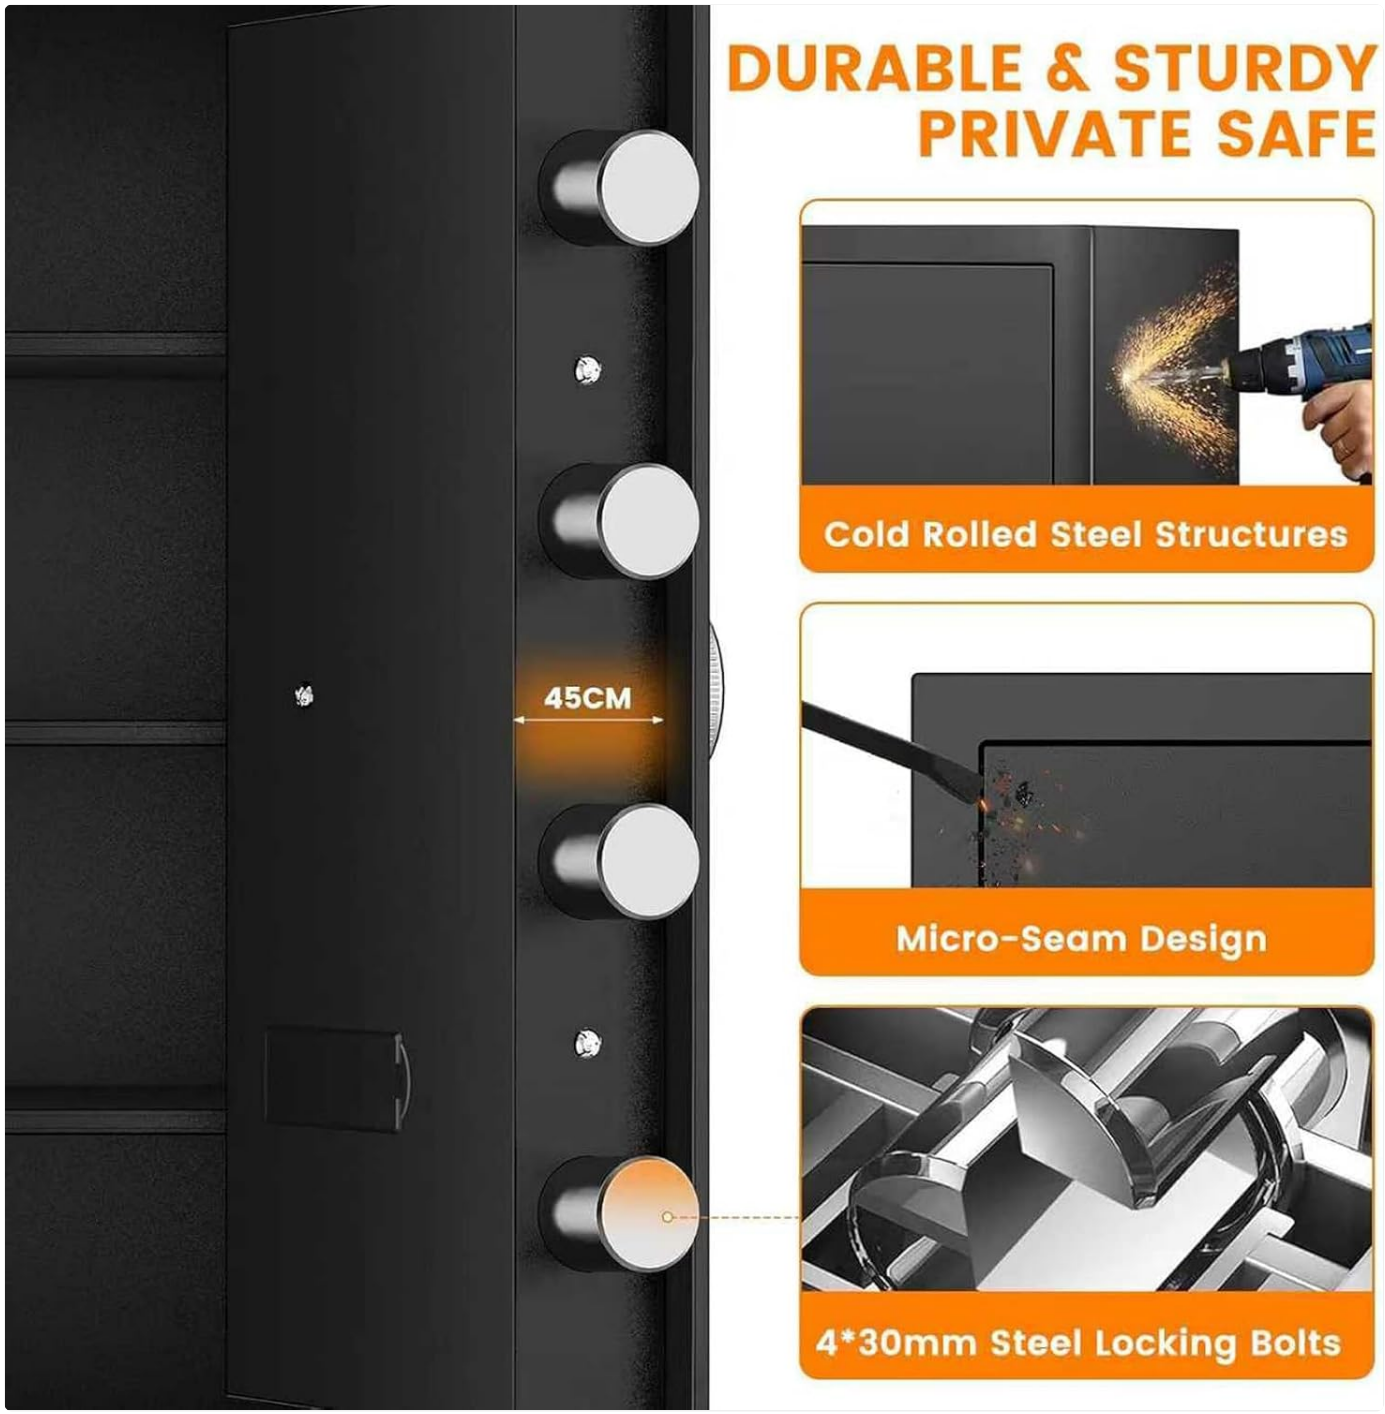


Image: Comparison view of the safe's interior, demonstrating the versatility of storage with shelves installed and with shelves removed to accommodate larger items.

6. LED Sensor Light

The built-in LED sensor light illuminates the interior of the safe when the door is opened, providing better visibility for accessing your items in dark environments. The light will automatically turn off after a short period or when the door is closed.



Image: The interior of the Psisuvry safe, showing various items stored on shelves, illuminated by the integrated LED light.

Maintenance

1. Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish. For the interior, a dry cloth is sufficient.

2. Battery Replacement

Replace the batteries in the digital keypad annually or when the low battery indicator appears. Always use new, high-quality alkaline batteries. Do not mix old and new batteries or different types of batteries.

3. General Care

Regularly check the locking bolts and hinges for any signs of wear or obstruction. Ensure the safe door closes smoothly and securely. Do not force the door or handle if it feels stiff.

Troubleshooting

Problem	Possible Cause	Solution
Keypad not responding	Dead batteries; Incorrect battery installation	Replace batteries with new ones; Ensure correct polarity.
Safe door will not open with code	Incorrect passcode; Keypad lockout (alarm activated)	Re-enter correct passcode; Wait 20 seconds if alarm activated, then try again. Use emergency key if necessary.
Alarm sounds unexpectedly	Incorrect code entered 3 times; Tampering attempt	Enter correct code to disarm; Ensure safe is not being tampered with.
Door is stiff or difficult to close/open	Obstruction; Misalignment	Check for items blocking the door or locking bolts; Ensure safe is on a level surface.

Specifications

Feature	Detail
Brand	Psisuvry
Model Number	60HC
Product Dimensions (External)	14"D x 12"W x 23.62"H (35.56cm D x 30.48cm W x 60cm H)
Capacity	5.1 Cubic Feet (approx. 144.4 Liters)
Lock Type	Electronic Combination Lock, Key
Material	Metal, Fireproof Safe Material
Color	Black
Item Weight	41.9 pounds (19.05 Kilograms)
Water Resistance Level	Water Repellent
Mounting Type	Wall Mount, Floor Mount



Image: The safe with its exterior and interior dimensions clearly marked, illustrating its large capacity for various items.

Warranty and Support

The Psisuvry 5.1 Cub Large Safe comes with a **Lifetime Warranty**, ensuring peace of mind regarding its quality and durability. In addition, we offer a **120-day return or exchange service** from the date of purchase.

For any inquiries, technical assistance, or to request a replacement key (if you have lost yours and have the unique keyhole number), please contact our customer support. We provide **24-hour online service** to assist you promptly.

Please refer to your purchase documentation or the manufacturer's website for specific contact details and the full terms and conditions of the warranty.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question