Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lapcare LWM-801

LAPCARE Trendy Plus Transparent Wireless and Bluetooth Rechargeable Mouse (Model LWM-801) User Manual

Your comprehensive guide to setup, operation, and maintenance.

1. Introduction

Thank you for choosing the LAPCARE Trendy Plus Transparent Wireless and Bluetooth Rechargeable Mouse. This advanced mouse offers triple-mode connectivity (Bluetooth 3.0, Bluetooth 5.2, and 2.4GHz wireless), adjustable DPI settings, and specialized function buttons for enhanced productivity. This manual provides detailed instructions to help you get started and make the most of your new device.



Image 1.1: The LAPCARE Trendy Plus Transparent Wireless and Bluetooth Rechargeable Mouse, showcasing its transparent design and internal components.



Image 1.2: The mouse offers wide compatibility with various devices including desktops, laptops, tablets, and mobile devices.

2. Package Contents

- LAPCARE Trendy Plus Transparent Wireless and Bluetooth Rechargeable Mouse
- USB 2.4GHz Receiver (stored inside the mouse)
- USB Type-C Charging Cable
- User Manual

3. Product Overview

Familiarize yourself with the various parts and features of your LAPCARE Trendy Plus mouse.

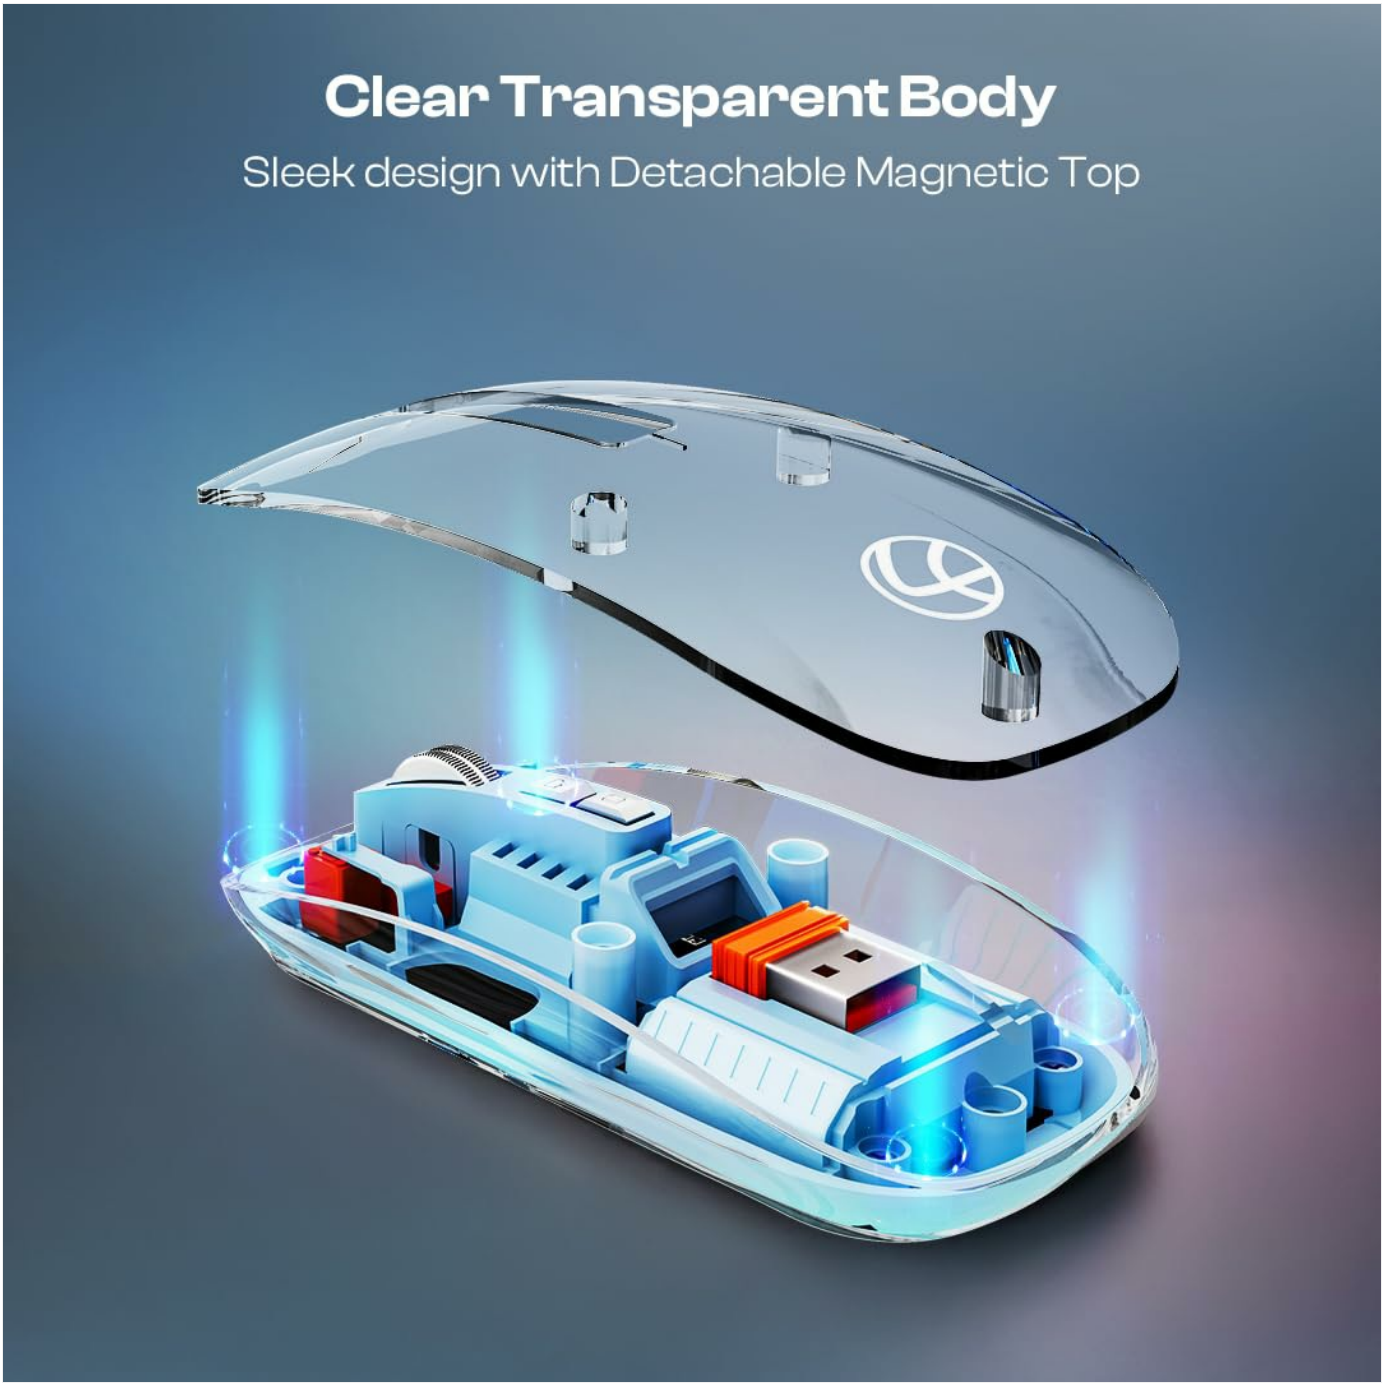


Image 3.1: Overview of the LAPCARE Trendy Plus mouse highlighting its key features including 5 buttons, Desktop Lock Key, up to 2400 DPI, and Copy-Pasting Button.

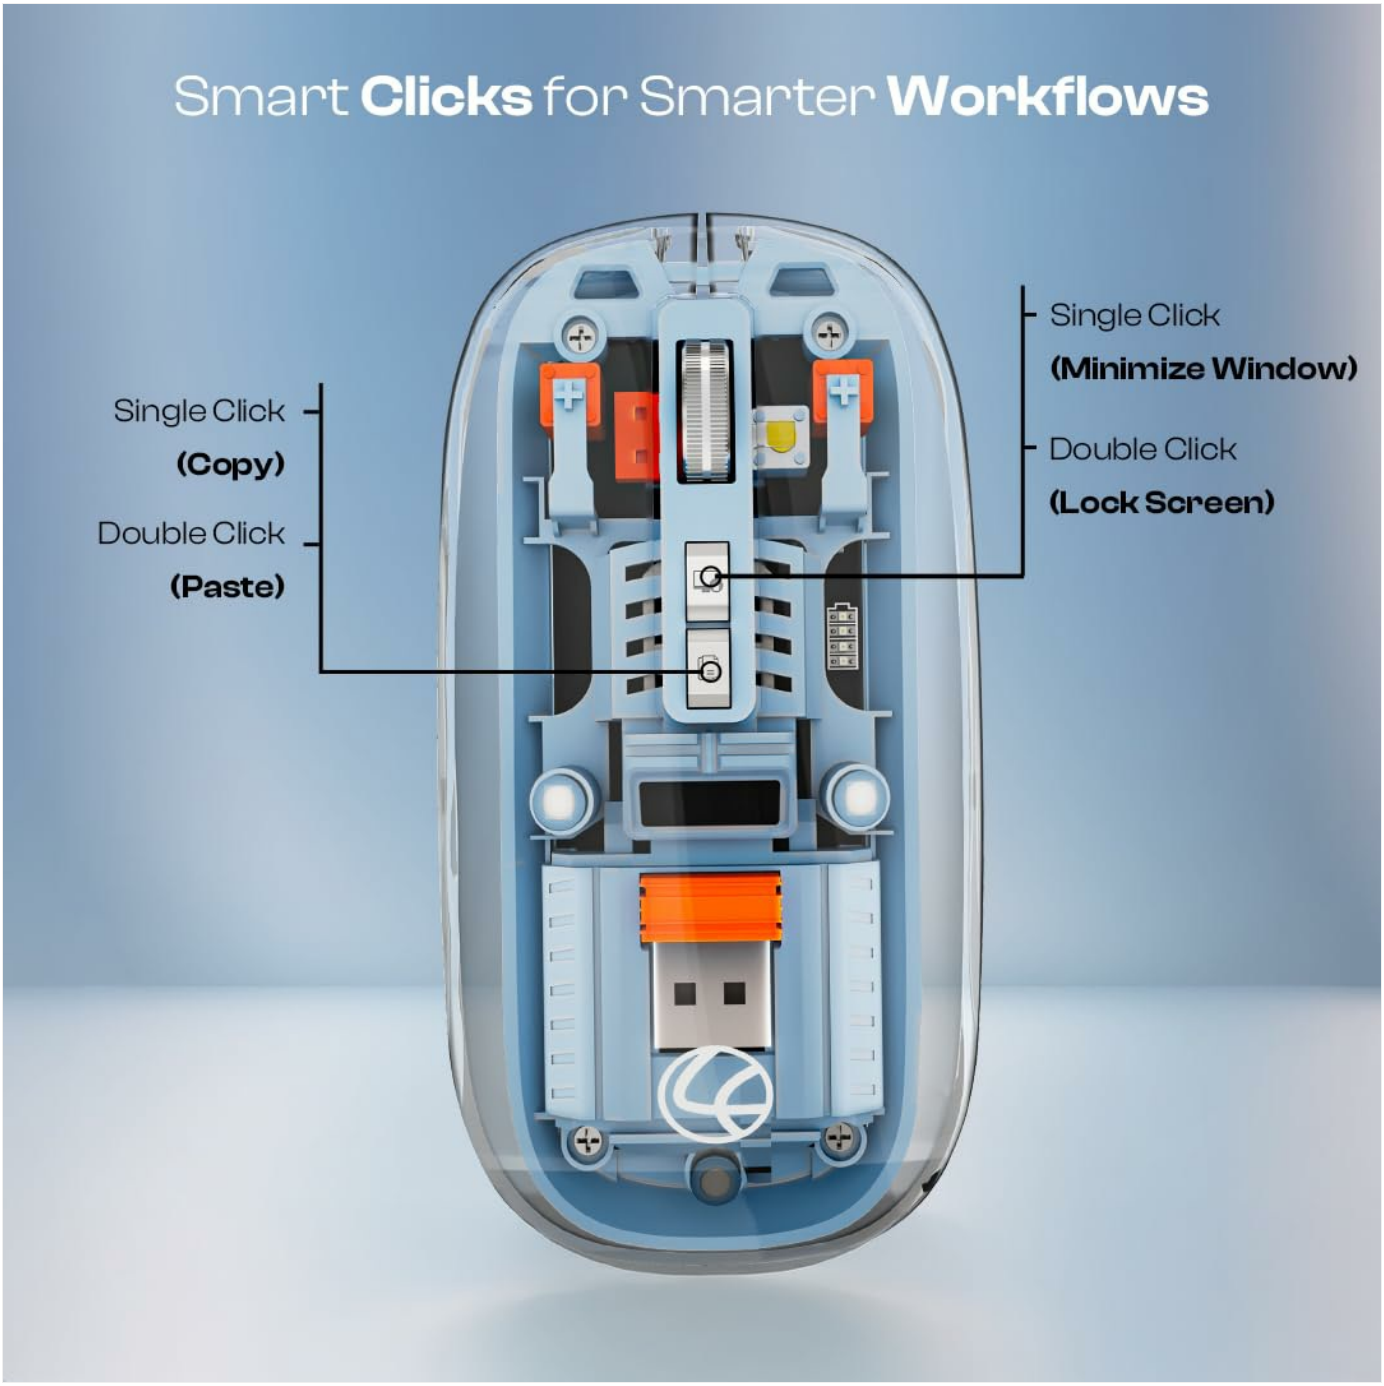


Image 3.2: The mouse features a clear transparent body with a sleek design and a detachable magnetic top.

1. **Left Click Button:** Standard left-click function.
2. **Right Click Button:** Standard right-click function.
3. **Scroll Wheel:** For vertical scrolling and middle-click function.
4. **DPI Adjustment Button:** Cycles through DPI settings (800/1200/1600/2400).
5. **Copy-Paste Button:** Single click for Copy, double click for Paste.
6. **Desktop Lock Key (Boss Key):** Single click to minimize all windows, double click to lock screen.
7. **Power Switch:** On/Off switch located on the bottom.
8. **Mode Switch Button:** Located on the bottom, cycles between 2.4GHz, Bluetooth 1, and Bluetooth 2 modes.
9. **USB Receiver Compartment:** Located on the bottom, stores the 2.4GHz USB receiver.
10. **Type-C Charging Port:** For recharging the internal battery.

4. Setup Instructions

4.1. Charging the Mouse

Before first use, ensure the mouse is fully charged. Connect the provided USB Type-C charging cable to the mouse's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status. A full charge provides approximately 30 days of usage.
The mouse features a real-time 4-grid power display to monitor battery levels during use.

4.2. Connecting via 2.4GHz Wireless

1. Locate the USB 2.4GHz receiver stored in the compartment on the bottom of the mouse.
2. Insert the receiver into an available USB port on your computer.
3. Turn on the mouse using the power switch on the bottom.
4. Press the mode switch button on the bottom of the mouse until the indicator light for 2.4G mode is active.
5. Your computer should automatically detect and install the necessary drivers. The mouse is now ready for use.



Image 4.1: Illustration of the dual-mode wireless connectivity, showing both 2.4GHz USB receiver and Bluetooth connection options.

4.3. Connecting via Bluetooth

The mouse supports two independent Bluetooth connections (BT1 and BT2).

1. Turn on the mouse using the power switch on the bottom.
2. Press the mode switch button on the bottom of the mouse to select either BT1 or BT2 mode. The corresponding indicator light will flash slowly.
3. To enter pairing mode, press and hold the mode switch button for 3-5 seconds until the indicator light flashes rapidly.
4. On your device (PC, Mac, Laptop, Tablet, iPad):
    - Go to Bluetooth settings.
    - Search for new devices.
    - Select "LAPCARE Trendy Plus" or a similar name from the list of available devices.
    - Confirm pairing. The indicator light on the mouse will stop flashing once connected.
5. Repeat these steps for the second Bluetooth channel (BT2) if you wish to connect to another device.

4.4. Switching Between Connected Devices

To switch between the 2.4GHz wireless connection and the two Bluetooth connections, simply press the mode switch button on the bottom of the mouse. The corresponding indicator light will illuminate to show the active connection mode.



Image 4.2: The bottom of the LAPCARE Trendy Plus mouse, showing the mode switch button for seamless multi-device switching between 2.4G and Dual Bluetooth modes.

5. Operating Instructions

5.1. Adjusting DPI Sensitivity

The mouse offers four adjustable DPI (Dots Per Inch) levels for precise cursor control. Press the DPI adjustment button (located behind the scroll wheel) to cycle through the settings: 800, 1200, 1600, and 2400 DPI. Choose the sensitivity that best suits your task, whether for detailed graphic design or fast-paced gaming.

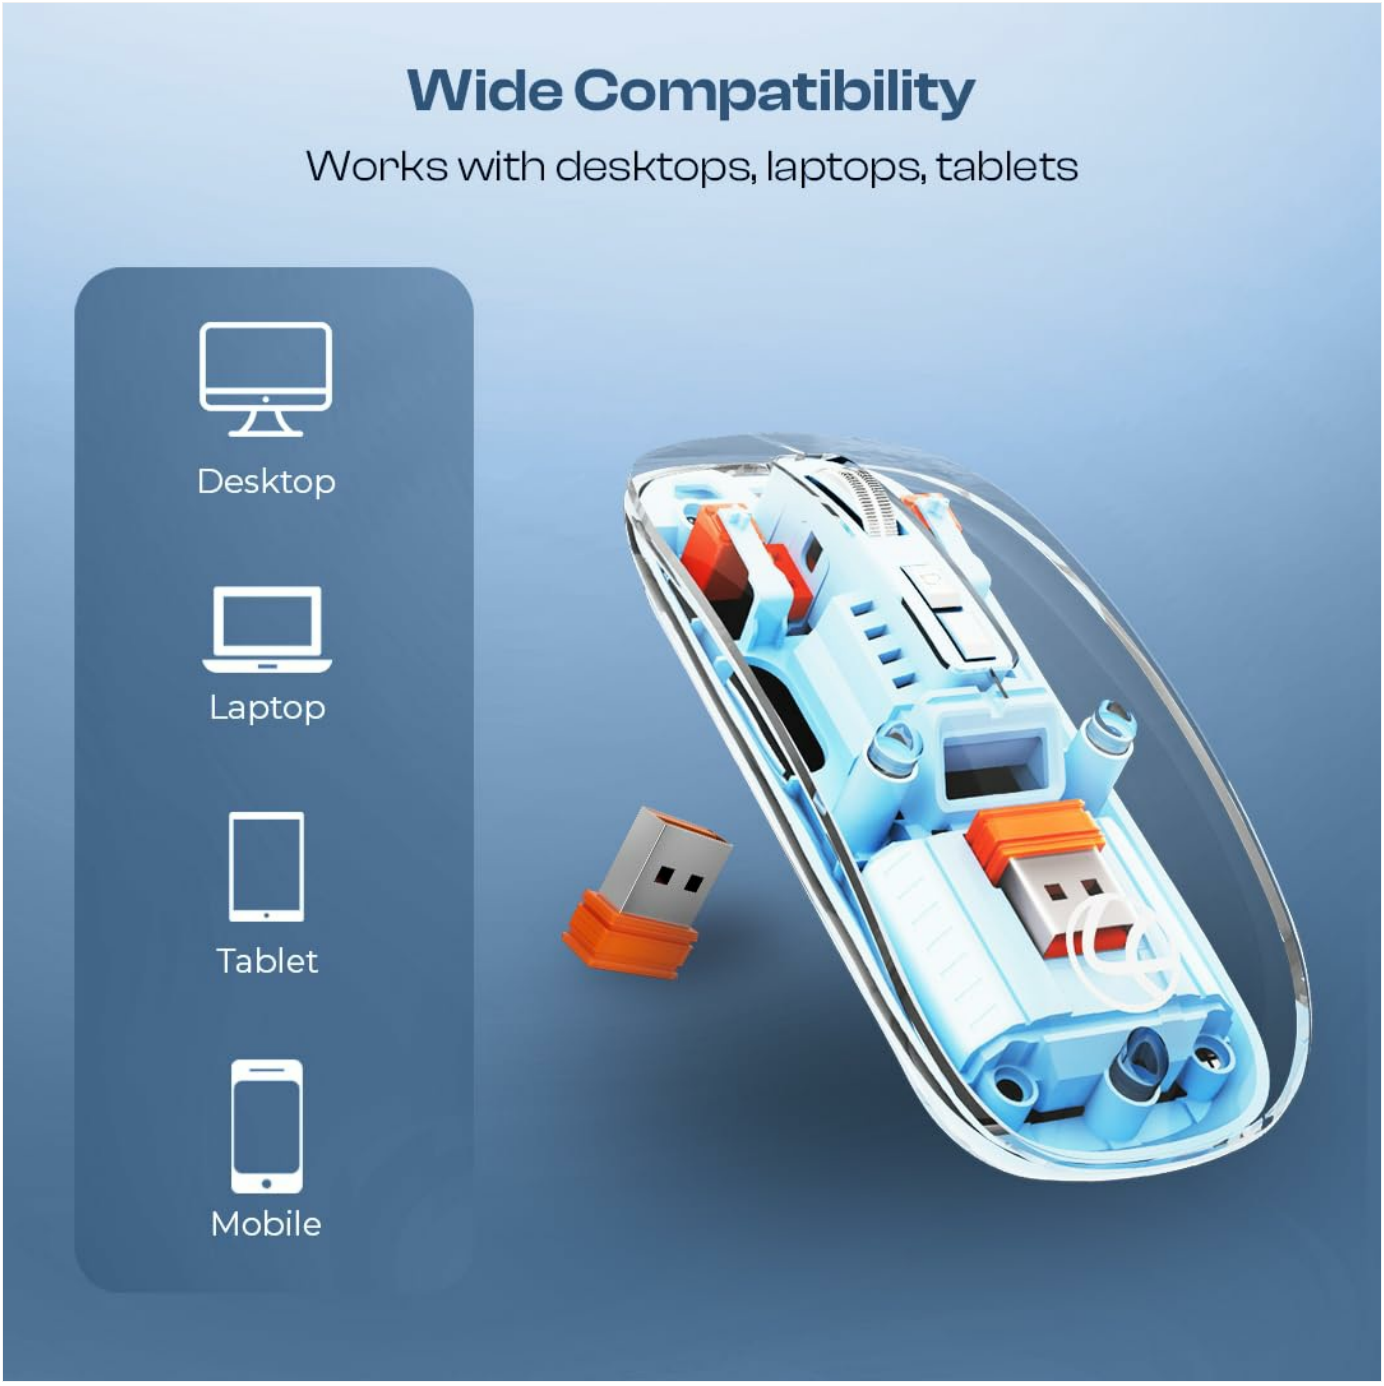


Image 5.1: Diagram illustrating the adjustable optical sensitivity with 800, 1200, 1600, and 2400 DPI settings.

5.2. Using Special Function Buttons

The LAPCARE Trendy Plus mouse includes dedicated buttons for enhanced workflow efficiency:

- **Copy-Paste Button:**
  - Single click: Performs a "Copy" action.
  - Double click: Performs a "Paste" action.
- **Desktop Lock Key (Boss Key):**
  - Single click: Minimizes all open windows, showing the desktop.
  - Double click: Locks the computer screen for privacy and security.



Image 5.2: Diagram illustrating the functions of the Copy-Paste button (single click for Copy, double click for Paste) and the Desktop Lock Key (single click to minimize window, double click to lock screen).

5.3. Silent Clicking

The mouse is designed with silent click buttons, providing a quiet operation experience suitable for various environments, including offices and libraries, minimizing distractions.

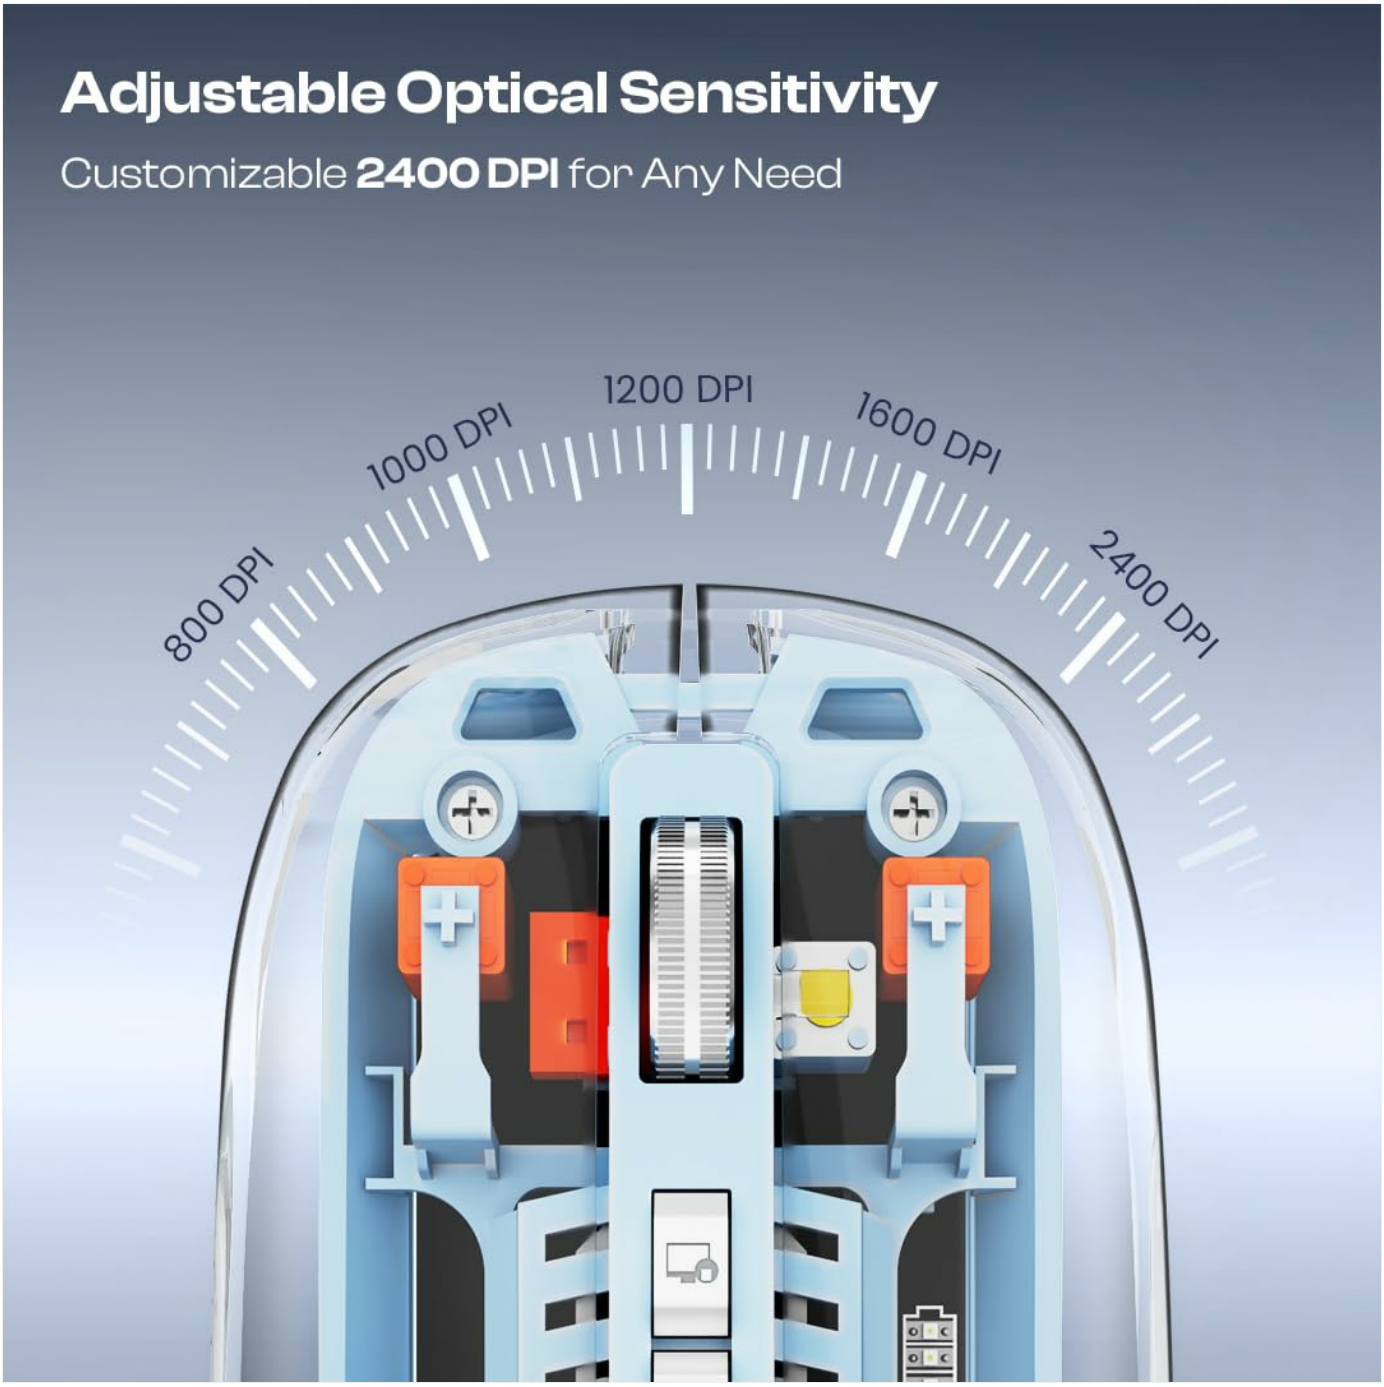


Image 5.3: Illustration demonstrating the silent clicking mechanism of the mouse, designed for quiet operation.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the mouse. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the mouse frequently. Recharge when the battery level is low. If storing for an extended period, charge the mouse to about 50% and turn it off.
- **Storage:** Store the mouse in a cool, dry place away from direct sunlight and extreme temperatures.

7. Troubleshooting

Problem	Possible Solution

Problem	Possible Solution
Mouse not responding (2.4GHz)	• Ensure the mouse is turned on. • Check if the USB receiver is securely plugged into the computer. • Verify the mouse is in 2.4G mode (indicator light active). • Try plugging the receiver into a different USB port. • Recharge the mouse battery.
Mouse not responding (Bluetooth)	• Ensure the mouse is turned on. • Verify the mouse is in the correct Bluetooth mode (BT1 or BT2). • Ensure Bluetooth is enabled on your device. • Re-pair the mouse with your device. • Recharge the mouse battery.
Cursor movement is erratic or slow	• Adjust the DPI sensitivity using the DPI button. • Clean the optical sensor on the bottom of the mouse. • Ensure you are using the mouse on a suitable surface (non-reflective, opaque). • Recharge the mouse battery.
Battery drains quickly	• Ensure the mouse is turned off when not in use. • The mouse has an automatic hibernation mode; ensure it's activating. • Avoid extreme temperatures.

8. Specifications

Brand	Lapcare
Model Number	LWM-801
Series	Trendy Plus
Connectivity Technology	2.4GHz Wireless, Bluetooth 3.0, Bluetooth 5.2
Movement Detection Technology	Optical
Adjustable DPI	800 / 1200 / 1600 / 2400
Battery Type	Rechargeable Lithium Battery
Battery Capacity	400 mAh

Average Battery Life	Up to 720 hours (approx. 30 days)
Charging Port	USB Type-C
Wireless Range	Up to 10 meters
Operating System Compatibility	Windows, Mac OS
Product Dimensions (LxWxH)	11.3 x 5.5 x 0.1 cm
Item Weight	80 g
Material	ABS
Special Features	Transparent Design, Desktop Lock Key, Copy-Paste Button, Silent Clicking, LED Battery Display

9. Warranty and Support

The LAPCARE Trendy Plus Transparent Wireless and Bluetooth Rechargeable Mouse comes with a**3-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable performance of your device. For technical support, warranty claims, or any inquiries regarding your product, please contact Lapcare customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty validation.

© 2025 Lapcare. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I change the DPI on the Lapcare LWM-801 mouse if there is no physical button?

According to the Lapcare LWM-801 user manual, there is a dedicated physical button for adjusting DPI. It is located directly behind the scroll wheel on the top of the mouse. To change the DPI...

Read full answer

Open the live page

https://manuals.plus/asin/B0DYDXHGFP

More documents and user manuals: **https://manuals.plus/**