Prasky DM-03

PRASKY 1500W Professional Heating Blender (Model DM-03) Instruction Manual

Brand: Prasky | Model: DM-03

1. Important Safety Instructions

Please read all instructions carefully before using your PRASKY Heating Blender. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the blender is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Keep hands and utensils out of the container while blending to reduce the risk of severe personal injury.
- Blades are sharp. Handle with care when cleaning.
- Do not operate the blender with a damaged cord or plug. Contact customer service for assistance.
- Ensure the lid is securely in place before operating the blender, especially when blending hot liquids.
- Do not overfill the blender container. Observe the maximum fill lines for both hot and cold ingredients.
- The glass jar is explosion-proof, but avoid sudden temperature changes (e.g., pouring cold liquid into a hot jar or vice-versa) to prevent damage.
- This appliance is equipped with an auto-shutoff feature for overheating protection. If the motor overheats, it will automatically shut down. Allow it to cool before resuming use.
- The child-lock lid feature ensures safe operation. The blender will not start if the lid is not properly secured.

2. Product Overview

The PRASKY 1500W Professional Heating Blender is a versatile kitchen appliance designed for both hot and cold preparations. It features a powerful motor, durable glass jar, and multiple pre-programmed settings.



Image: The PRASKY 1500W Professional Heating Blender displayed with fresh fruits, vegetables, and coffee beans, highlighting its versatility.

Key Features:

- **10-in-1 Functionality:** Prepare hot soy milk, soups, nut milk, cold smoothies, juices, milkshakes, and more.
- **Powerful 1500W Motor (25,000 RPM):** Effortlessly crushes ice, frozen fruits, nuts, and fibrous vegetables for smooth textures.
- **55oz (1.65L) Borosilicate Glass Jar:** Durable, heat-resistant, and safe for both hot and cold ingredients.
- **Integrated Heating Element:** Allows for cooking hot soups and beverages directly in the blender.
- **Intuitive Control Panel:** Features pre-programmed settings, adjustable speed control, and an auto-clean mode.
- **Safety Features:** Anti-slip base, auto-shutoff for overheating, and child-lock lid.

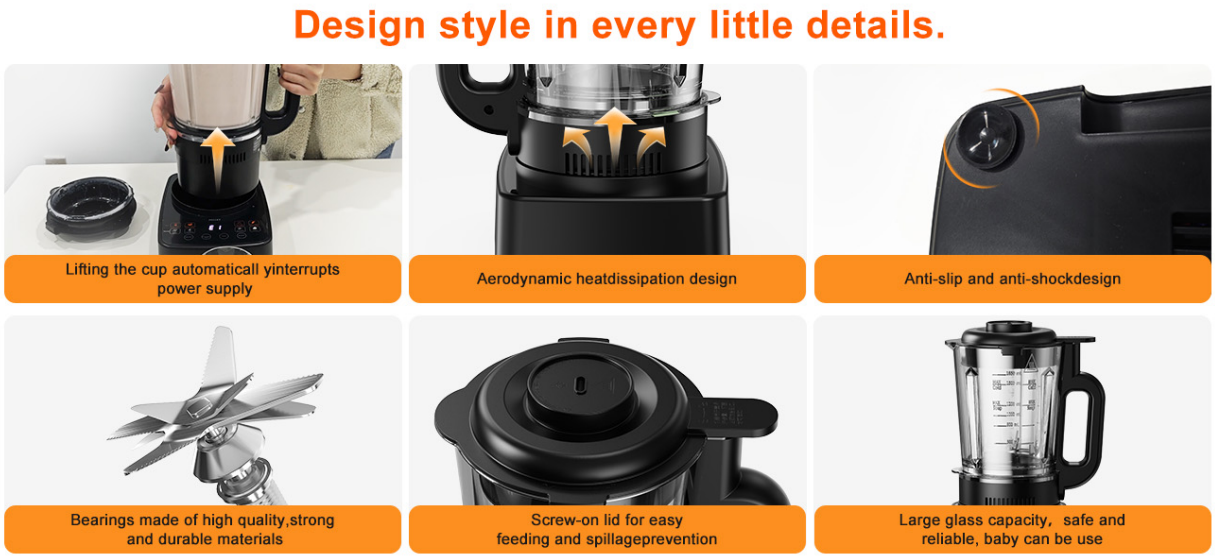


Image: Close-up details of the blender's design, showcasing aerodynamic heat dissipation, anti-slip and anti-shock design, durable bearings, secure screw-on lid, and large glass capacity.

3. Setup

Before first use, wash all removable parts (lid, measuring cup, glass jar, and blade assembly) in warm, soapy water. Rinse thoroughly and dry. Ensure the motor base is unplugged.

Assembly Steps:

1. Place the motor base on a clean, dry, and stable surface.
2. Ensure the blade assembly is securely attached to the bottom of the glass jar.
3. Carefully place the glass jar onto the motor base, aligning the handle with the lower coupling position. The blender will not operate if not correctly seated.
4. Add your ingredients to the glass jar. Do not exceed the maximum water level indicated on the jar.
5. Securely tighten the lid clockwise onto the glass jar. Ensure the child-lock mechanism engages.
6. Plug the power cord into a standard 120V AC outlet. The display will illuminate, indicating standby mode.



Image: A visual guide demonstrating the six steps for setting up the blender, including preparing ingredients, observing fill levels, securing

the lid, and connecting to power.

4. Operating Instructions

The PRASKY Heating Blender offers various pre-programmed settings and manual controls for diverse culinary tasks.



Image: The blender's control panel with illuminated buttons for various functions like Soya Juice, Soup Maker, Nut Milk, Corn Juice, Juice, Milkshake, Smoothie, Cookie Dough, Delay Start, Manual Blend/Clean, and ON/OFF.

Using Pre-Programmed Settings:

- After assembly and adding ingredients, press the 'ON/OFF' button to activate the display.
- Use the 'Choice' button to cycle through the available pre-programmed settings (e.g., Soya Juice, Soup Maker, Nut Milk, Corn Juice, Juice, Milkshake, Smoothie).
- Once your desired program is selected, press 'ON/OFF' again to start. The blender will automatically adjust speed and heating (if applicable) for the selected program.
- The display will show the remaining time for the program.

Manual Blending:

- For manual control, select 'Manual Blend/Clean' using the 'Choice' button.
- Adjust the blending speed using the dedicated speed controls (Low, Medium, High, Pulse) if available, or rely on the default manual blend speed.
- Press 'ON/OFF' to start and 'ON/OFF' again to stop.

Heating Function:

Certain programs like 'Soya Juice' and 'Soup Maker' automatically engage the heating function. The blender will heat ingredients to the optimal temperature for cooking.

Image: A graph illustrating the controlled heating process and temperature curve over time, detailing stages like hydration, enzyme neutralization, precision grinding, flavor development, and nutrient optimization.

Official Product Videos:

Video: Demonstration on how to prepare cream of mushroom soup using the PRASKY heating blender, showcasing its cooking capabilities.

Video: A step-by-step guide on operating the PRASKY heating blender, covering basic functions and program selection.

Video: Instructions for making peanut sesame soup with the PRASKY heating blender, demonstrating its hot blending feature.

5. Cleaning and Maintenance

Proper cleaning and maintenance will extend the life of your blender and ensure optimal performance.

Auto-Clean Mode:

1. After use, add warm water and a drop of dish soap to the glass jar (do not exceed the minimum liquid line).
2. Secure the lid.
3. Press 'ON/OFF', then 'Choice' to select the 'Clean' program.
4. Press 'ON/OFF' to start the 2-minute cleaning cycle.
5. Once complete, rinse the jar thoroughly.



Image: A visual guide detailing the nine steps for using the auto-clean function, from pressing the ON/OFF button to the completion of the 2-minute cleaning cycle.

Manual Cleaning:

- Unplug the blender.
- Remove the glass jar from the motor base.
- The glass jar, lid, and measuring cup are dishwasher safe (top rack recommended).
- The motor base should be wiped clean with a damp cloth. Never immerse the motor base in water.
- For thorough cleaning of the blade assembly, carefully unscrew it from the bottom of the jar and wash separately. Exercise caution as blades are sharp.

6. Troubleshooting

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Lid not properly secured; Overheat protection activated.	Ensure power cord is plugged in; Securely attach the lid until child-lock engages; Allow motor to cool down for 15-20 minutes.
Ingredients not blending smoothly.	Too little liquid; Too many ingredients; Ingredients are too large.	Add more liquid; Reduce ingredient quantity; Cut ingredients into smaller pieces.
Burning smell from motor.	Overloading the motor; Prolonged use.	Unplug immediately and allow to cool; Reduce load and blend in shorter intervals. If problem persists, contact support.
Lid is difficult to remove/attach.	Rubber seal is tight.	This is normal for a secure seal. Apply firm, even pressure when attaching or removing.

7. Specifications



Image: The PRASKY blender with key dimensions (height, width, depth) and capacity (55oz) clearly labeled.

- **Brand:** Prasky
- **Model Number:** DM-03
- **Color:** Black
- **Power:** 1500W
- **Motor Speed:** 25,000 RPM
- **Capacity:** 55oz (1.65 Liters)
- **Product Dimensions:** 9"D x 8.27"W x 18.98"H (approx. 22.86cm D x 21cm W x 48.2cm H)
- **Item Weight:** 8.08 pounds (approx. 3.67 kg)
- **Container Material:** Borosilicate Glass
- **Blade Material:** Stainless Steel
- **Control Type:** Touch
- **Voltage:** 120V
- **Special Features:** Adjustable Speed Control, Automatic Cleaning, Heating, Keep Warm Setting, Child-Lock Lid,

Anti-slip Base, BPA Free Material.

8. Warranty and Support

Your PRASKY Heating Blender (Model DM-03) comes with a**1 Year Limited Warranty** from the date of purchase.

This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, commercial use, or unauthorized repair.

For warranty claims, technical support, or any questions regarding your product, please contact PRASKY Customer Service:

- **Email:** support@prasky.com
- **Phone:** 1-800-PRASKY (availability may vary)
- **Website:** Visit the Prasky Store on Amazon

Please have your model number (DM-03) and proof of purchase ready when contacting support.

© 2025 Prasky. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question