Vonesse B0DYJDM5N9

Vonesse Gaming Chair (Model B0DYJDM5N9) User Manual

Important Safety and Operating Instructions

INTRODUCTION

Thank you for choosing the Vonesse Gaming Chair, Model B0DYJDM5N9. This manual provides essential information for the safe and efficient use of your new chair. It covers assembly, operation, maintenance, and troubleshooting to ensure a comfortable and lasting experience. This high-back gaming chair features a footrest, massage function, pocket spring cushion, and reclining capabilities, designed for optimal support during long periods of use.

SAFETY GUIDELINES

Always follow the assembly instructions carefully. Do not exceed the maximum weight recommendation of 300 pounds. Be cautious when using the reclining feature to avoid injuries.

SETUP AND ASSEMBLY

The manufacturer provides all necessary tools and step-by-step instructions for assembly. Please refer to the included printed guide for detailed visual steps. Ensure all components are present before beginning assembly.

Figure 1: Assembled Vonesse Gaming Chair (Grey/Black)

This image displays the fully assembled Vonesse Gaming Chair in its Grey/Black color variant, showcasing its high back, armrests, and base with casters.
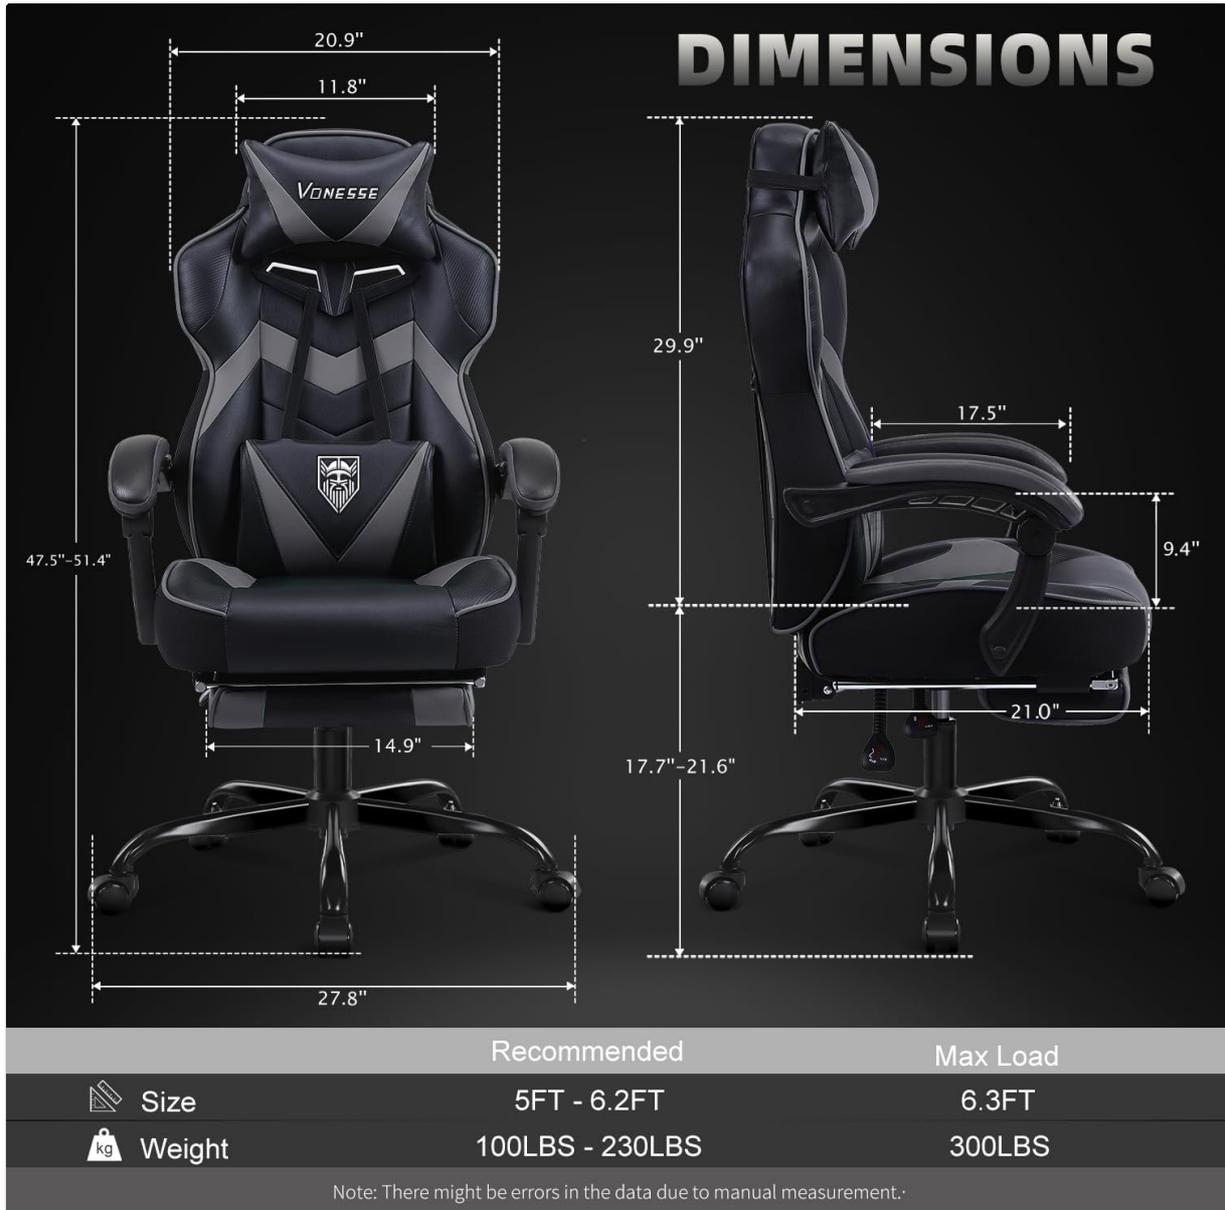

Figure 2: Vonesse Gaming Chair Dimensions

This diagram illustrates the key dimensions of the Vonesse Gaming Chair, including height, width, and depth, to help users understand its physical footprint and fit within their space.

Assembly Demonstration Video

Your browser does not support the video tag.

Video 1: Demonstrating the features and adjustments of the Vonesse Gaming Chair.

This video provides a visual guide to the chair's various features and adjustments, including the reclining function, footrest, and overall movement, offering a dynamic overview of its capabilities.

OPERATING INSTRUCTIONS

Reclining Mechanism

The chair's backrest can be adjusted and locked at any position between 90° (upright for work) and 160° (for relaxation). Locate the recline lever on the side of the chair, pull it up to adjust the angle, and release to lock it in

place.

Figure 3: Adjustable Back Angle

This graphic illustrates the range of motion for the chair's backrest, from an upright 90-degree position suitable for work to a reclined 160-degree position for rest or gaming.

Footrest Operation

For added comfort, the chair includes a retractable footrest. Pull the footrest out from underneath the seat when desired, and push it back in for storage. It is designed to extend smoothly.

Figure 4: Retractable Footrest and Linkage Armrest

This close-up image highlights the design of the linkage armrest and the retractable footrest, showing how they integrate with the chair's structure for user convenience.

Lumbar Support with Massage

The detachable lumbar support cushion features a built-in massage function. Connect the USB cable from the cushion to a power source (e.g., a USB port on your computer or a power bank) to activate the massage. Adjust the cushion's position for optimal lower back comfort.

Figure 5: Pocket Spring Cushion and Lumbar Support

This image provides a detailed view of the chair's seat, featuring a cutaway section that reveals the advanced pocket spring cushion technology, alongside the adjustable lumbar support pillow.

Height Adjustment

To adjust the chair's height, locate the lever beneath the seat. Pull the lever upwards while seated to lower the chair, or pull it upwards while standing to raise it. Release the lever to lock the height.

360-Degree Swivel

The chair is equipped with 360-degree swivel casters, allowing for smooth and quiet movement across various floor surfaces and multi-tasking convenience.

CARE AND MAINTENANCE

To maintain the appearance and longevity of your Vonesse Gaming Chair, regular cleaning is recommended. The chair is constructed with durable PU and carbon fiber leather, which are highly tensile and wear-resistant.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the material.
- **Spills:** Blot spills immediately with a clean, dry cloth.

- **Inspection:** Periodically check all bolts and screws to ensure they are tight. Re-tighten if necessary.

Figure 6: Durable PU Leather Cushion

This image highlights the wingless widened cushion design and the texture of the Vonesse Custom PU Leather, emphasizing its comfortable, elastic, waterproof, and easy-to-clean properties.

TROUBLESHOOTING

If you encounter any issues with your Vonesse Gaming Chair, please refer to the following common problems and solutions:

- **Chair not adjusting height:** Ensure the height adjustment lever is fully engaged or disengaged as required. Check for any obstructions.
- **Squeaking noises:** Tighten all assembly bolts. Applying a small amount of lubricant to moving parts (e.g., casters, gas lift) may help.
- **Casters not rolling smoothly:** Check for debris (hair, dust) wrapped around the caster wheels and clean them.
- **Massage function not working:** Verify the USB cable is securely connected to both the lumbar cushion and a functional power source.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Vonesse
Model	B0DYJDM5N9
Color	Grey/Black
Product Dimensions	21.65"D x 26.78"W x 49.6"H
Maximum Weight Recommendation	300 Pounds
Special Features	Adjustable Height, Ergonomic, Foot Rest, Massage, Reclining
Material	Faux Leather, Sponge
Back Style	Solid Back
Reclining Position Count	90° to 160°
Item Weight	44 pounds

WARRANTY AND CUSTOMER SUPPORT

Your Vonesse Gaming Chair is covered by a 30-day replacement or refund policy and a 1-year repair service. For any inquiries, assistance, or to claim warranty service, please contact our customer service team. Our team is dedicated to providing efficient and timely after-sales support.

For support, please visit the Vonesse Store on Amazon or refer to the contact information provided with your purchase documentation.