**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**JOYRACER QLS3288**

# JOYRACER 24V Kids ATV 4 Wheeler (Model QLS3288) Instruction Manual

Model: QLS3288 | Brand: JOYRACER

## Introduction

This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your JOYRACER 24V Kids ATV 4 Wheeler, Model QLS3288. Please read this manual thoroughly before use and retain it for future reference.

## Safety Information

**Important Safety Guidelines:**

- Always supervise children while using this ride-on car.
- Ensure the safety belt is fastened and doors are locked (if applicable).
- Use only on flat, stable surfaces. Avoid slopes, uneven terrain, or public roads.
- Regularly check the ATV for any damage or loose parts. Discontinue use if any issues are found and contact support.
- Recommended age range: 1 child aged 3-8 years, or 2 children under 4 years. Always consider the weight and height limits (Maximum load capacity: 110 pounds).
- Ensure children wear appropriate safety gear, such as helmets, knee pads, and elbow pads.

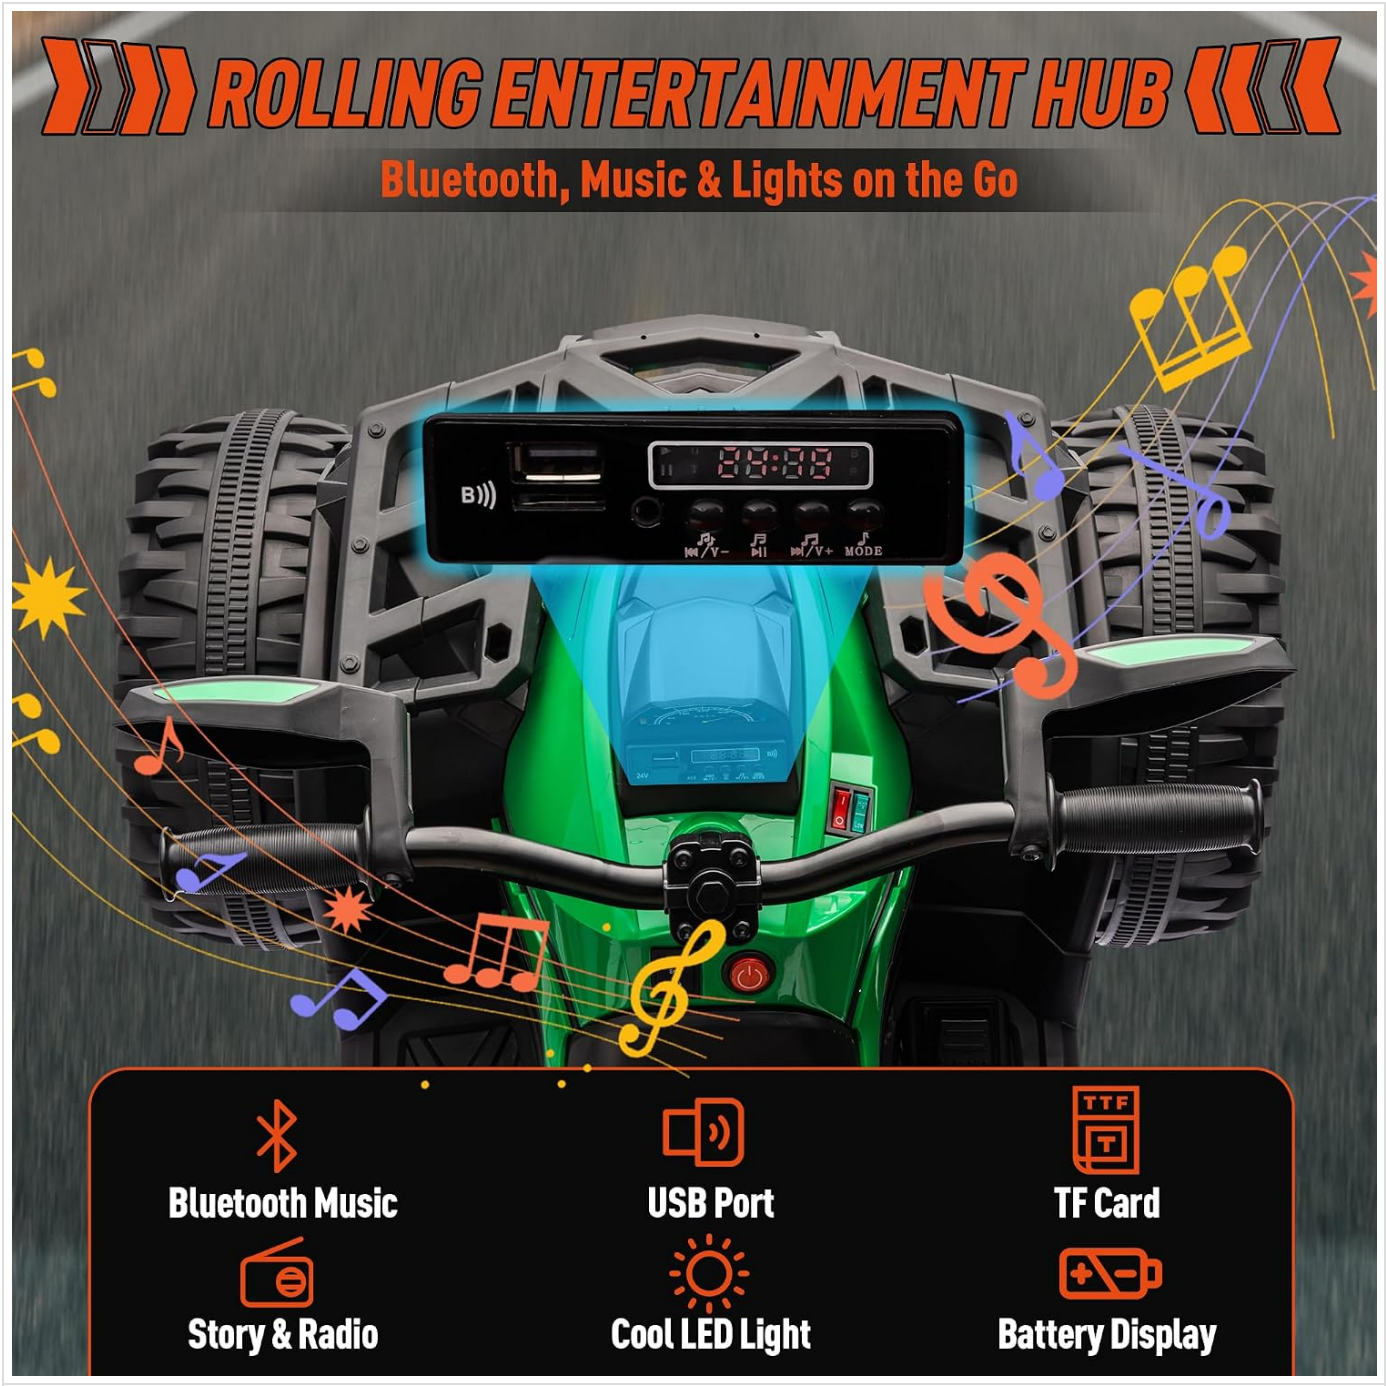



*Image: A child wearing knee and elbow pads, demonstrating recommended safety gear while operating the ATV. The image highlights the importance of protective equipment.*

## Setup and Assembly

The JOYRACER 24V Kids ATV requires some assembly before first use. Please follow these steps carefully.

1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts listed in the included components section are present.
2. **Initial Battery Charge:** Charge the 24V 9AH battery for 8-12 hours before the first use. Connect the charger to the charging port and a standard wall outlet.
3. **Wheel Installation:** Attach the wheels to the axles. Ensure all washers and nuts are securely fastened.
4. **Handlebar and Seat Installation:** Securely attach the handlebars and seat according to the detailed instructions in the included manual.
5. **Electrical Connections:** Connect any loose electrical wires, ensuring they are properly seated and secured.

For a visual guide on assembly, please refer to the installation videos below:

Your browser does not support the video tag.

*Video: Detailed installation guide for the JOYRACER 24V Kids ATV (Model JC3288-J). This video demonstrates the step-by-step assembly process.*

Your browser does not support the video tag.

*Video: Installation instructions for the JOYRACER 24V 4WD Kids ATV with Remote Control. This video provides a visual walkthrough of the assembly process.*




*Image: The dual control system of the ATV, illustrating both manual control for the child and remote control for parental supervision.*

## Operation

Your JOYRACER ATV features dual driving modes and various entertainment functions.

### Driving Modes:

- **Manual Control:** The child can operate the ATV using the foot pedal and steering. The ATV has high and low-speed settings (1.8-5 mph).
- **Remote Control:** Parents can use the 2.4G remote control to guide the ATV. It offers 3 adjustable speeds (1.8/2.85/5 MPH) and an emergency brake function for safety.

## Starting and Driving:

1. Ensure the battery is fully charged.
2. Turn on the ATV using the power switch.
3. Select the desired speed mode (high/low) if using manual control.
4. Press the foot pedal to accelerate. Release to brake.
5. To use the remote control, ensure it is paired with the ATV. Use the remote to control direction and speed.

## Multimedia Functions:

The ATV includes a built-in entertainment system:

- **Bluetooth:** Connect your portable devices to play music.
- **MP3/USB Port:** Play audio files from a USB drive.
- **TF Card Slot:** Insert a TF card for additional media playback.
- **Radio:** Tune into radio stations.
- **LED Lights:** Stylish LED lights enhance the driving experience.

Your browser does not support the video tag.

*Video: Demonstration on how to operate the JOYRACER 24V Ride On ATV (Model JC3288). This video covers basic driving and control functions.*




*Image: A child confidently riding the JOYRACER 24V Kids ATV 4 Wheeler on a dirt path, showcasing its powerful 800W motors and 24V 9AH battery for extended playtime.*




*Image: Close-up of the ATV's dashboard, highlighting the Bluetooth, USB port, TF card slot, radio, LED lights, and battery display for an engaging ride.*

## Maintenance

Proper maintenance ensures the longevity and safe operation of your JOYRACER ATV.

- **Battery Care:**
  - Recharge the battery after each use for 8-12 hours. Do not overcharge.
  - If storing the ATV for an extended period, charge the battery fully every 30 days to maintain its health.
  - Avoid completely draining the battery, as this can reduce its lifespan.
- **Cleaning:** Wipe the ATV with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Avoid spraying water directly onto electrical components.
- **Inspection:** Regularly check all nuts, bolts, and fasteners to ensure they are tight. Inspect wheels, tires, and suspension for wear or damage.
- **Storage:** Store the ATV in a dry, cool place away from direct sunlight and moisture.

## Troubleshooting

If you encounter issues with your JOYRACER ATV, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| ATV does not move. | Battery is low or not connected; Power switch is off; Foot pedal is faulty; Motor issue. | Charge battery fully and ensure connections are secure. Turn on power switch. Check foot pedal for debris or damage. Contact customer support if motor issue is suspected. |
| Remote control not working. | Remote batteries are dead; Remote not paired; Interference. | Replace remote batteries. Re-pair the remote control with the ATV (refer to the full manual for pairing instructions). Move away from sources of interference. |
| Short battery life. | Battery not fully charged; Old battery; Heavy load or rough terrain. | Ensure battery is charged for 8-12 hours. Battery may need replacement if old. Reduce load or use on smoother surfaces. |
| Unusual noises during operation. | Loose parts; Debris in wheels/motors; Worn components. | Inspect for loose parts and tighten. Clear any debris. If noises persist, contact customer support. |

If these solutions do not resolve the issue, please contact JOYRACER customer support.

## Specifications

| Feature | Detail |
|---|---|
| Model Number | QLS3288 |
| Brand | JOYRACER |
| Motors | 4 x 200W (800W total) |
| Battery | 24V 9AH Rechargeable |
| Max Speed | 5 mph (High/Low Speed Switch: 1.8-5 mph) |
| Charging Time | 8-12 hours |
| Battery Average Life (per charge) | 1.5 hours (approx.) |
| Seating Capacity | 2-Seater |
| Dimensions (L x W x H) | 40.5" x 25.6" x 28.7" |
| Weight Capacity Maximum | 110 pounds |
| Item Weight | 47.4 pounds |
| Material Type | Metal, Polypropylene |

| Feature | Detail |
|---|---|
| Minimum Age (Manufacturer) | 36 months |
| Maximum Age (Manufacturer) | 96 months |
| Included Components | 24V Battery & Charger, 4x200W Motors & Parent Remote, Car Body & Other Accessories, Knee/Elbow Pads & Red Gift Pull Bow, Manual & After-Sales Support Card |




*Image: Two children riding the JOYRACER 24V Kids ATV, illustrating its 2-seater design and key dimensions (40.5"L x 25.6"W x 28.7"H), maximum load capacity of 110 lbs, and suitability for ages 3-8 years.*

## Warranty and Support

**Manufacturer Warranty:** The JOYRACER 24V Kids ATV comes with a 1-year warranty on parts.

**Customer Support:** JOYRACER is committed to providing excellent customer service. If you have any questions regarding the use, installation, or any other aspect of your product, please contact us directly. We offer 24-hour online support.

**How to Contact Support:** Login to your Amazon account, navigate to "Your orders", find the order ID for this product, and click "Contact seller".

© 2026 JOYRACER. All rights reserved.


## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question



**Open the live page**

**https://manuals.plus/asin/B0DYJTS2JK**

More documents and user manuals: **https://manuals.plus/**