**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**Secura PT025-WT**

# Secura PT025-WT Pomodoro Timer Instruction Manual

Model: PT025-WT

Introduction Product Overview Setup Operation Battery & Charging Applications Specifications Troubleshooting Maintenance Warranty & Support

## 1. Introduction

Thank you for choosing the Secura PT025-WT Pomodoro Timer. This innovative rotating cube timer is designed to enhance productivity and focus through its intuitive gravity sensor and visual progress bar. It offers multiple preset countdowns, a stopwatch function, and adjustable volume settings, making it suitable for various tasks and environments. Please read this manual thoroughly to understand its features and ensure optimal use.

## 2. Product Overview

The Secura PT025-WT Pomodoro Timer features an octagonal design with preset time values on each side. The device includes a display screen, control buttons, and a charging port.

### 2.1 Components and Controls

- **Display Screen:** Shows countdown/count-up time and visual progress bar.
- **Preset Sides:** Each side of the octagon is marked with a specific time (1, 3, 5, 10, 15, 30, 60 minutes).
- **'Timer' Side:** Used for the stopwatch (count-up) function.
- **Back Panel:** Contains the Type-C charging port, On/Off button, and volume adjustment controls.




Figure 1: Back view of the timer with labeled controls.

Your browser does not support the video tag.

Video 1: An overview of the Secura Pomodoro Timer, highlighting its octagonal shape and control features on the back panel.

## 3. Setup

### 3.1 Initial Charging

Before first use, fully charge the timer using the provided USB-C cable. Connect the cable to the Type-C charging port on the back of the device and a suitable power source (e.g., computer USB port, wall adapter). The charging indicator will illuminate during charging.




Figure 2: The timer connected for charging via its USB-C port.

### 3.2 Power On/Off

- **To Power On:** Press the On/Off button located on the back panel.
- **To Power Off:** Press and hold the On/Off button until the display turns off.

### 3.3 Volume Adjustment

The timer offers three volume settings: Mute, Normal, and Loud. Use the volume adjustment controls on the back panel to select your preferred setting. In Mute mode, the screen will flash for 30 seconds when the timer ends.




Figure 3: Volume settings for the timer.

## 4. Operating Instructions

### 4.1 Using Preset Timers

The timer features 7 preset countdown times: 1, 3, 5, 10, 15, 30, and 60 minutes. To start a countdown:

1. Ensure the timer is powered on.
2. Flip the timer so that the desired time (e.g., '15 min') is facing upwards. The countdown will begin automatically.




Figure 4: Activating preset countdowns by flipping the timer.

Your browser does not support the video tag.

Video 2: Demonstrates how to activate the 7 preset countdowns by rotating the timer to the desired time value.

## 4.2 Pause Function

To pause an active countdown:

- Place the timer with its display screen facing upwards on a flat surface. The countdown will pause.
- To resume, simply pick up the timer or flip it to another side.




Figure 5: Pausing the timer by placing it screen-up.

Your browser does not support the video tag.

Video 3: Demonstrates how to pause the timer by placing it with the screen facing up.

## 4.3 Reset Function

To reset an active countdown:

- Flip the timer so that the back panel (marked with 'Timer' or the blank side) is facing upwards. The timer will reset to 00:00.




Figure 6: Resetting the timer by placing it back-up.

Your browser does not support the video tag.

Video 4: Demonstrates how to reset the timer by placing it with the back/'timer' side facing up.

## 4.4 Stopwatch (Count-Up) Function

To use the stopwatch:

1. Place the timer with the 'Timer' side facing upwards.
2. Press the On/Off button on the back panel to start the count-up.
3. Press the On/Off button again to pause the stopwatch.
4. To reset, flip the timer to any other side or place it with the back panel facing up.

The stopwatch can count up to a maximum of 99 minutes and 59 seconds.

Your browser does not support the video tag.

Video 5: Shows how to activate the count-up (stopwatch) function by placing the 'Timer' side up and pressing the button.

## 4.5 Visual Progress Bar

The timer features a unique 10-segment progress bar around the display. Each segment represents 1/10th of the set duration, providing a clear visual indication of time elapsed and remaining. This feature is particularly helpful for visual learners and for managing tasks effectively.

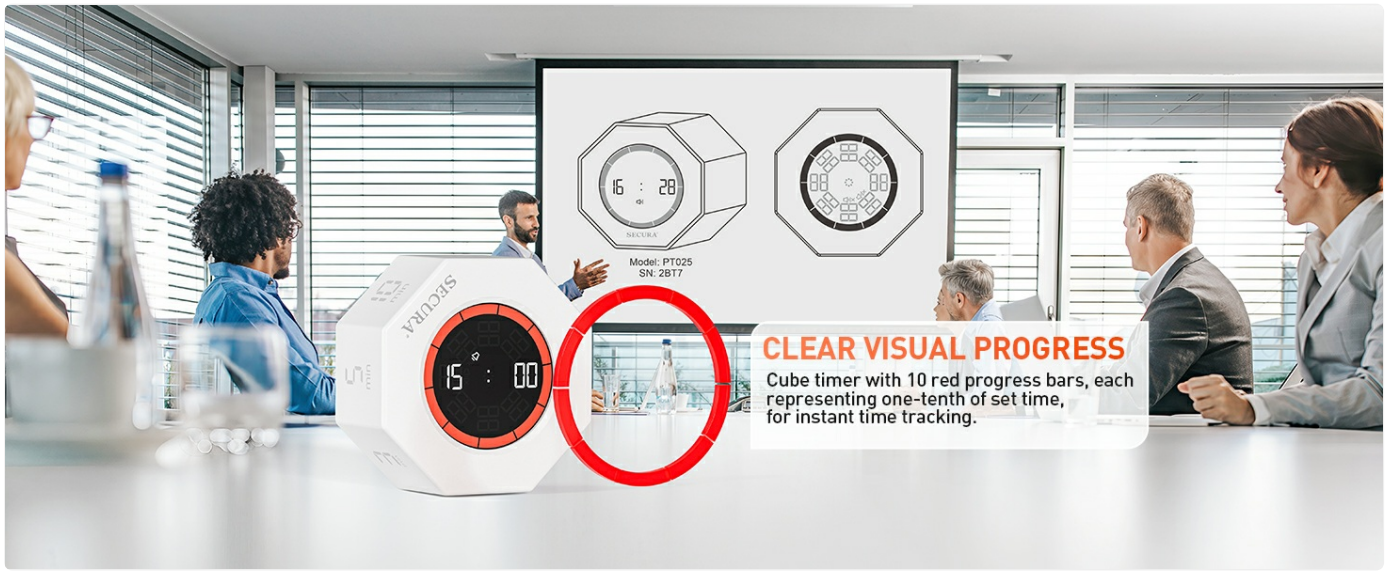


Figure 7: The visual progress bar indicating time passage.

Your browser does not support the video tag.

Video 6: Illustrates the visual progress bar as time counts down.

## 5. Battery and Charging

The Secura Pomodoro Timer is equipped with a rechargeable battery for convenience.

- **Charging Time:** Approximately 2 hours and 30 minutes for a full charge.
- **Continuous Use:** Up to 30 hours on a single charge.
- **Standby Time:** Up to 180 days.
- **Important Note:** Do not use the timer while it is charging. Disconnect the charging cable before operating the timer.




Figure 8: Battery life and charging information.

## 6. Applications

The Secura Pomodoro Timer is a versatile tool suitable for a wide range of activities:

- **Work & Study:** Ideal for Pomodoro Technique, focused work sessions, and managing study blocks.
- **Cooking & Baking:** Perfect for precise timing in the kitchen.
- **Exercise:** Track workout intervals or rest periods.
- **Kids' Tasks:** Helps children manage homework, playtime, or chores.
- **Meetings:** Keep meetings on schedule.

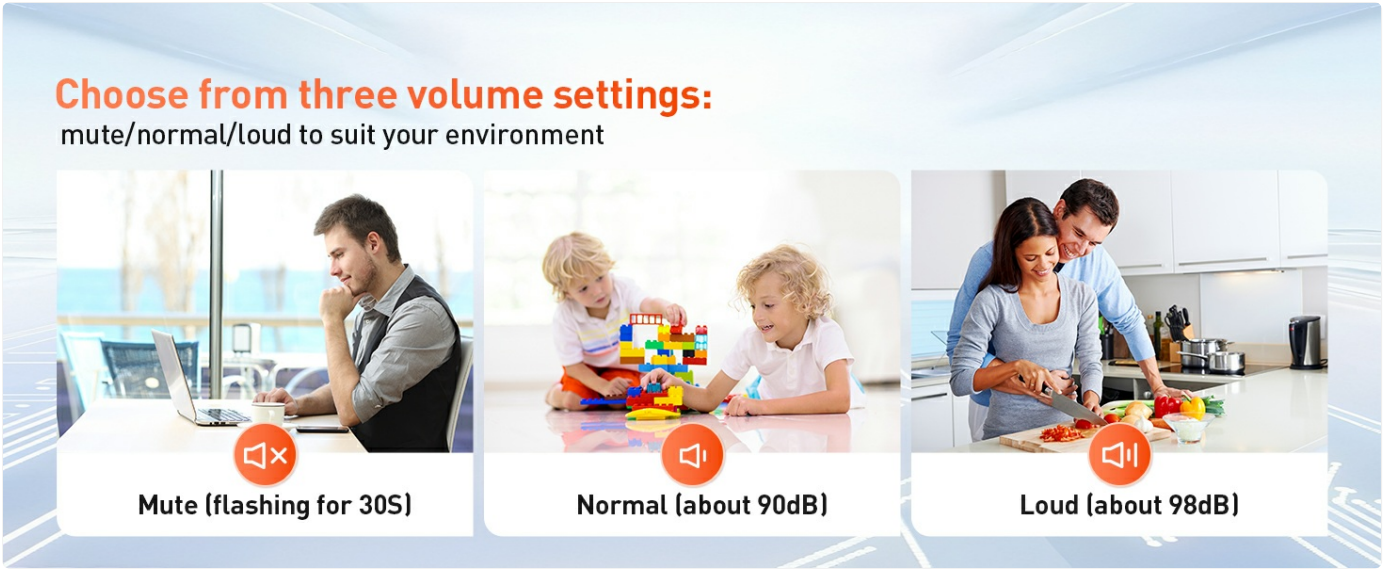



Figure 9: Examples of how the timer can be used in daily life.

Your browser does not support the video tag.

Video 7: Demonstrates the timer's use for focused work, breaks, teaching, yoga, and baking, emphasizing its versatility.

## 7. Specifications

| Feature | Detail |
|---|---|
| Product Name | Pomodoro Timer |
| Model Number | PT025-WT |
| Brand | Secura Brands |
| Color | White |
| Product Dimensions | 1.1"D x 2.36"W x 2.36"H |
| Item Weight | 0.05 Kilograms |
| Material | Plastic (ABS) |
| Charging Port | USB-C |
| Battery Capacity | 800mAh |
| Single Charging Time | 2 hours and 30 minutes |
| Max Standby Time | 180 days |
| Preset Times | 1, 3, 5, 10, 15, 30, 60 minutes |
| Stopwatch Max Time | 99 minutes 59 seconds |
| Volume Settings | Mute, Normal, Loud |




Figure 10: Detailed product specifications and package contents.

## 8. Troubleshooting

If you encounter any issues with your Secura Pomodoro Timer, please refer to the following common solutions:

- **Timer not turning on:** Ensure the timer is fully charged. Press and hold the On/Off button for a few seconds to power it on.
- **Display is dim or blank:** The battery might be low. Recharge the timer. If the issue persists after charging, contact customer support.
- **Timer not starting countdown:** Ensure the desired time side is facing completely upwards and the timer is on a stable surface.
- **No sound:** Check the volume settings on the back panel. Ensure it is not set to 'Mute'.
- **Inaccurate timing:** Ensure the timer is placed on a flat, stable surface and not disturbed during operation.

For further assistance, please contact Secura customer support.

## 9. Maintenance

To ensure the longevity and proper functioning of your Secura Pomodoro Timer, follow these maintenance guidelines:

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the timer or subjecting it to strong impacts, as this may damage the internal gravity sensor.

## 10. Warranty & Support

Secura Brands stands behind the quality of its products. This product is covered by a manufacturer's warranty against defects in materials and workmanship under normal use. Please refer to the warranty card included in your product packaging or visit the official Secura website for detailed warranty terms and conditions.
For technical support, product inquiries, or warranty claims, please contact Secura customer service through their official website or the contact information provided in your product documentation.

© 2026 Secura Brands. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

**Open the live page**

**https://manuals.plus/asin/B0DYNM7PJQ**

More documents and user manuals: **https://manuals.plus/**