## TELESIN S1-MNP-09

# TELESIN 35-inch Extension Selfie Stick User Manual

Model: S1-MNP-09

## 1. Introduction

Thank you for choosing the TELESIN 35-inch Extension Selfie Stick. This manual provides essential information for the safe and effective use of your new accessory. This extension pole is designed for action cameras, offering a smooth and stable solution for capturing a wide range of shots, from close-up selfies to expansive high-angle views.




Image 1.1: TELESIN 35-inch Extension Selfie Stick.

The selfie stick features a lightweight yet durable aluminum alloy construction with a comfortable silicone grip. Its dual-locking mechanism ensures stability at any extended length, making it ideal for various activities such as vlogging, travel, and action sports. The universal 1/4-inch tripod screw at the base allows for versatile mounting options.

## 2. What's in the Box

Please check the package contents to ensure all items are present:

- 1 x TELESIN Extension Selfie Stick
- 1 x Locking Screw
- 1 x 1/4" Quick-Release Tripod Mount
- 1 x Color Box (Packaging)

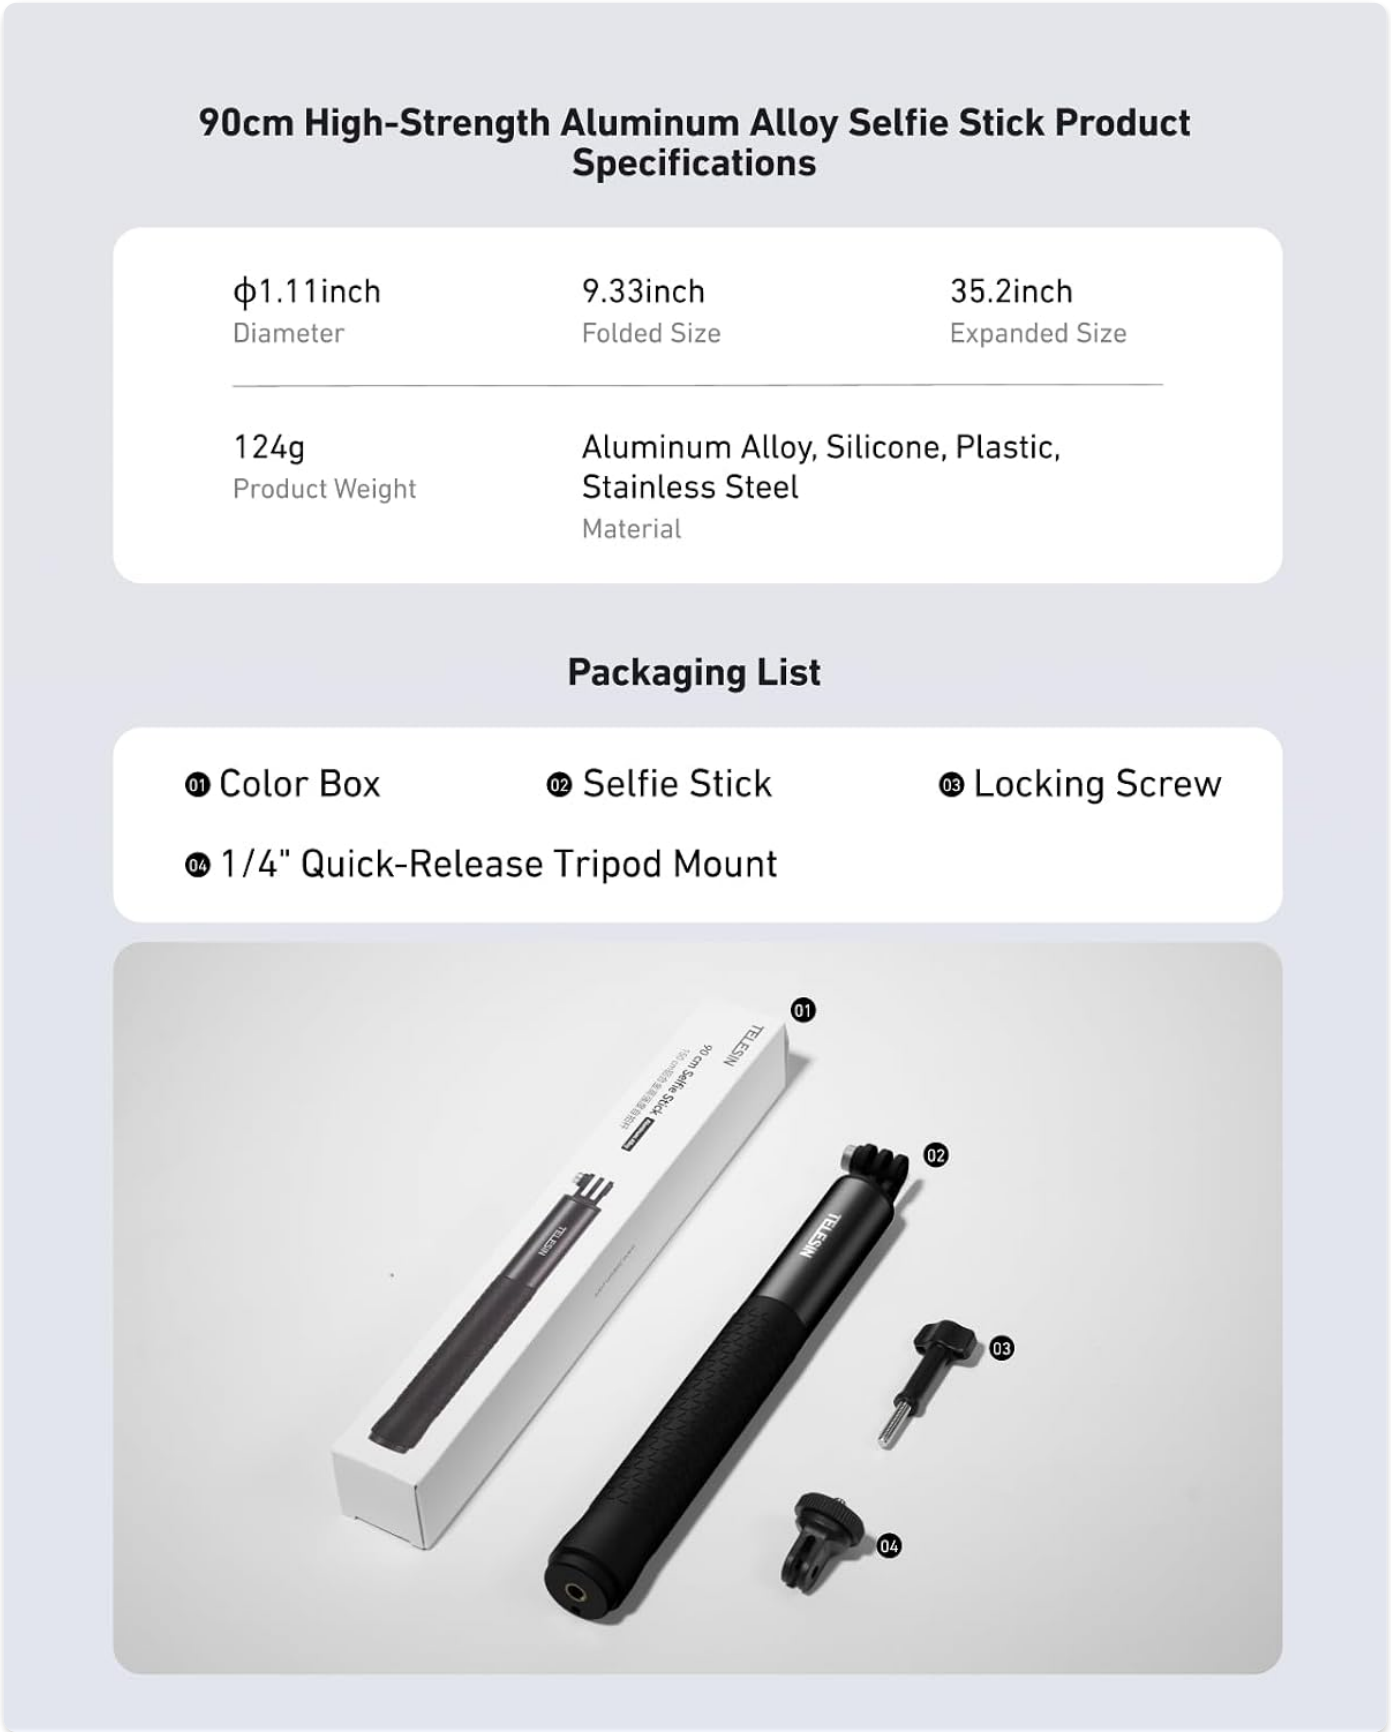



Image 2.1: Package contents including the selfie stick, locking screw, and 1/4" quick-release tripod mount.

## 3. Setup

### 3.1 Attaching Your Camera

1. **For GoPro/Action Cameras:** Align your action camera's mounting fingers with the selfie stick's mount. Insert the provided locking screw and tighten it securely to prevent movement.

2. **For Devices with 1/4-inch Thread:** The selfie stick includes a 1/4" Quick-Release Tripod Mount. Attach this mount to the top of the selfie stick, then screw your compatible device (e.g., phone holder, small camera) onto the 1/4-inch thread.



Image 3.1: Attaching an action camera to the selfie stick mount.

### 3.2 Extending and Retracting the Pole

The selfie stick features a smooth, effortless extension mechanism with a dual-locking design for enhanced stability.

- **To Extend:** Gently pull each section of the pole outwards to your desired length. The internal mechanism will engage to hold it in place.
- **To Retract:** Push each section back into the main body until fully collapsed.




Image 3.2: Demonstrating the smooth extension feature of the pole.

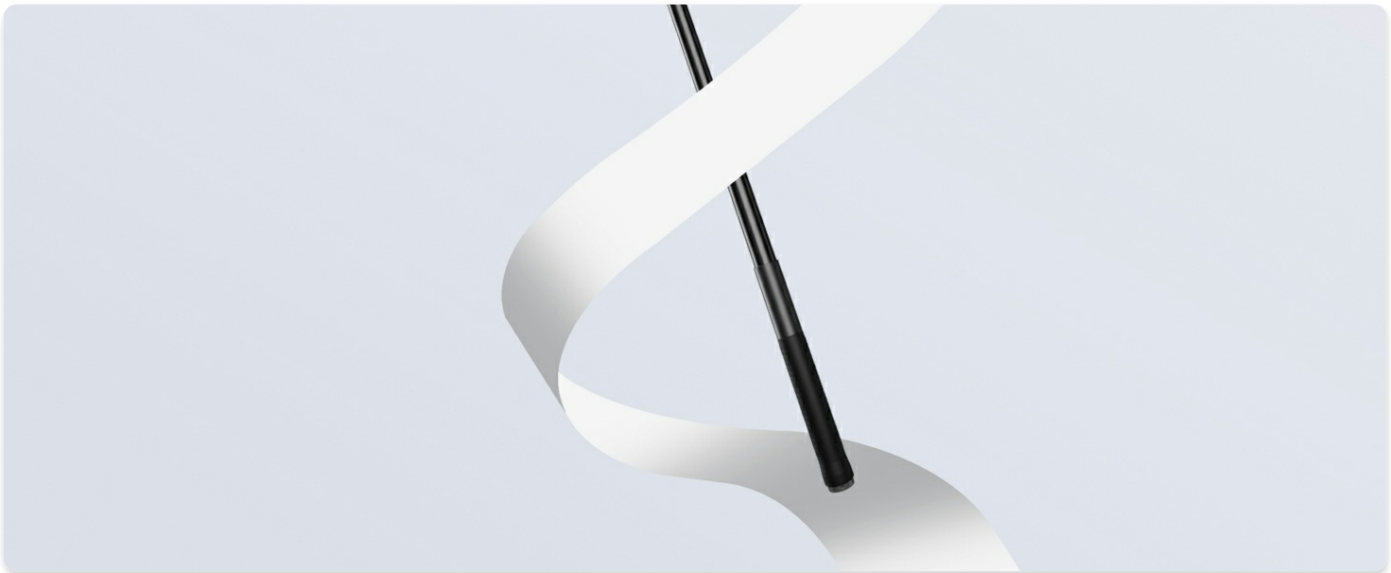


Image 3.3: Detail of the point positioning design and dual-locking mechanism.

## 4. Operating Instructions

### 4.1 Adjusting Shooting Angles

The selfie stick's bent hook with three claws allows for flexible angle adjustments to capture various perspectives:

- **Selfies:** Keep the pole at a shorter length for personal or group shots.

- **High-angle Shots:** Extend the pole fully to capture overhead views or to get above crowds.
- **Low-angle Shots:** Position the camera downwards for unique ground-level perspectives.




Image 4.1: Examples of selfies, high-angle, and low-angle shots using the bent hook design.




Image 4.2: Capturing a wide view with the extended selfie stick.

## 4.2 Using with External Mounts

The 1/4-inch tripod screw at the bottom of the selfie stick allows for attachment to various external accessories:

- **Tripods:** Mount the selfie stick onto any standard tripod for stationary shots or increased stability.
- **Bike/Motorcycle Mounts:** Attach to compatible mounts for dynamic action footage.

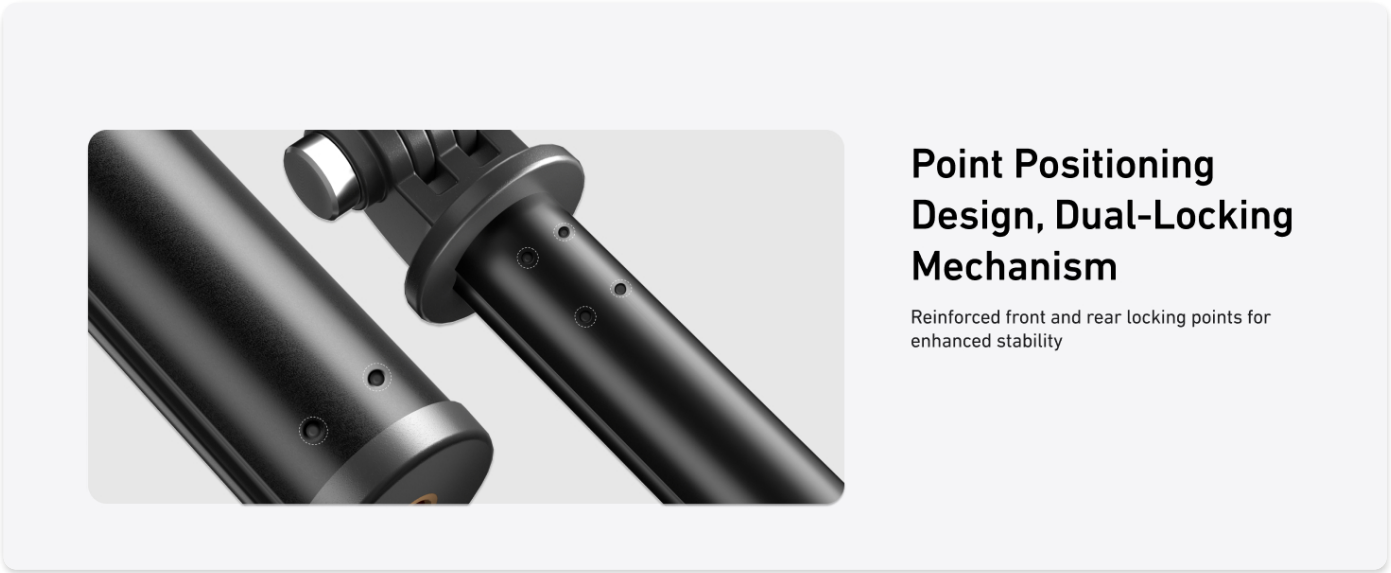



Image 4.3: The 1/4-inch interface for wide compatibility with accessories.

## 5. Maintenance

- **Cleaning:** Wipe the selfie stick with a soft, damp cloth after each use, especially if exposed to dirt, dust, or saltwater. Avoid harsh chemicals.
- **Drying:** Ensure the pole is completely dry before retracting and storing, particularly if used in wet conditions.
- **Storage:** Store the selfie stick in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This product is **not water resistant**. Avoid submerging it in water or prolonged exposure to heavy rain to prevent damage.

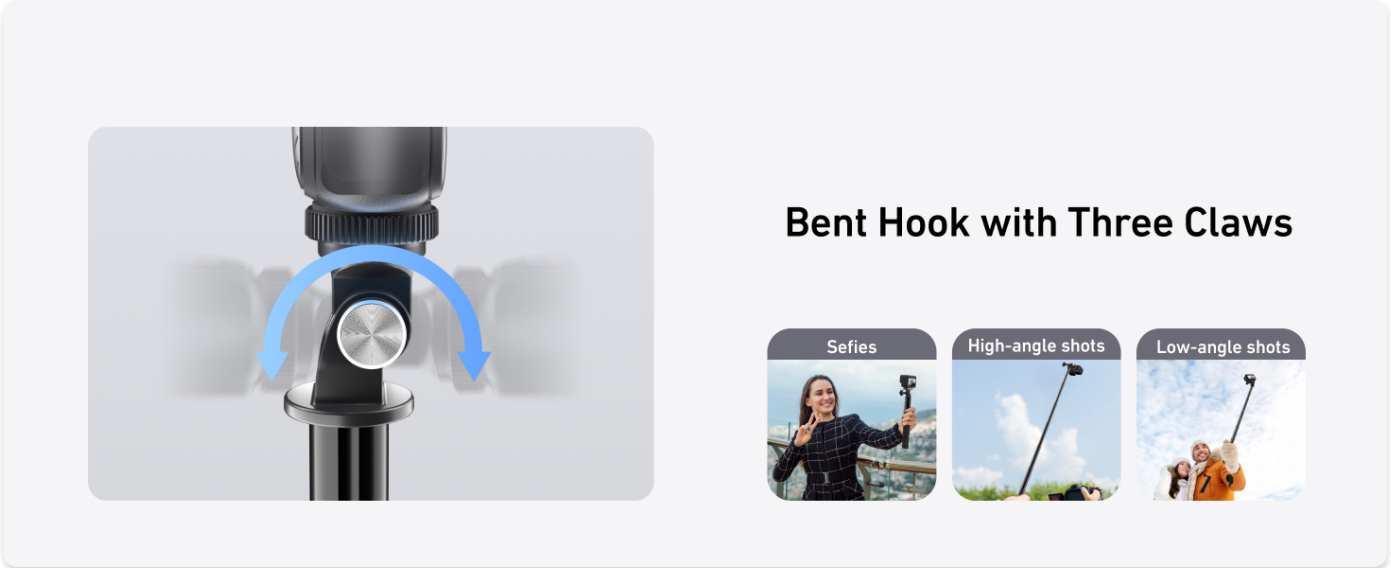



Image 5.1: The skin-friendly silicone grip provides comfortable handling and reduces fatigue.

## 6. Troubleshooting

- **Pole Wobbles When Extended:** Ensure each section is fully extended and the dual-locking mechanism is engaged. Check that the camera is securely fastened to the mount.
- **Difficulty Extending/Retracting:** Check for any debris or obstructions in the pole sections. Clean the pole as described in the Maintenance section. Do not force the extension or retraction.
- **Camera Not Secure:** Verify that the locking screw is tightened properly. If using a 1/4-inch mount, ensure it is firmly screwed into the camera and the selfie stick.

- **Compatibility Issues:** Ensure your camera model is listed as compatible. For non-GoPro cameras, confirm they use a standard 1/4-inch tripod thread.

## 7. Specifications

| | |
|---|---|
| **Brand** | TELESIN |
| **Model Name** | S1-MNP-09 |
| **Color** | Black |
| **Material** | Aluminum Alloy, Silicone, Plastic, Stainless Steel |
| **Item Weight** | 124 Grams (4.37 ounces) |
| **Folded Size** | 9.33 inches (23.7 cm) |
| **Expanded Size** | 35.2 inches (89.4 cm) |
| **Max Load Capacity** | 500g |
| **Water Resistance Level** | Not Water Resistant |
| **Compatible Devices** | GoPro Hero 13/12/11/10/9/8/7/6/5 Session, GoPro Max Mini, Insta360 X5/X4/X3 Go 3, DJI Osmo 360 Osmo Nano DJI Osmo Action 2/3/4/5 Pro/6, Osmo Pocket 4/3/2, AKASO, Xtra Muse and other action cameras. |




Image 7.1: Detailed specifications for various TELESIN selfie stick models, including the 90cm (35.2-inch) version.

## 8. Warranty and Support

### 8.1 Warranty Information

This TELESIN Extension Selfie Stick comes with a**90-day warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized

modifications, or improper storage.

### 8.2 Customer Support

For any questions, concerns, or issues regarding your TELESIN product, please contact our customer support team. Refer to your purchase documentation or the TELESIN official website for contact details.


## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question