Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Feihe DVD-TV-001

Feihe 15.6 inch Portable DVD Player with TV Tuner

MODEL: DVD-TV-001

Introduction

This manual provides detailed instructions for the operation and maintenance of your Feihe 15.6 inch Portable DVD Player with built-in TV Tuner. This versatile 2-in-1 device combines TV viewing and DVD playback capabilities, offering entertainment on the go or at home. It features multiple connection options, flexible power supplies, and supports a wide range of media formats.

What's in the Box

- Portable TV/DVD Player
- Remote Control
- AC Charger Adapter
- 3-in-1 AV Cable (male)
- Car Charger Adapter
- ATSC Antenna

Product Features

High-Resolution Swivel Screen

The device features a 15.6-inch HD screen, providing clear and vibrant visuals. The screen can swivel 270 degrees and flip 180 degrees, allowing for multiple viewing angles and compact storage.



Image: The portable DVD player with its 15.6-inch screen swiveled to the side, demonstrating its flexible viewing capabilities.

Multiple Connection Options

Equipped with HDMI, AV, USB, and Headphone Jack ports, along with a Digital TV Tuner, this player offers extensive connectivity. You can connect external devices like TV boxes, USB flash drives, or even sync the screen to a larger TV.



Image: A close-up of the portable DVD player's side, highlighting the DC IN, AV IN, Earphone, AV OUT, USB, HDMI IN, and TV ports.

Three Power Supply Options

For maximum convenience, the device supports three power sources: a built-in rechargeable battery, a car adapter, and an AC power adapter. This ensures uninterrupted entertainment whether you are at home, in a vehicle, or outdoors.

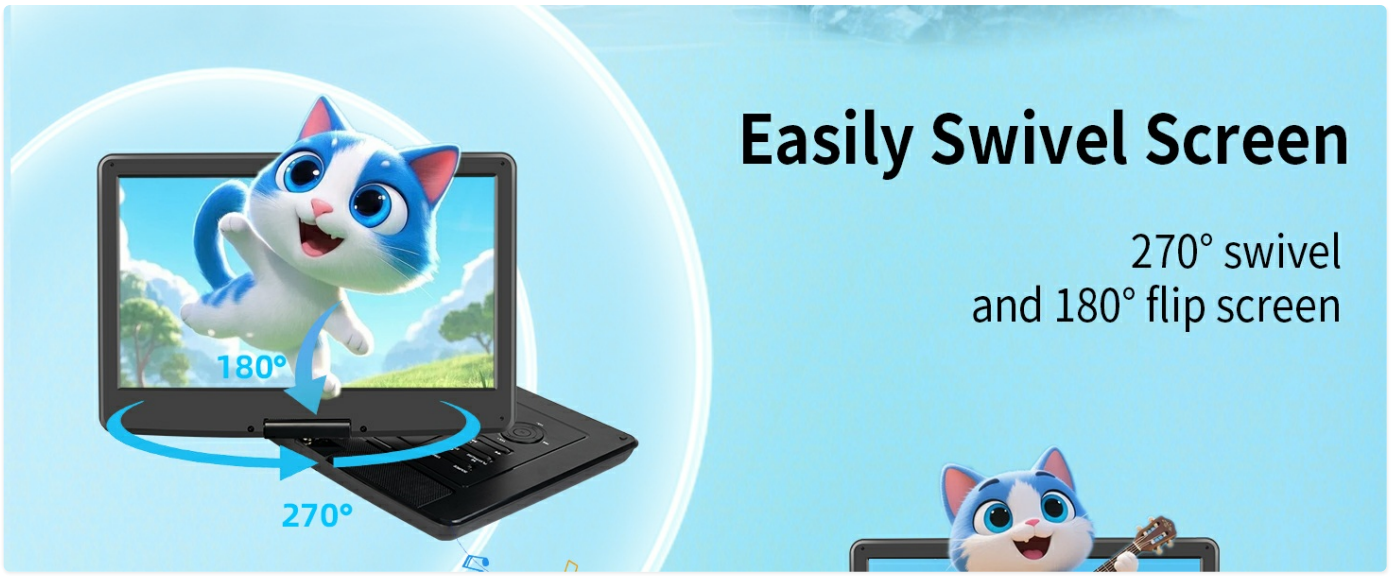


Image: The portable DVD player with icons representing its three power options: Power Adapter, Car Charger Adapter, and 4000mAh Battery.

Multiple Format Support

The player supports a wide array of media types, including AVI, VOB, MPEG1/2, XVID, MP3, WMA, JPEG, and DVD formats such as CD, DVD, DVD+R(-R), and DVD+RW(-RW). **Note: Blu-ray discs are not supported.**



Image: The portable DVD player displaying a movie, with icons indicating support for various DVD and USB media formats.

Built-in ATSC Tuner for Free Local HD Channels

With the integrated ATSC tuner and included antenna, you can receive free over-the-air local HD television channels, expanding your entertainment options without additional subscriptions.



Image: The portable DVD player displaying a TV program, connected to an antenna, with text indicating 'GET FREE LOCAL HD CHANNELS Built in ATSC Tuner'.

Portable Entertainment Solution

Its compact and lightweight design makes it an ideal companion for travel, home use, or any scenario where portable entertainment is desired.



Image: A collage showing the portable DVD player being used in different environments: home, RV, car, and a camping tent, emphasizing its portability.

Official Product Video

Your browser does not support the video tag.

Video: A detailed overview of the Feihe Portable DVD Player, demonstrating its features including the large screen, TV tuner, and various connectivity options. This video is provided by Amy & Friends POV (Seller).

Setup

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all items listed in the 'What's in the

Box' section are present.

2. **Initial Charging:** Before first use, connect the AC charger adapter to the 'DC IN' port on the player and plug it into a wall outlet. Allow the unit to charge fully. The charging indicator light will change when charging is complete.
3. **Power On:** Press the 'POWER ON/OFF' button to turn on the device.
4. **Language Selection:** Upon first power-up, you may be prompted to select your preferred language. Use the navigation buttons on the unit or remote to select and confirm.
5. **Connecting the Antenna (for TV):** For TV reception, connect the included ATSC antenna to the 'TV' antenna port on the player. Position the antenna for optimal signal reception.
6. **Channel Scan (for TV):** Navigate to the 'Setup Wizard' or 'Channel Scan' menu option. Initiate an automatic channel scan to find available local TV channels. This process may take several minutes.

Operating Instructions

Powering On/Off

Press the 'POWER ON/OFF' button located on the side of the unit to turn the player on or off. Alternatively, use the power button on the remote control.

Playing DVDs

1. Open the disc cover by gently lifting it.
2. Place a compatible DVD or CD onto the spindle, ensuring it clicks into place.
3. Close the disc cover.
4. Press the 'SOURCE' button to select 'DVD' mode if not already selected.
5. The disc should begin playing automatically. If not, press the 'PLAY/PAUSE' button.
6. Use the 'PLAY/PAUSE', 'STOP', 'REWIND', and 'FAST FORWARD' buttons on the unit or remote for playback control.

Using the TV Tuner

1. Ensure the ATSC antenna is securely connected.
2. Press the 'SOURCE' button to select 'TV' mode.
3. Use the 'CH+' and 'CH-' buttons on the unit or remote to change channels.
4. If channels are not found, perform a 'Channel Scan' as described in the Setup section.

Connecting External Devices (HDMI/USB/AV)

- **HDMI:** Connect an HDMI cable from an external device (e.g., game console, streaming stick) to the 'HDMI IN' port. Select 'HDMI' as the source using the 'SOURCE' button.
- **USB:** Insert a USB flash drive into the 'USB' port. Press the 'SOURCE' button to select 'USB/DVD' mode and navigate to the USB content.
- **AV:** Use the included 3-in-1 AV cable to connect to external AV devices. Connect the yellow, white, and red plugs to the corresponding ports on the external device, and the single plug to the 'AV IN' port on the player. Select 'AV' as the source.
- **AV Out (Sync Screen to TV):** To display the player's content on a larger TV, connect the 3-in-1 AV cable to the 'AV

OUT' port on the player and the corresponding AV IN ports on your television.



Image: The portable DVD player connected to a larger television via an AV cable, demonstrating the screen synchronization feature.

Using Headphones

Plug standard 3.5mm headphones into the 'EARPHONE' jack for private listening.

Using the Remote Control

The included remote control provides full functionality for navigating menus, controlling playback, adjusting volume, and changing channels. Ensure the remote has working batteries and is pointed towards the player's sensor.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the player. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Store them in their cases to prevent scratches. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the unit for an extended period, charge it to about 50% and recharge every few months.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
No power	Battery drained; AC adapter not connected; Power button not pressed.	Connect AC adapter and charge; Ensure power button is pressed firmly.

Problem	Possible Cause	Solution
No picture on screen	Screen is off; Incorrect source selected; Screen brightness too low.	Press 'LCD ON/OFF' button; Select correct source (DVD, TV, HDMI, AV); Adjust brightness in settings.
No sound	Volume too low; Mute is on; Headphones connected.	Increase volume; Press 'MUTE' button; Disconnect headphones if using speakers.
Disc not playing	Disc is dirty or scratched; Incorrect disc format; Disc cover not closed.	Clean or replace disc; Ensure disc is supported (no Blu-ray); Close disc cover completely.
No TV channels found	Antenna not connected or positioned correctly; No signal in area; Channel scan not performed.	Connect and adjust antenna position; Check local signal availability; Perform a channel scan.

Specifications

Brand: Feihe

Model Number: DVD-TV-001

Screen Size: 15.6 Inches

Display Type: LCD

Color: Black

Product Dimensions: 15.6 x 15.6 x 15.6 inches

Item Weight: 4.5 pounds

Media Type Support: CD, DVD, SVCD, VCD, AVI, VOB, MPEG1/2, XVID, MP3, WMA, JPEG (Blu-ray not supported)

Connectivity: HDMI In, AV In, AV Out, USB, Headphone Jack, TV Antenna Input

Tuner: Built-in ATSC Tuner

Power Options: AC Adapter, Car Adapter, Built-in Rechargeable Battery

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Feihe website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DYVBRYJZ

More documents and user manuals: **https://manuals.plus/**