Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GTILE 20250301001

GTILE Clear Figure Display Bag - Instruction Manual

Introduction

Thank you for choosing the GTILE Clear Figure Display Bag. This set of four round PVC display bags is designed to protect and showcase your small collectibles, blind box figures, keychains, lipsticks, and other mini items. Each bag features a clear casing for visibility and a smooth zipper for easy access, along with a metal clasp for portability. This manual provides essential information for the proper setup, use, and care of your display bags.

Product Overview

The GTILE Clear Figure Display Bag offers a transparent and protective solution for your cherished small items. Its compact design and integrated keychain allow for versatile display and carrying options.



Image: The display bags are designed for accessory storage, featuring a clear view and stackable design.

Setup

The GTILE Clear Figure Display Bags require no assembly. They are ready for immediate use upon unboxing.

1. **Unpack:** Carefully remove the display bags from their packaging.
2. **Inspect:** Check each bag for any signs of damage during transit.
3. **Prepare:** Ensure the interior of the bag is clean and dry before placing items inside.

Operating Instructions

Using your GTILE Clear Figure Display Bag is straightforward:

1. **Open the Bag:** Locate the smooth zipper and gently pull it to open the bag.
2. **Insert Item:** Place your desired small collectible, figure, keychain, or lipstick inside the clear casing. Ensure the item fits comfortably without forcing the zipper.

3. **Close the Bag:** Carefully zip the bag closed to secure your item.
4. **Attach Keychain (Optional):** Use the integrated metal pliers clasp to attach the display bag to a backpack, handbag, or other desired location.



Image: Examples of items that can be stored and displayed, including dolls, tinplate badges, and small ornaments.



Image: The display bag attached to a backpack, showcasing a collection. The bags can be loaded with various items for display.

Maintenance

To keep your GTILE Clear Figure Display Bags in optimal condition:

- **Cleaning:** The transparent PVC casing can be easily wiped clean with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these may scratch or damage the material.
- **Drying:** Allow the bags to air dry completely before storing or re-using them.
- **Storage:** Store the bags in a cool, dry place away from direct sunlight to prevent material degradation over time.



Image: The display bags offer protection against water and dust, helping to keep your collection safe.

Troubleshooting

- **Zipper Issues:** If the zipper becomes stiff, apply a small amount of zipper lubricant or a graphite pencil lead to the teeth. Avoid forcing the zipper.
- **Scratches on Casing:** Minor scratches on the PVC can sometimes be reduced with specialized plastic polish. For deeper scratches, replacement may be necessary.
- **Bag Deformation:** If the bag appears deformed, gently reshape it by hand. Avoid placing heavy objects on top of the bags during storage.

Specifications

Feature	Detail
Model Number	20250301001

Feature	Detail
Material	PVC (Plastic)
Color	Clear
Shape	Round
Diameter	8 cm (3.1 inches)
Height	4 cm (1.6 inches)
Keychain Length	6.4 cm (2.5 inches)
Item Weight	Approximately 4.2 ounces (for the set)
Included Components	4 Pcs round doll storage bags

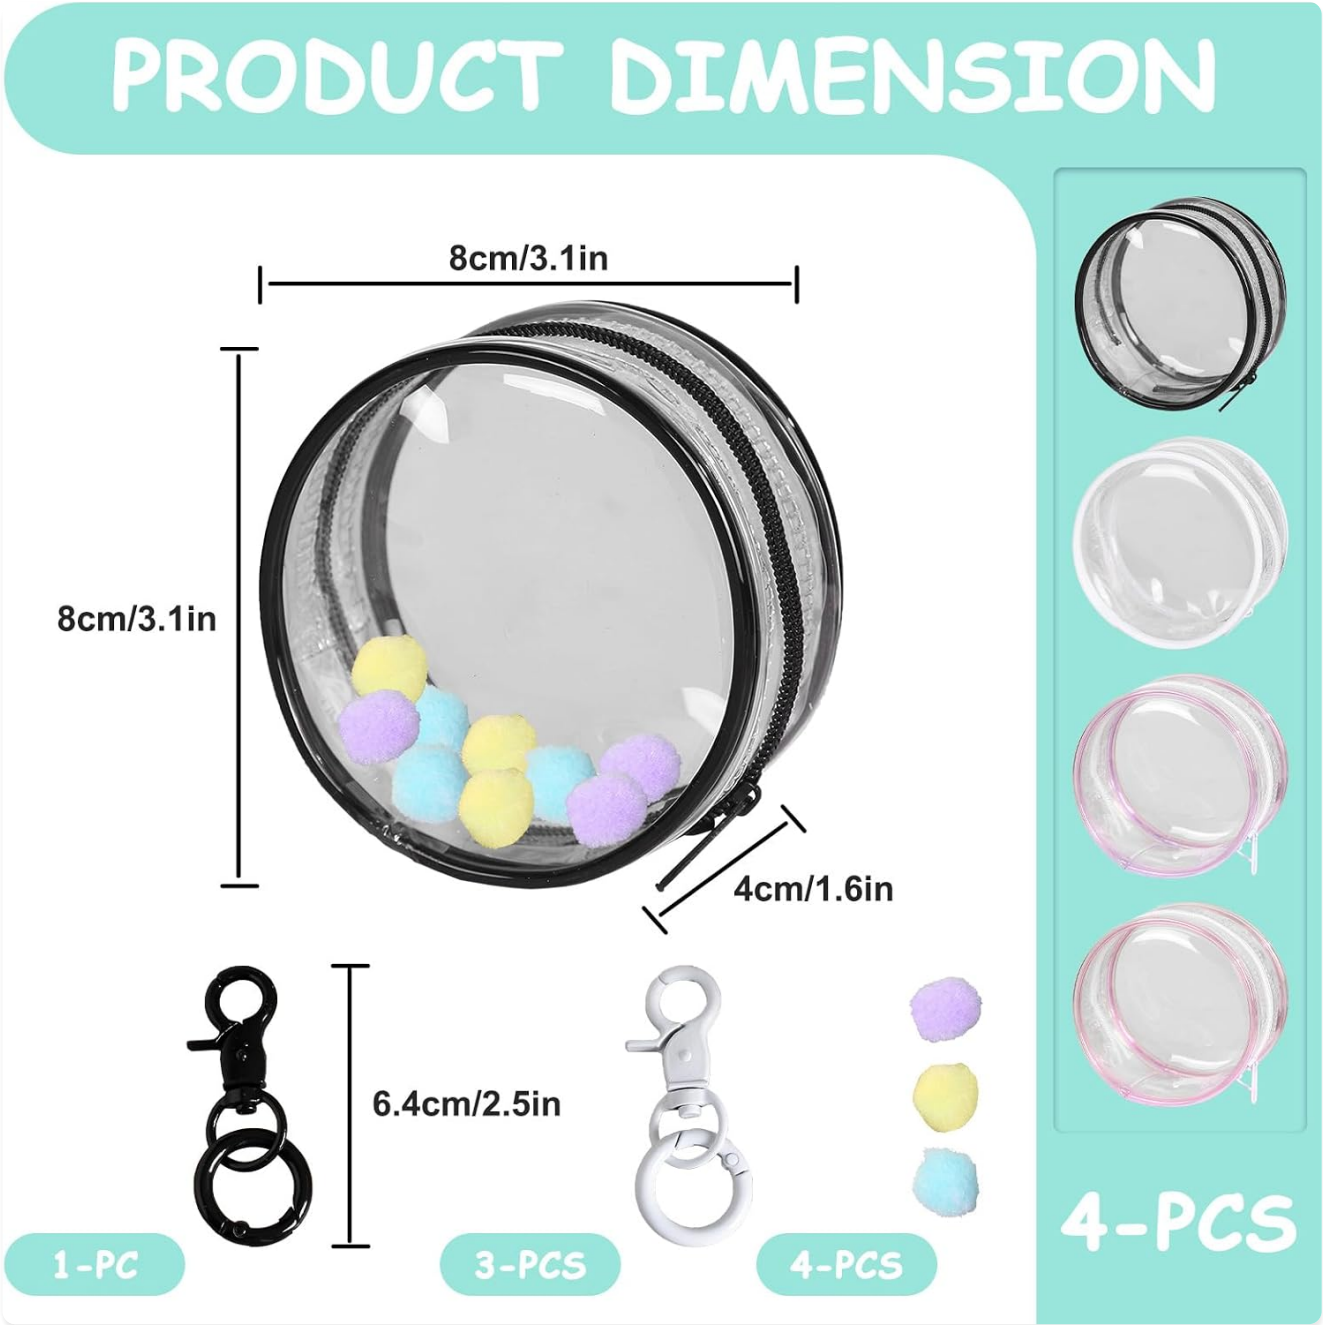


Image: Detailed product dimensions for the display bag and its accompanying keychain.

Warranty Information

Specific warranty details for the GTILE Clear Figure Display Bag are not provided in the product information. Please refer to your retailer's return policy or contact GTILE customer service for further inquiries regarding warranty coverage.

Customer Support

For any questions, concerns, or assistance with your GTILE Clear Figure Display Bag, please contact the seller or refer to the customer support options provided by your point of purchase. Please have your product model number (20250301001) and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DYY2MZF5

More documents and user manuals: **https://manuals.plus/**