Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bennett Read HFN138

Bennett Read Air Cooler with Remote, Model HFN138 User Manual

Model: HFN138

1. Introduction

The Bennett Read Air Cooler with Remote, Model HFN138, is designed to cool, purify, refresh, and humidify the air in your living spaces. It features a 20-liter water tank, a timer function, and a full-feature remote control for convenient operation. The unit provides evaporative cooling for up to 14 hours on a single tank and includes adjustable air vents with an auto-swing function to distribute cool air effectively.

2. Safety Instructions

Please read these safety instructions carefully before operating the appliance. Failure to follow these instructions may result in electric shock, fire, or injury.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before moving.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance with a damaged cord or plug, or after it malfunctions or has been damaged in any manner.
- Place the appliance on a stable, level surface.
- Do not block the air inlets or outlets.
- Do not use the appliance near flammable materials or gases.
- Only use clean water in the water tank.
- Do not attempt to repair or modify the appliance yourself. Contact qualified service personnel.

3. Package Contents

Verify that all items are present upon unpacking:

- 1 x Bennett Read Air Cooler (Model HFN138)
- 1 x Remote Control
- 1 x User Manual

4. Product Overview

Familiarize yourself with the components of your Bennett Read Air Cooler.



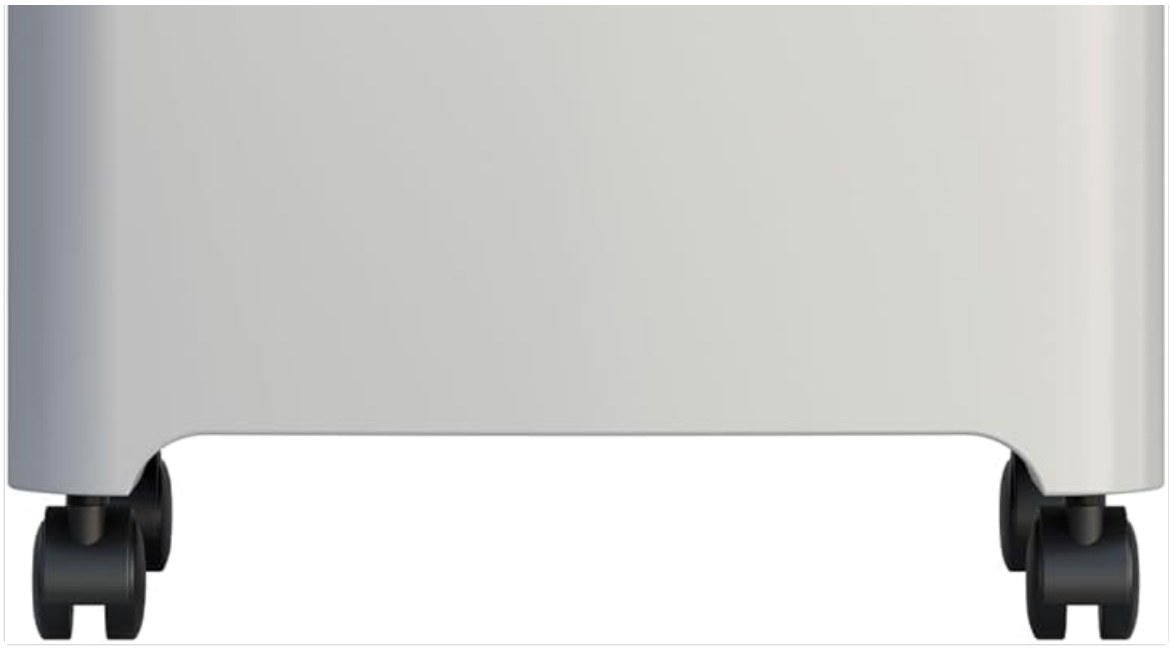


Figure 4.1: Front view of the Bennett Read Air Cooler, showing the main fan grille and control panel.





Figure 4.2: Side view of the air cooler, highlighting the air intake grille.



Figure 4.3: Back view of the air cooler, showing the rear panel and water tank access.



Figure 4.4: The air cooler's 4-in-1 functionality: Cools, Refreshes, Purifies, and Humidifies.

5. Setup

1. **Unpacking:** Carefully remove the air cooler from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the air cooler on a firm, level surface. Ensure there is adequate space around the unit for proper airflow (at least 20 cm from walls or furniture). Do not place it directly against a wall.
3. **Filling the Water Tank:**
    - Locate the water tank at the bottom rear of the unit.
    - Pull out the water tank gently.
    - Fill the tank with clean, cool water up to the 'MAX' level indicator. Do not overfill.
    - For enhanced cooling, you may add ice packs (not included) to the water tank.
    - Carefully push the water tank back into its position until it clicks securely.
4. **Power Connection:** Insert the power plug into a suitable electrical outlet.

6. Operating Instructions

6.1 Control Panel



Figure 6.1: Top control panel with various function buttons.

The control panel on top of the unit allows direct operation:

- **ON/OFF Button:** Press to turn the unit on or off.
- **SPEED Button:** Press to cycle through fan speeds (Low, Medium, High).
- **SWING Button:** Activates or deactivates the automatic horizontal oscillation of the air vents.
- **COOL Button:** Activates or deactivates the evaporative cooling function. This function requires water in the tank.
- **MODE Button:** Selects different operating modes (e.g., Normal, Natural, Sleep).
- **TIMER Button:** Sets the auto shut-off timer. Press repeatedly to select desired operating duration (up to 24 hours).

6.2 Remote Control



Figure 6.2: The included remote control for convenient operation.

The remote control provides the same functionality as the control panel, allowing for convenient operation from a distance. Ensure batteries are correctly inserted.

- **Power Button:** Turns the unit on or off.
- **Speed Button:** Adjusts fan speed.
- **Swing Button:** Controls oscillation.
- **Cool Button:** Activates/deactivates cooling.
- **Mode Button:** Cycles through operating modes.
- **Timer Button:** Sets the auto shut-off timer.

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your air cooler.

7.1 Cleaning the Water Tank

1. Unplug the air cooler from the power outlet.
2. Pull out the water tank.
3. Use the easy-empty water outlet to drain any remaining water.
4. Clean the tank with a soft cloth and mild detergent. Rinse thoroughly with clean water.
5. Allow the tank to air dry completely before reinserting.

7.2 Cleaning the Cooling Pad/Filter

1. Unplug the air cooler.
2. Remove the rear grille and carefully extract the cooling pad.
3. Rinse the cooling pad under running water to remove dust and mineral deposits. Do not use harsh chemicals.
4. Allow the cooling pad to dry completely before reinserting.
5. Clean the air filter (if applicable) with a soft brush or vacuum cleaner.

7.3 Exterior Cleaning

Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7.4 Storage

When storing the air cooler for an extended period, ensure the water tank and cooling pad are clean and dry. Store the unit in a cool, dry place, preferably in its original packaging.

8. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply. Power button not pressed.	Check if the power cord is securely plugged in. Press the ON/OFF button.
No cooling effect.	Water tank is empty. Cool function is not activated. Cooling pad is dry or dirty.	Fill the water tank. Press the COOL button. Clean or moisten the cooling pad.
Weak airflow.	Air inlets/outlets are blocked. Fan speed is too low.	Ensure no obstructions. Increase the fan speed using the SPEED button.
Unpleasant odor.	Stagnant water in the tank. Dirty cooling pad.	Drain and clean the water tank. Clean the cooling pad.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and unit.	Replace batteries, check polarity. Remove any obstructions.

If the problem persists after checking these points, please contact customer support.

9. Specifications

Feature	Specification
Brand	Bennett Read
Model Number	HFN138
Type	Evaporative Air Cooler
Water Tank Capacity	20 Liters
Material	Plastic
Color	Black/White
Product Dimensions (D x W x H)	42D x 35.5W x 78.5H centimetres
Special Features	Adjustable Speed, Remote Control, Auto-Swing Function, Timer (up to 24 hours)
Cooling Duration (single tank)	Up to 14 hours
Manufacturer	Bennett Read

10. Warranty

This Bennett Read Air Cooler comes with a**1 Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.

11. Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Bennett Read customer support. Refer to the product packaging or the official Bennett Read website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DZ2XJBKF

More documents and user manuals: **https://manuals.plus/**