SMENZBKCS

# Generic SMENZBKCS Arched Cabinet Instruction Manual

Model: SMENZBKCS | Brand: Generic

## Introduction

Thank you for choosing the Generic SMENZBKCS Arched Cabinet. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

## Safety Information

**THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOADS HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.**

- Always assemble the cabinet on a soft, clean surface to prevent scratches.
- Ensure all hardware is securely tightened before use.
- Do not allow children to climb on or play with the cabinet.
- Distribute weight evenly on shelves to maintain stability.
- Consider anchoring the cabinet to a wall, especially in homes with children or pets, to prevent tipping.

## Product Features

- **Assembled Dimensions/Weight:** 36"L x 17.5"W x 74"H / 179.67 lbs.
- **Multi-functional:** Offers abundant storage for various items.
- **Durable Construction:** Solid wood frame and stylish grained veneers.
- **Adjustable Shelves:** Includes 2 adjustable shelves for flexible storage.
- **Stylish Hardware:** Antique gold hardware enhances the aesthetic.
- **Upper Doors:** Feature tempered glass for display.
- **Rattan Cabinet Doors:** Unique rattan inserts on lower doors add texture.
- **Finish Options:** Available in Sherwin Williams matte black exterior with natural interior, or natural finish on exterior.
- **Spacious Interior:** Multiple shelves provide ample room for organization.

## Specifications

| Feature | Detail |
|---|---|
| Brand | Generic |
| Model Number | SMENZBKCS |
| Color | Green (also available in other finishes) |
| Material | Rattan, Tempered Glass, Wood |
| Product Dimensions (D x W x H) | 17.5" x 36" x 74.25" |
| Item Weight | 179.7 pounds |
| Weight Capacity Maximum | 179.7 pounds |
| Number of Shelves | 2 (Adjustable) |
| Number of Doors | 2 (Upper Tempered Glass, Lower Rattan) |
| Hardware Color | Antique Gold |
| Installation Type | Freestanding |
| Mounting Type | Floor Mount |
| Included Components | 2 Adjustable Shelves, 2 Big Handles, 2 Small Handles, 4 Legs, Bookcase |

## Setup and Assembly

The Generic SMENZBKCS Arched Cabinet is designed for DIY assembly. Please follow the detailed instructions provided in the packaging. The cabinet typically arrives mostly assembled, requiring only the attachment of legs and handles.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent damage. Verify all components listed in the parts list are present.
2. **Attach Legs:** Locate the four legs and the corresponding attachment points on the bottom of the cabinet. Securely fasten the legs using the provided hardware. Ensure they are tightened firmly for stability.
3. **Install Handles:** Attach the antique gold handles to the cabinet doors using the screws provided. Ensure they are aligned correctly and tightened.
4. **Adjust Shelves:** The cabinet includes two adjustable shelves. Determine your desired shelf height and insert the shelf pins into the pre-drilled holes. Place the shelves onto the pins.
5. **Position Cabinet:** Carefully move the assembled cabinet to its desired location. Ensure it is on a level surface.
6. **Wall Anchoring (Recommended):** For added safety, especially in households with children or pets, use the provided anti-tip hardware to secure the cabinet to a wall. Follow the specific instructions for wall anchoring included in your package.

If you encounter any difficulties during assembly, refer to the detailed diagrams and instructions included with your product packaging.

## Operating Instructions

The Generic SMENZBKCS Arched Cabinet is designed for straightforward use as a storage and display unit.

- **Opening/Closing Doors:** Use the antique gold handles to gently open and close the tempered glass upper doors and rattan lower doors. Avoid forcing the doors.
- **Adjusting Shelves:** To adjust the height of the interior shelves, carefully remove any items, lift the shelf, remove the shelf pins, reposition the pins to the desired height, and then place the shelf back onto the pins. Ensure pins are fully inserted.
- **Storing Items:** Place items on the shelves, distributing weight evenly. Utilize the tempered glass doors for displaying decorative items and the rattan doors for concealed storage. Do not exceed the maximum weight capacity of 179.7 pounds for the entire unit.

## Maintenance

Proper care will ensure the longevity and appearance of your cabinet.

- **Cleaning Wood Surfaces:** Wipe wood surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the finish. Dry immediately with a clean cloth.
- **Cleaning Glass Doors:** Use a standard glass cleaner and a soft, lint-free cloth to clean the tempered glass doors. Spray cleaner onto the cloth, not directly onto the glass, to prevent overspray onto wood.
- **Cleaning Rattan Doors:** Gently dust rattan surfaces with a soft brush or a vacuum cleaner with a brush attachment. For deeper cleaning, wipe with a slightly damp cloth and dry thoroughly.
- **Hardware Care:** Periodically check that all screws and fasteners are tight. Tighten if necessary. Clean antique gold hardware with a soft, dry cloth; avoid chemical cleaners.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or damage to the wood finish and rattan.
- **Humidity Control:** Maintain a stable humidity level in the room to prevent wood from warping or cracking.

## Troubleshooting

Here are solutions to common issues you might encounter:

- **Cabinet is Wobbly:** Ensure the cabinet is on a level surface. Check all leg and frame connections and tighten any loose screws. If the floor is uneven, use furniture levelers under the legs.
- **Doors Do Not Close Properly:** Check the hinges for proper alignment. Adjust hinge screws if necessary. Ensure no items inside the cabinet are obstructing the doors.
- **Shelves are Uneven:** Verify that the shelf pins are inserted into corresponding holes on both sides and are fully seated.
- **Scratches on Surface:** For minor scratches, a furniture repair marker or wax stick matching the cabinet's finish can be used.

## Product Images



Image 1: The Generic Arched Cabinet (Green) positioned in a bright living room, showcasing its design and scale.

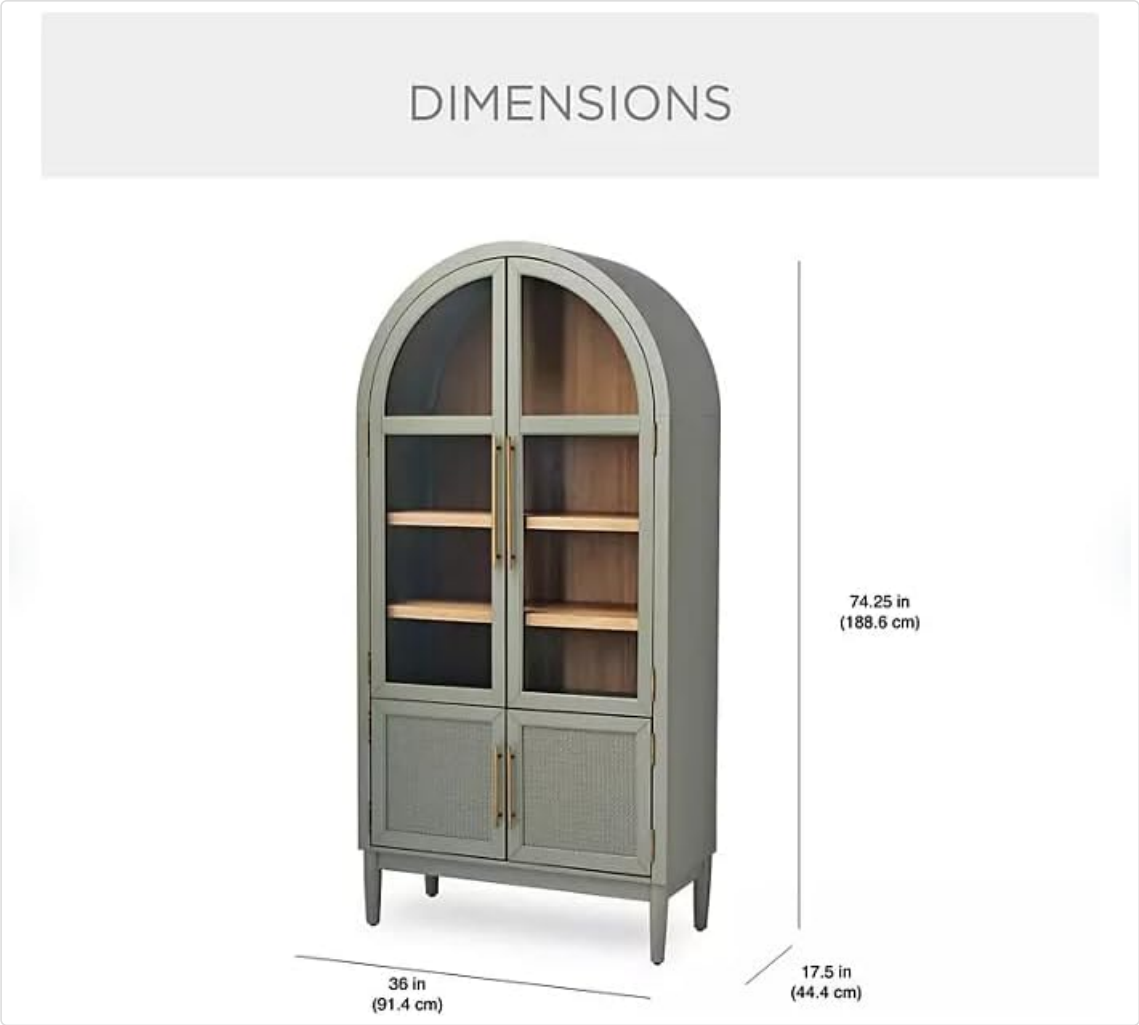



Image 2: A diagram illustrating the overall dimensions of the cabinet: 36 inches (W), 17.5 inches (D), and 74.25 inches (H).




Image 3: Examples of the cabinet's multi-purpose design, shown in a home office, dining room, and living room, highlighting its versatility for books, memorabilia, or fine china.

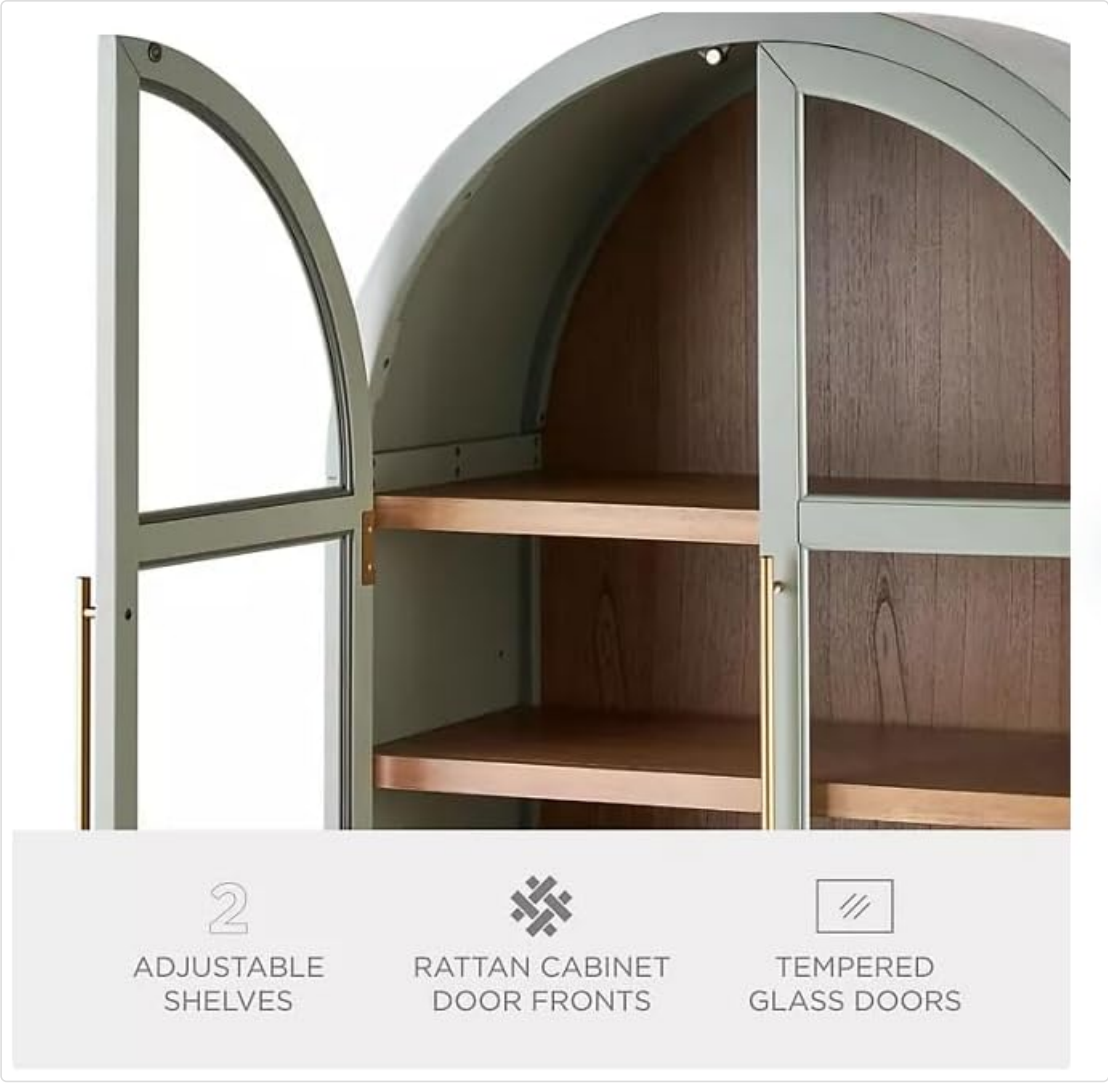



Image 4: A detailed view of the upper section of the cabinet, featuring two adjustable shelves and tempered glass doors.



Image 5: An interior shot focusing on the wooden shelves, demonstrating the storage space available.



Image 6: A close-up of the lower cabinet doors, highlighting the intricate rattan inserts and the stylish antique gold handles.



Image 7: The rear view of the cabinet, showing its solid construction and back panel.



Image 8: The front view of the cabinet with both upper glass doors and lower rattan doors open, revealing the full interior and adjustable shelves.

## Product Videos

No official seller videos are available for this product at this time.

## Warranty and Support

For warranty information or customer support regarding your Generic SMENZBKCS Arched Cabinet, please refer to the documentation included with your purchase or contact the retailer directly. Keep your proof of purchase for any warranty claims.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question