Psisuvry HC

Psisuvry 1.2 Cubic Feet Fire Safe Box - Instruction Manual

Model: HC

1. Introduction

Thank you for choosing the Psisuvry 1.2 Cubic Feet Fire Safe Box. This manual provides essential information for the proper setup, operation, and maintenance of your new safe. Please read these instructions carefully before use to ensure optimal security and functionality. Keep this manual for future reference.

2. Safety Information

- **Read Carefully:** Always read and understand all instructions before operating the safe.
- **Emergency Keys:** Store emergency keys in a secure location away from the safe and not inside the safe itself.
- **Initial Test:** Before storing valuables, perform a test opening and closing procedure several times to familiarize yourself with the operation.
- **Battery Safety:** Use only the specified battery type. Do not mix old and new batteries or different types of batteries. Remove batteries if the safe will not be used for an extended period.
- **Fire Resistance:** This safe is designed with fire-resistant features to help protect contents from heat damage. However, it is not fireproof and may not withstand extreme or prolonged fire exposure.
- **Mounting:** For enhanced security, it is recommended to securely mount the safe to a wall or floor using the provided hardware.

3. Package Contents

Verify that all components are present in the package:

- 1 x Psisuvry 1.2 Cubic Feet Fire Safe Box
- 1 x Instruction Manual
- 2 x Emergency Keys

- 4 x Expansion Screws (for mounting)
- 1 x Protective Mat



Figure 3.1: Safe dimensions and included accessories. The image displays the safe with measurements of 9.84 inches in depth, 13.8 inches in width, and 9.84 inches in height. Below the safe, the emergency keys, instruction manual, expansion screws, and a protective mat are shown.

4. Product Overview

The Psisuvry 1.2 Cubic Feet Fire Safe Box is designed for secure storage of your valuables. Key features include:

- **Compact Size:** 1.2 cubic feet capacity, ideal for home use and discreet placement.
- **Dual Locking Mechanism:** Digital keypad with 3-8 digit PIN and emergency key access.
- **Anti-Theft Alarm:** Activates after 3 incorrect code entries, locking the safe for 20 seconds.
- **Durable Construction:** Made from solid steel with three live steel lock bolts and pry-resistant hinges.
- **Removable Shelf:** Allows for flexible storage of various-sized items.
- **Mounting Capability:** Pre-drilled holes for securing to a wall or floor.



Figure 4.1: Overview of the safe's security features, including protection against prying, drilling, collision, and theft, highlighted by a fire background.



Figure 4.2: The removable shelf feature, demonstrating storage options with and without the shelf for various items.



Figure 4.3: Detailed view of the safe's steel construction and anti-pry bolts, emphasizing its robust security against forced entry.

5. Setup

5.1 Battery Installation

The safe requires 4 AA batteries (not included) to power the digital keypad. The battery compartment is located externally for easy access.

1. Locate the external battery compartment cover on the front panel, usually below the keypad.
2. Slide the cover open.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.



Figure 5.1: Location of the external battery compartment for easy battery replacement.

5.2 Initial Opening and Code Setting

Upon first use, you will need to open the safe using the emergency key and set your personal code.

1. Insert the emergency key into the keyhole, usually hidden behind a small cover on the keypad panel.
2. Turn the key clockwise to unlock.
3. Rotate the handle to open the safe door.
4. With the door open, locate the red reset button on the inside of the door, near the hinge.
5. Press the red reset button. You will hear a beep, and the indicator light on the keypad will flash.
6. While the light is flashing, enter your desired 3-8 digit personal code on the keypad.
7. Press the '#' button to confirm your new code. You will hear a confirmation beep.
8. To set a master code (optional): With the door open, press '00', then press the red reset button. Enter your desired 3-8 digit master code, then press '#'.
9. Test the new code with the door open before closing it.

6. Operating Instructions

6.1 Opening the Safe with Digital Code

1. Enter your 3-8 digit personal code or master code on the keypad.
2. Press the '#' button. The indicator light will turn green.
3. Within 5 seconds, rotate the handle clockwise to open the safe door.

6.2 Opening the Safe with Emergency Key

Use the emergency key if you forget your code or if the batteries are depleted.

1. Locate the emergency keyhole cover on the keypad panel and remove it.
2. Insert the emergency key into the keyhole.
3. Turn the key clockwise to unlock.
4. Rotate the handle to open the safe door.



Figure 6.1: Illustration of quick access methods: digital code entry and emergency key usage. Note: Do not store emergency keys inside the safe.

6.3 Anti-Theft Alarm System

The safe is equipped with an anti-theft alarm system.

- If an incorrect code is entered 3 consecutive times, the safe will lock for 20 seconds and sound an alarm.
- During the alarm period, the keypad will be unresponsive.
- The alarm will automatically stop after 20 seconds, or it can be stopped by entering the correct code.



Figure 6.2: The alarm system activates after three incorrect code entries, providing an audible alert.

7. Installation (Wall or Floor Mounting)

For maximum security, it is highly recommended to mount your safe to a wall or floor.

1. Choose a suitable location for mounting. Ensure the surface is solid and can support the weight of the safe and its contents.
2. Open the safe door and locate the pre-drilled holes on the back or bottom panel.
3. Position the safe in the desired location and mark the drilling points through the pre-drilled holes onto the wall or floor.
4. Move the safe aside and drill pilot holes at the marked points using an appropriate drill bit for your wall/floor material.
5. Align the safe with the drilled holes.
6. Insert the expansion screws through the safe's holes and into the pilot holes.
7. Tighten the screws securely to fasten the safe in place.

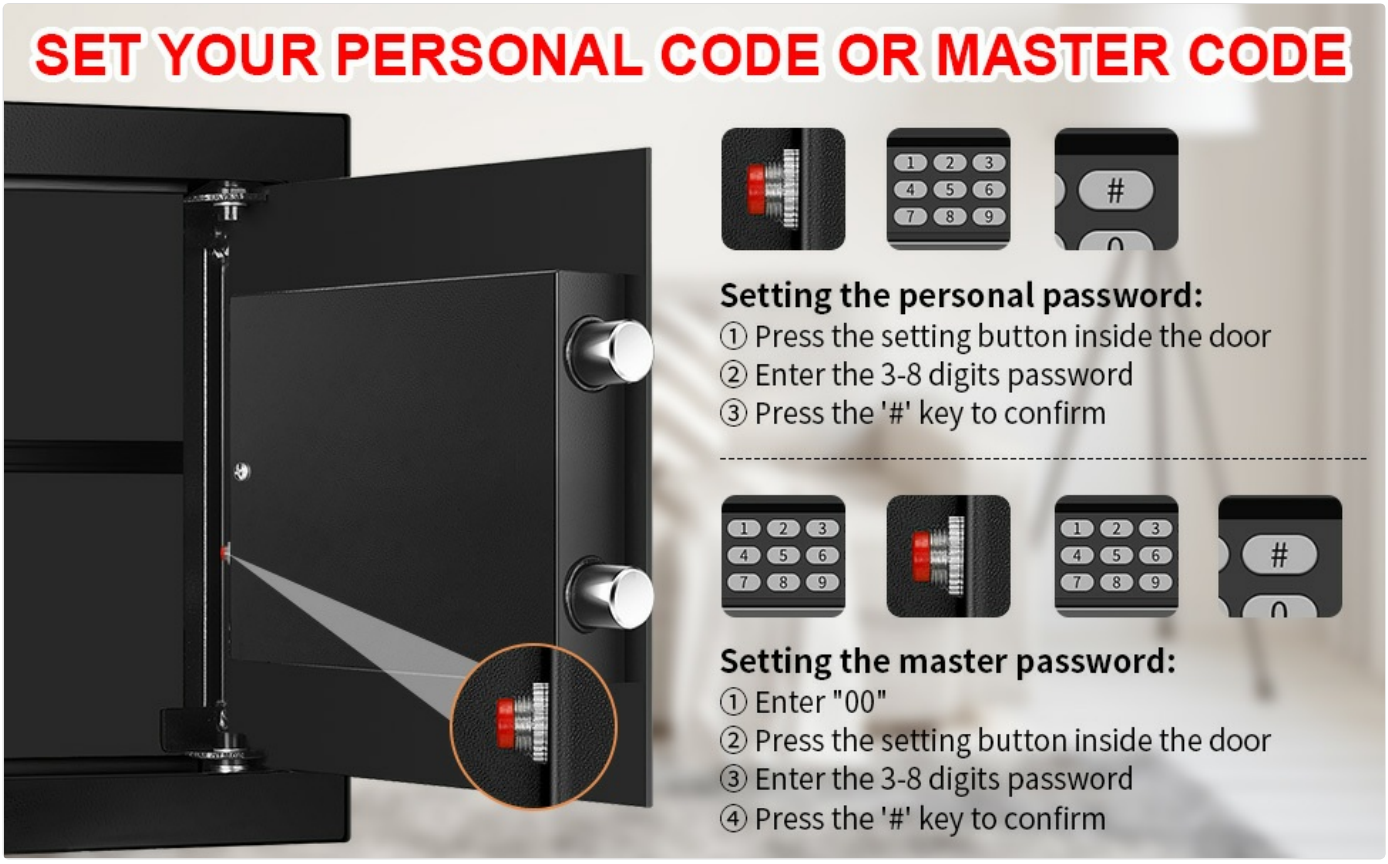


Figure 7.1: Step-by-step guide for wall or floor mounting to enhance security.

8. Maintenance

- **Battery Replacement:** Replace batteries annually or when the low battery indicator appears. Always replace all batteries at once.
- **Cleaning:** Clean the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If the lock feels stiff, contact customer support.
- **Keyhole:** Keep the emergency keyhole free from dust and debris.

9. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; Low batteries; Keypad malfunction.	Re-enter code carefully; Replace batteries; Use emergency key; Contact customer support.
Alarm sounds frequently.	Incorrect code entries; Safe moved or tampered with.	Ensure correct code entry; Check for tampering; If alarm persists, contact customer support.
Door does not close properly.	Obstruction in door frame; Misalignment.	Check for any items blocking the door; Gently adjust the door to align; If issue persists, contact customer support.
Forgotten code.	Code forgotten.	Use the emergency key to open the safe, then reset the code as per Section 5.2.

10. Specifications

Feature	Detail
Brand	Psisuvry
Model Number	HC
Capacity	1.2 Cubic Feet
Product Dimensions (D x W x H)	9.84" x 13.8" x 9.84"
Lock Type	Electronic Combination Lock, Key
Material	Metal (Solid Steel Construction)
Item Weight	16 Pounds
Special Features	Alarm System, Anti-Theft, Combination Lock, Fire Resistant, Removable Shelf
Mounting Type	Wall Mount, Floor Mount

11. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Psisuvry customer service directly. Details for contacting support are typically provided with your purchase documentation or on the manufacturer's official website.

© 2026 Psisuvry. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I cannot locate the official website or telephone number for Psisuvry to request replacement keys for my 1.2 cf HC safe. Do you have this information?

Unfortunately, the official manual for the Psisuvry HC 1.2 Cubic Feet Fire Safe Box does not list a specific telephone number or website URL. The documentation states that support details are typically provided on...

Read full answer