
Cadex 932349B

Cadex VibraPlus - 8 Alarm Reminder Watch

Brand: Cadex | **Model:** 932349B

Product Overview

The Cadex VibraPlus is an advanced reminder watch equipped with eight customizable alarms. Users can select between discreet vibrating notifications or audible beeps, or a combination of both, to suit their needs. This feature is particularly useful for managing medication schedules, appointments, or daily tasks without causing disturbance. The watch also incorporates an advanced countdown timer, allowing for precise timing from 15 minutes up to 24 hours, with the option to program it to operate within specific timeframes. A convenient lock feature prevents unintended button presses and setting alterations, ensuring your reminders remain secure. Designed for comfort and style, the watch features a durable vegan leather band and a clear, easy-to-read display with intuitive controls.

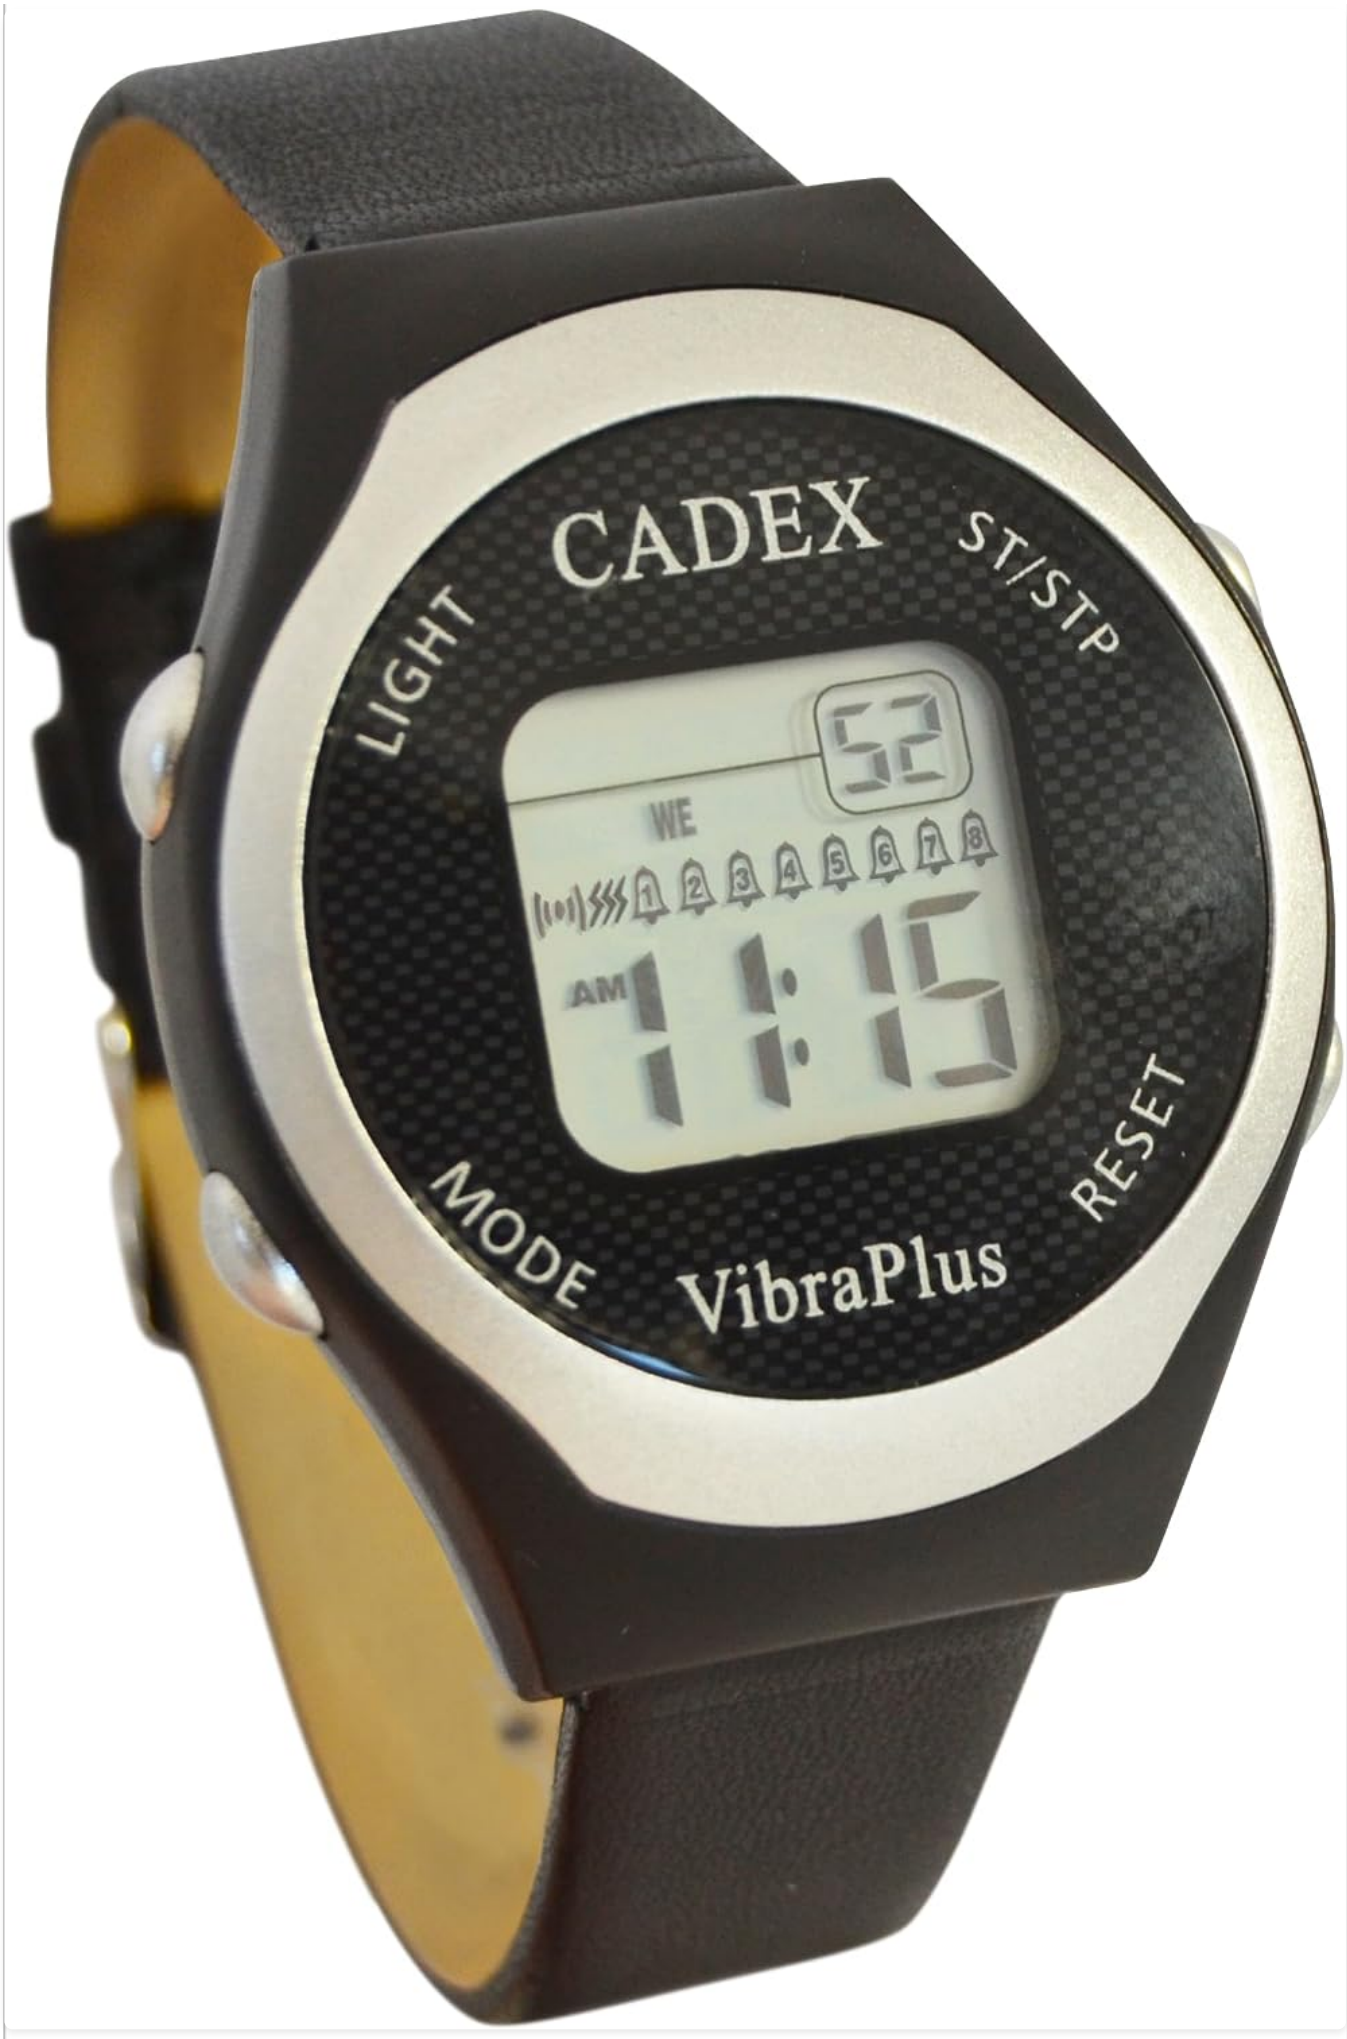

The Cadex VibraPlus watch, featuring a black band and silver bezel, with its digital display showing the time and brand name.

Setup and Initial Use

Unboxing and Initial Setup

Upon receiving your Cadex VibraPlus watch, you will find the watch itself, a small screwdriver for battery changes, and a spare battery, all securely packaged in a metal tin. Before first use, gently peel off the clear protective film from the watch's display to ensure optimal visibility.

Official product video demonstrating the unboxing of the e-pill CADEX VibraPlus Reminder Watch, showing the contents of the package including the watch, a screwdriver, and a spare battery.

Setting Time and Date

To set the clock on your Cadex VibraPlus watch:

1. Press and hold the **LIGHT** button until the seconds display blinks on and off. Release the button.
2. Press the **MODE** button once. The minutes will begin to blink.
3. To advance the minutes, press the **ST/STP** button repeatedly until the desired minute is reached.
4. Once the correct minutes are set, press the **MODE** button once. The hour will start to flash.
5. To advance the hour, press the **ST/STP** button. Pay attention to the AM/PM indicator on the display.
6. After setting the hour, press the **MODE** button once. The date will start to flash.
7. To change the date, press the **ST/STP** button.
8. Once the correct date is set, press the **MODE** button. The month will start to flash.
9. To change the month, press the **ST/STP** button.
10. Once the correct month is set, press the **MODE** button. The year will start to flash.
11. To change the year, press the **ST/STP** button.
12. Once all time and date settings are complete, press the **LIGHT** button to save the settings. The display will show the day of the week underneath a solid line, the running seconds, and the current time.



The watch display showing the current time and indicators for setting the time and date.

Operating Instructions

Setting Alarms

The Cadex VibraPlus allows you to set up to 8 customizable alarms. To set an alarm:

1. Press the **MODE** button repeatedly until you see "A1" (for Alarm 1) in the square box on the display.
2. To set the alarm time, press and hold the **LIGHT** button until the hour starts to flash and a bell symbol appears.
3. To advance the hour, press the **ST/STP** button. Note the AM/PM indicator.
4. To enter the minutes setting, press the **MODE** button. The minutes will start to flash.
5. To change the minutes, press the **ST/STP** button.
6. Once the alarm time is set, press the **LIGHT** button to save the setting. Nothing should be flashing on the display.
7. To choose the notification type for this alarm, press the **ST/STP** button:

- Press once for beep notification (sound symbol appears).
- Press a second time for vibration notification (vibrator symbol appears next to the bell).
- Press a third time for both beep and vibration notifications (both symbols appear).

8. To set additional alarms (A2 through A8), press the **RESET** button while in the alarm setting mode. "A1" will change to "A2", and you can repeat the steps above.

Using the Interval Timer


The watch features a unique smart countdown timer that allows you to set an interval timer to go off within a specific time period.

1. Tap the **MODE** button repeatedly until you see "TR" (for Timer) on the display.
2. To enter the timer mode, press and hold the **LIGHT** button until the hour starts to flash. This is where you set the time frame for the interval timer to be active.
3. To change the start hour of the time frame, press the **ST/STP** button. Note the AM/PM indicator.
4. To set the end hour of the time frame, press the **MODE** button. The hour will start to flash. Press the **ST/STP** button to adjust.
5. Once the time frame is set, press the **MODE** button. The minutes will start to flash. This is where you set the interval duration.
6. To change the interval duration (in minutes), press the **ST/STP** button. You can set hourly interval timers or minutes.
7. Once the interval is set, press the **LIGHT** button to save.
8. To start the interval timer, press the **ST/STP** button. It will begin counting down. The "TR" symbol will flash on the main display, indicating that within the set time period, an interval timer will go off every set number of minutes.
9. To exit the interval timer mode, press the **MODE** button.

Lock Feature

The Cadex VibraPlus includes a lock feature to prevent accidental button presses and changes to your settings.

- To lock the buttons: Press and hold the **MODE** button and the **RESET** button simultaneously. The word "LOCK" will appear on the display.
- To unlock the buttons: Press and hold the **MODE** button and the **RESET** button simultaneously again. The word "LOCK" will disappear from the display.

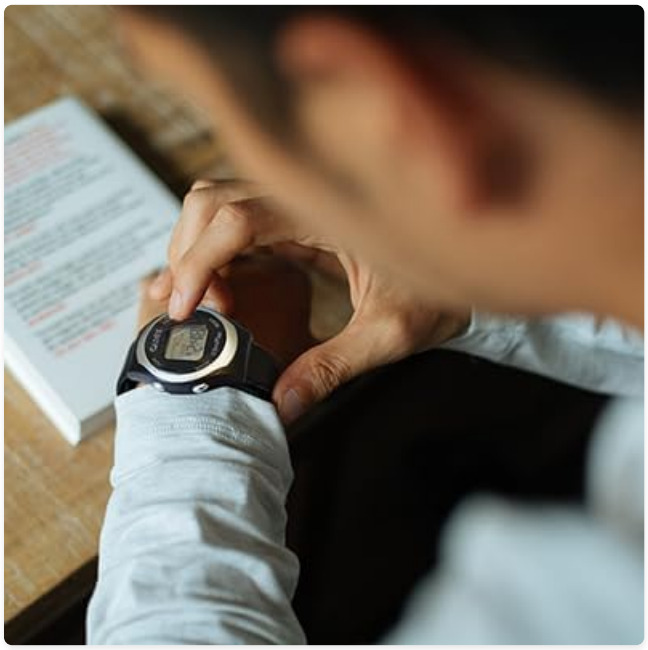

The watch display indicating the 'LOCK' feature is active.

Maintenance

Battery Replacement

The Cadex VibraPlus watch comes with a small screwdriver specifically for battery replacement. When the battery needs to be changed, use the provided screwdriver to open the battery compartment on the back of the watch. Replace the old battery with the spare provided or a new compatible battery, ensuring correct polarity. Securely close the compartment.

Troubleshooting

Common Issues

- **Display is blank or dim:** Check the battery. If the battery is low or depleted, replace it following the battery replacement instructions.
- **Watch not responding to button presses:** Ensure the lock feature is not activated. Unlock the buttons as described in the 'Lock Feature' section. If the issue persists, try resetting the watch by removing and reinserting the battery.
- **Alarms not sounding/vibrating:** Verify that the alarm is set correctly and that the desired notification type (beep, vibrate, or both) is selected for the specific alarm. Check the volume settings if applicable (though this model primarily uses vibration/beep, ensure no external factors are muffling sound).
- **Time/Date is incorrect:** Follow the 'Setting Time and Date' instructions to re-synchronize the watch.

Specifications

- **Package Dimensions:** 4 x 3 x 2 inches
- **Item Weight:** 3 ounces
- **Item Model Number:** 932349B
- **Department:** Unisex
- **Date First Available:** March 4, 2025

- **Manufacturer:** Cadex
- **ASIN:** B0DZ895DF7
- **Clasp Type:** Buckle

Warranty and Support

For warranty information or technical support regarding your Cadex VibraPlus watch, please contact the manufacturer, Cadex, directly. You may also reach out to the seller, e-pill Medication Reminders, for assistance with your purchase. Please refer to your purchase documentation for specific warranty terms and contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question