Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

RadioShack 4001775

RadioShack Mini Bluetooth Speaker Instruction Manual

Model: 4001775

Introduction

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your RadioShack Mini Bluetooth Speaker. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The RadioShack Mini Bluetooth Speaker in black and gray, showcasing its compact design and integrated strap.

Setup

1. Unboxing and Package Contents

Carefully remove all items from the packaging. The package should contain the following:

- 1x Portable Wireless Speaker
- 1x User Manual
- 1x Type-C Charging Cable
- 1x 3.5mm Audio Cable



Image: Two color variants of the RadioShack Mini Bluetooth Speaker: Black and Gray (Model 4001775) and Black and Green (Model 4001776).

2. Charging the Speaker

Before initial use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's charging port and a compatible USB power source. The red light indicator will be on during charging and will turn off when the battery is fully charged. A full charge provides approximately 4-6 hours of playtime.

3. Initial Bluetooth Pairing

1. Ensure the speaker is sufficiently charged.
2. Press and hold the power button for approximately 3 seconds to turn on the speaker. A voice prompt will indicate that the device is ready for pairing.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select "RadioShack Speaker" from the list of found devices.
5. Once paired, a voice prompt will confirm the successful connection. The white light indicator will remain steadily on.

Operating Instructions

1. Playback Modes

The speaker supports multiple playback modes:

- **Bluetooth Mode:** Connect wirelessly to a Bluetooth-enabled device.
- **TF Card Mode:** Insert a TF (microSD) card with audio files.
- **U Disk Mode:** Insert a USB flash drive with audio files.
- **AUX Mode:** Connect an external audio device using the 3.5mm audio cable.
- **FM Radio Mode:** Tune into FM radio stations.

To switch between modes, press the 'M' button on the speaker. The default mode upon power-on is Bluetooth.



Image: The speaker displaying its vibrant RGB lighting feature while playing music, highlighting its multi-functional audio capabilities.

2. Button Functions

Button	Function
Power Button	Press and hold for ~3 seconds to turn on/off. Short press to play/pause.
'M' Button (Mode)	Short press to switch between Bluetooth, TF Card, U Disk, AUX, and FM Radio modes.
'-' Button (Volume Down / Previous Track)	Short press for volume down. Long press for previous track.
'+' Button (Volume Up / Next Track)	Short press for volume up. Long press for next track.
Light Button	Press to turn RGB lights on/off.

3. True Wireless Stereo (TWS) Connection

For an enhanced stereo audio experience, two RadioShack Mini Bluetooth Speakers can be paired together via TWS:

1. Ensure both speakers are turned off and not connected to any device.
2. Turn on both speakers simultaneously.
3. On one of the speakers (this will be the host speaker), press the 'TWS' button. You will hear a prompt indicating TWS search.
4. Once connected, a confirmation sound will play, and the host speaker's indicator light will flash, while the other speaker's light will remain steady.
5. Now, connect your mobile device to the host speaker via Bluetooth. Both speakers will play audio in stereo.



Image: Two RadioShack Mini Bluetooth Speakers demonstrating the True Wireless Stereo (TWS) pairing capability for a wider audio experience.

4. RGB Lighting

The speaker features vibrant RGB lights that provide a dynamic visual experience. Press the dedicated Light Button to toggle the RGB lights on or off.

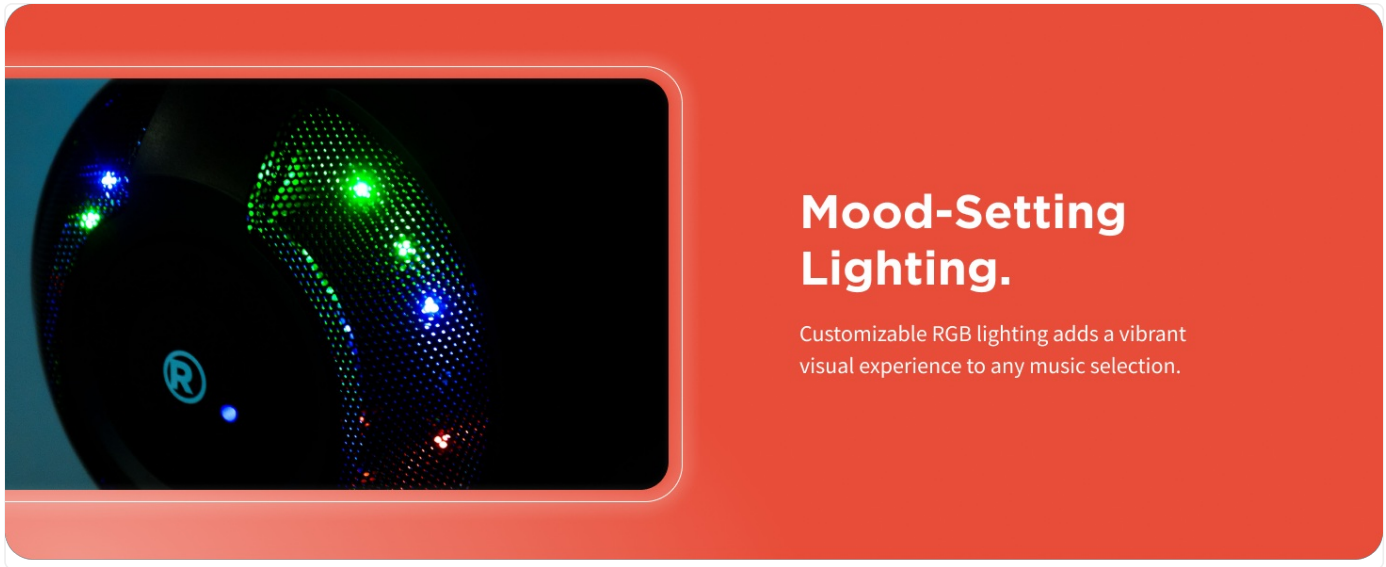


Image: A close-up of the speaker's grille showcasing its customizable RGB lighting, designed to enhance the listening experience.

Maintenance

1. Cleaning

To clean the speaker, use a soft, dry cloth. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the surface of the speaker.

2. Water Resistance (IPX5)

The speaker has an IPX5 waterproof rating, meaning it is protected against low-pressure water jets from any direction. This makes it suitable for outdoor use and protection against splashes. However, it is **not** designed for submersion in water. Ensure the charging port cover is securely closed when near water to maintain water resistance.



Image: The speaker covered in water droplets, illustrating its IPX5 waterproof capability for outdoor and splash-prone environments.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Speaker does not turn on.	Battery may be depleted. Charge the speaker fully using the provided Type-C cable.
No sound or distorted sound.	Ensure volume is not set to minimum on both the speaker and the connected device. Check if the speaker is properly paired via Bluetooth or if the AUX/USB/TF card is correctly inserted. If using AUX mode, ensure the 3.5mm audio cable is fully inserted into both the speaker and the audio source. If using USB or TF card, ensure audio files are in a compatible format (e.g., MP3, FLAC) and stored in the root directory.

Problem	Possible Cause / Solution
Bluetooth pairing fails.	Ensure the speaker is in Bluetooth pairing mode (white light flashing rapidly). Move the speaker closer to your device. Disable and re-enable Bluetooth on your device. Forget the speaker from your device's Bluetooth list and attempt to re-pair.
Speaker turns off automatically.	The battery may be low. Charge the speaker. If there is no working state (no audio playback or interaction) for 15 minutes, the speaker will automatically shut down to conserve battery.
Speaker makes weird radio sound / squawking and turns off when USB flash drive is inserted.	This indicates a potential issue with the USB playback function or file compatibility. Ensure the USB flash drive is formatted correctly (FAT32) and contains only supported audio file types (MP3, FLAC). Try a different USB flash drive or use another playback mode (Bluetooth, TF card, AUX). If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	RadioShack Mini Bluetooth Speaker, 10W, IPX5 Waterproof, Wireless & Portable
Model Number	4001775
Brand	RadioShack
Speaker Type	Outdoor
Special Feature	Wireless
Color	Black and Gray
Product Dimensions (D x W x H)	5.7"D x 4.75"W x 5.22"H (135x97x111mm)
Item Weight	1.5 pounds
Speaker Maximum Output Power	10 Watts
Connectivity Technology	Bluetooth 5.3
Audio Output Mode	Stereo (with TWS)
Battery	Built-in 2400mAh lithium battery
Playtime	4-6 hours (varies with volume and features)
Waterproof Rating	IPX5
Additional Playback Modes	U disk, TF card, AUX, MP3 player, FM radio



Image: Diagram showing the product dimensions: Height 4.3 in, Width 5.3 in, Length 3.8 in.

Warranty Information

This product comes with a **Limited Warranty**. For specific terms and conditions, please refer to the warranty card included in your product packaging or visit the official RadioShack website.

Customer Support

If you encounter any issues or have questions regarding your RadioShack Mini Bluetooth Speaker that are not covered in this manual, please contact RadioShack customer support for assistance. Contact information can typically be found on the product packaging or the official RadioShack website.

For more information and product updates, visit the RadioShack Store on Amazon.

© 2025 RadioShack. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DZGQ4XNF

More documents and user manuals: **https://manuals.plus/**