Pinmoco B201080N

Pinmoco Set of 2 Nightstand with 2 Drawers

MODEL: B201080N-WHTM

Important Safety Instructions

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure all parts are present and undamaged before beginning assembly.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws, as this may damage the material.
- Keep small parts away from children during assembly.
- Do not stand or sit on the nightstand.
- Place the nightstand on a level surface to prevent tipping.
- Do not exceed the maximum weight capacity of the top surface (88 lbs) and drawers (20 lbs each).

Package Contents

Verify that all components listed below are included in your package:

- Nightstand Panels (Top, Side, Back, Bottom)
- Drawer Fronts, Sides, and Backs
- Drawer Bottoms
- Legs and Mounting Hardware
- Drawer Slides and Hardware
- Handles and Screws
- USB/Type-C Charging Module and LED Strip Button
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Instruction Manual




Overall view of the Pinmoco nightstands, showcasing their design and features.

Setup and Assembly Instructions

Follow these steps carefully to assemble your nightstand. It is recommended to have two people for assembly.

1. **Prepare Components:** Unpack all parts and lay them out on a clean, soft surface. Identify each component using the parts list.
2. **Assemble the Main Frame:** Attach the side panels to the bottom panel using the provided screws and dowels. Ensure the pre-drilled holes for drawer slides are facing inward.
3. **Install Drawer Slides:** Secure the drawer slides to the inner sides of the nightstand frame using the designated screws. Ensure they are level and aligned.
4. **Assemble Drawers:** For each drawer, attach the side panels to the front and back panels. Slide the drawer bottom into the grooves. Secure the drawer bottom with small nails or screws if provided.
5. **Attach Drawer Handles:** Fasten the handles to the drawer fronts using the provided screws.

6. **Insert Drawers:** Carefully align the drawer slides on the drawers with the slides on the nightstand frame and push the drawers in until they click into place.
7. **Attach Legs:** Secure the four legs to the bottom of the nightstand using the provided hardware. Ensure they are tightened firmly.
8. **Install Top Panel:** Place the top panel onto the assembled frame and secure it with screws or cam locks.
9. **Connect Charging Module and LED:** Insert the USB/Type-C charging module and LED strip button into their designated cutouts on the top panel. Connect any necessary wiring according to the diagram (if provided separately).
10. **Final Check:** Ensure all screws are tightened and the nightstand is stable.

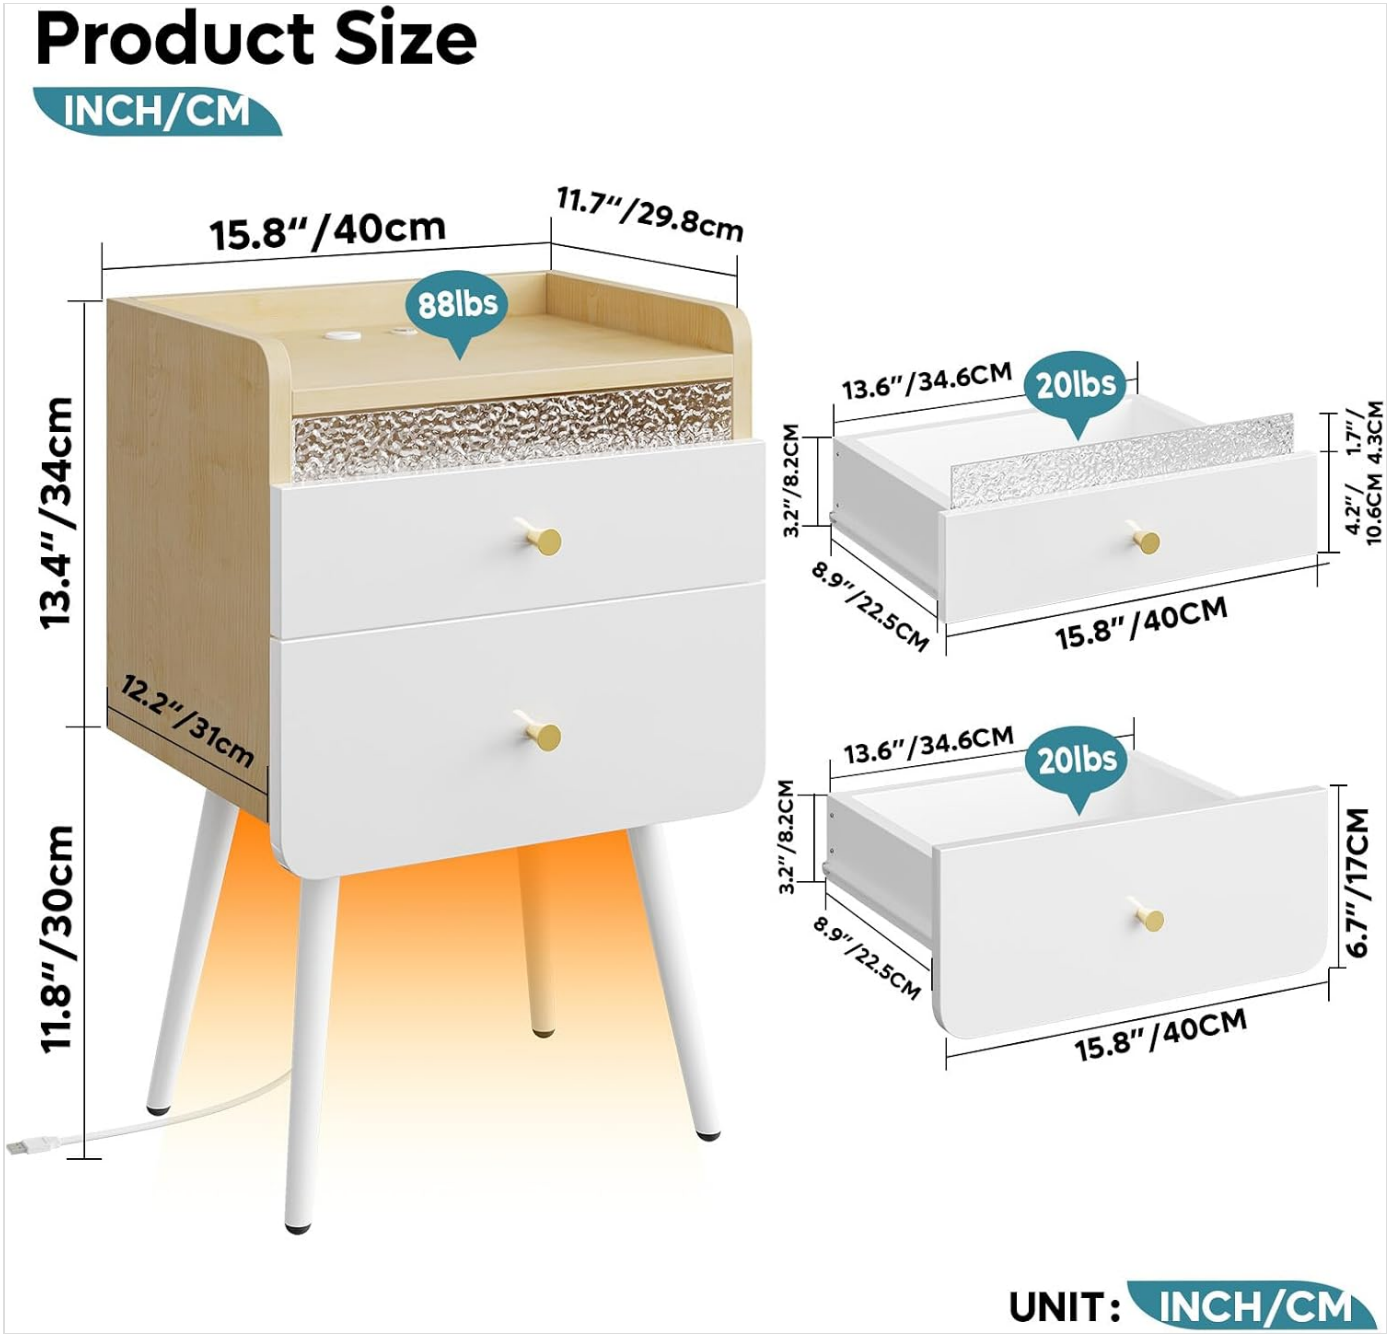

Detailed dimensions of the nightstand and its components for reference during assembly.

Operating Instructions

Your Pinmoco nightstand is designed for convenience and functionality.

- **Drawers:** Gently pull the handles to open the drawers. Push them back in until they are fully closed. Do not force

the drawers.

- **USB/Type-C Charging Ports:** Connect the nightstand to a power outlet using a suitable adapter (not included). Plug your compatible devices into the USB or Type-C ports on the top surface for charging.
- **LED Strip Light:** Press the LED strip button located on the top surface to turn the integrated LED light on or off. Some models may offer multiple light modes or brightness levels by pressing the button repeatedly.



Illustration of the USB, Type-C ports, and LED strip button for device charging and lighting.

Maintenance

Proper care will ensure the longevity and appearance of your nightstand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood and metal components.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure stability.
- **Environment:** Avoid placing the nightstand in direct sunlight or near heat sources, as this can cause fading or

warping.

Troubleshooting

If you encounter any issues, refer to the following common problems and solutions:

- **Drawers are stiff or not closing properly:**
  - Check if the drawer slides are properly aligned and free of obstructions.
  - Ensure all assembly screws for the drawer slides are tightened.
- **LED light is not working:**
  - Verify that the nightstand is properly plugged into a working power outlet.
  - Check the connection of the LED strip wiring to the power module.
  - Ensure the LED button is pressed correctly.
- **USB/Type-C ports are not charging devices:**
  - Confirm the nightstand is plugged into a working power outlet.
  - Ensure the charging module is correctly installed and connected.
  - Try a different charging cable or device to rule out device-specific issues.
- **Nightstand is wobbly:**
  - Check and tighten all assembly screws, especially those for the legs.
  - Ensure the nightstand is placed on a flat, level surface.

Specifications

Feature	Specification
Brand	Pinmoco
Model Name	B201080N-WHTM
Product Dimensions (D x W x H)	10"D x 10"W x 10"H
Item Weight	5.62 Pounds
Frame Material	Metal
Top Material Type	Metal
Material Type	Wood
Color	White
Shape	Rectangular
Base Type	Pedestal
Number of Items	1 (Set of 2 nightstands)
Included Components	Manual
ASIN	B0DZGWBGFF

Warranty and Support

For warranty information or technical support, please contact Pinmoco customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can often find support contact information on the seller's page or through your original point of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question