Enchen A1

Enchen Electric Shaver User Manual

Brand: Enchen
Model: A1

Introduction

Thank you for choosing the Enchen Electric Shaver. This versatile device is designed for efficient and comfortable hair removal across various body areas, offering a smooth and irritation-free experience. Featuring a 3-in-1 blade system, smart LED display, and USB-C fast charging, it's perfect for both wet and dry use, making it an ideal companion for your personal grooming needs at home or while traveling.

Product Features

- **3-in-1 Blades System:** All-in-one curved blade integrates trimming, edging, and finishing modes. Safely removes unwanted hair on legs, arms, underarms, and sensitive bikini areas with hypoallergenic stainless steel blades.
- **Painless & Ultra-Smooth Experience:** Curved hypoallergenic blades with FlexGlide contour adaptation system hug body curves. Surgical-grade 0.02mm ultra-thin blades reduce irritation by 60% compared to traditional razors.
- **Smart LED Display & Reminder:** The digital screen precisely tracks the remaining power while reminding when the battery is low and for sanitary maintenance. One-touch control ensures easy operation.
- **Portable & Travel-Ready:** Sleek body with ergonomic silicone grip fits perfectly in hand. USB-C fast charging delivers all-day smoothness.
- **Hygienic & Easy Maintenance:** Detachable blade system allows thorough cleaning.

Safety Information

Always use the shaver with caution to avoid cuts. Do not immerse the shaver in water for extended periods, even though it is waterproof. Be careful when handling and cleaning the detachable blades. Keep the shaver away from water while charging.
Wattage: 5 watts

Package Contents

- Enchen Electric Shaver (Model A1)
- USB-C Charging Cable

- Cleaning Brush
- Guide Comb (for trimming longer hair)
- User Manual



Image: The Enchen Electric Shaver, USB-C charging cable, cleaning brush, guide comb, and user manual displayed in their packaging.

Setup

1. **Initial Charge:** Before first use, fully charge the shaver using the provided USB-C cable. Connect the cable to the shaver's USB-C port and a compatible power source. The LED display will show charging progress.
2. **Check Battery Level:** The smart LED display indicates the remaining battery percentage. Ensure sufficient charge for your grooming session.
3. **Attach/Detach Blade Head:** The blade head is detachable for cleaning and replacement. To detach, gently rock it out. To attach, align and snap it into place.
4. **Attach Guide Comb (Optional):** For trimming longer hair or achieving a specific length, attach the guide comb over the

blade head.



Image: The Enchen Electric Shaver connected to its USB-C charging cable, illustrating the charging process.

Operating Instructions

The Enchen Electric Shaver can be used for both wet and dry shaving. For optimal results, ensure your skin is clean.

1. **Power On/Off:** Press the power button located on the shaver's body to turn it on or off. The LED display will illuminate when powered on.
2. **Shaving Technique:**
    - For longer hair, gently shave against the direction of hair growth using the straight or curved blades.
    - For residual short hair, slowly glide the flexible foil head back and forth over the skin.
    - The curved blade is ideal for sensitive areas like underarms and the bikini area.
    - The straight blade is suitable for larger areas such as legs, arms, and back.
3. **Wet Use:** The shaver is waterproof and can be used in the shower or with shaving cream/gel for a smoother experience.
4. **Dry Use:** For quick touch-ups, the shaver can be used on dry skin.



Image: A woman demonstrating the use of the Enchen Electric Shaver on her underarm, highlighting its ergonomic design.



Image: Detailed view of the shaver's 3-in-1 stainless steel blades, showing the straight blade, flexible foil, and curved blade for different hair types and body areas.



Image: Illustration of the shaver's wet and dry use capabilities, showing it being used on dry skin and in a wet environment.

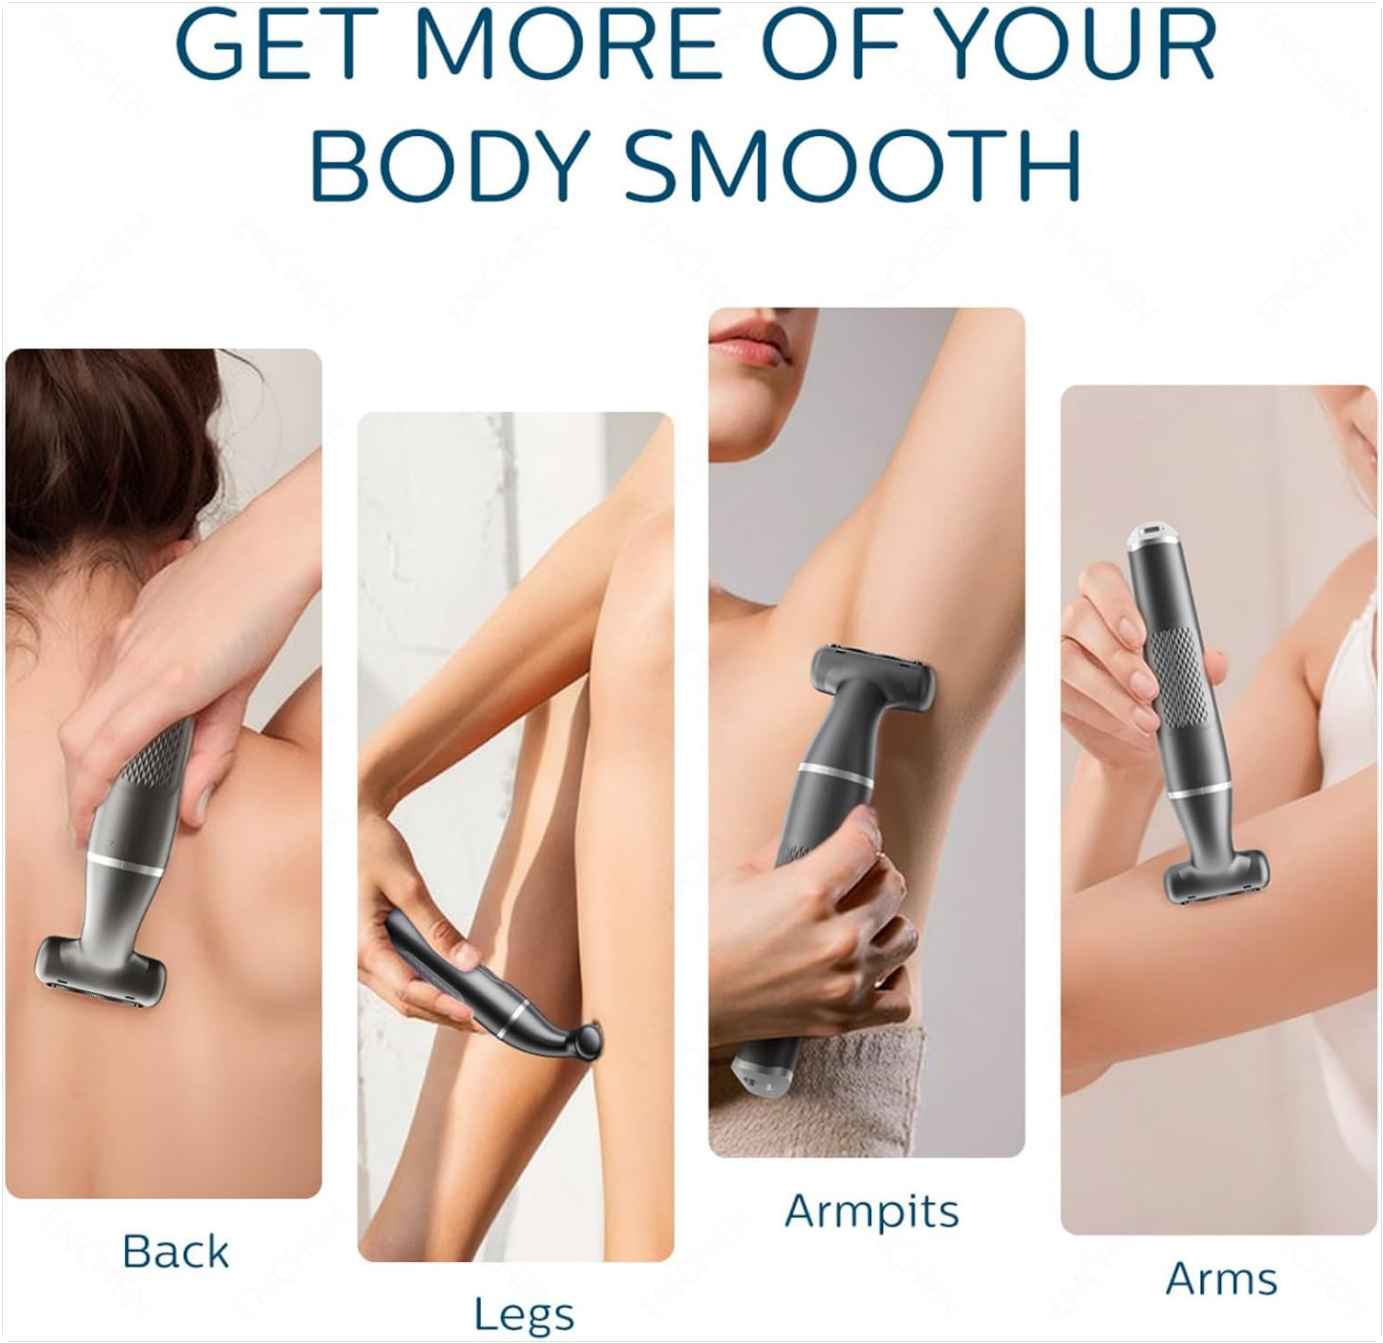


Image: Demonstrations of the shaver's use on the back, legs, armpits, and arms, emphasizing its versatility for whole-body grooming.

Maintenance

1. **Cleaning Reminder:** The LED display will show a cleaning reminder icon when maintenance is needed.
2. **Detachable Blade Cleaning:**
   - Remove the blade head from the shaver body.
   - Use the provided cleaning brush to remove any hair or dust from the blades and inside the shaver head.
   - Rinse the blade head under running water to thoroughly clean it.
   - After cleaning, wipe the blade head dry before re-installing it onto the shaver body. Ensure the charging interface remains dry during cleaning.



Image: A four-step visual guide demonstrating how to remove, clean with a brush, rinse under water, and reinstall the detachable shaving head.

Troubleshooting

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery.	Charge the shaver fully using the USB-C cable. Check the LED display for battery percentage.
Poor shaving performance.	Blades are clogged with hair or dull. Incorrect technique.	Clean the detachable blade head thoroughly. Ensure you are shaving against the grain for longer hair and gliding smoothly for shorter hair. Consider replacing the blade head if dull.
Skin irritation after shaving.	Sensitive skin. Improper technique.	Ensure blades are clean. Use the shaver on wet skin with shaving cream/gel. Apply a soothing lotion after shaving. Ensure gentle pressure.

Specifications

Product Dimensions: 1.93 x 0.95 x 6.89 inches

Item Weight: 5.93 ounces

Model Number: A1

Batteries: 1 AAA batteries required (included)

Power Source: Built-in rechargeable battery

Wattage: 5 watts

Manufacturer: Shanghai Qiaopusi Smart Sci-Tech Development Co., Ltd.

Country of Origin: China

Warranty and Support

The Enchen Electric Shaver comes with a **90-day satisfaction guarantee** and a **1-year warranty**. For any inquiries, technical support, or warranty claims, please contact our customer service team, available 24/7.
Please refer to your purchase documentation for specific contact details or visit the official Enchen website for further assistance.

© 2025 Enchen. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question