KASABLANK 806-1

KASABLANK Model 806-1 Pistol Safe User Manual

Secure Storage with Advanced Access Options

1. Introduction

Thank you for choosing the KASABLANK Model 806-1 Pistol Safe. This safe is designed to provide secure storage for your firearms and valuables, offering multiple access methods including fingerprint recognition, a digital PIN, and a traditional key. Its robust construction and intuitive features ensure both security and convenience. Please read this manual thoroughly before operating the safe to ensure proper setup and usage.



Image 1: KASABLANK Model 806-1 Pistol Safe. This image shows the top-down view of the safe, highlighting the digital keypad, fingerprint sensor, and LCD screen.

2. Safety Information

- Always store firearms unloaded and locked.
- Keep all keys, digital PINs, and registered fingerprints confidential and out of reach of unauthorized individuals, especially children.
- Never store the safe key inside the safe.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- This safe is not fireproof or waterproof unless explicitly stated.




Children's safety
Protecting
Kids From Guns
Kasablank
1 2 3 4 5
6 7 8 9 0
8:03
DANGEROUS

Image 2: Safe placement emphasizing child safety. This image shows the safe on a table with a child in the background, illustrating the importance of keeping firearms securely stored.

3. Package Contents

Verify that all items are present in the package:

- KASABLANK Model 806-1 Pistol Safe
- Mechanical Keys (2)
- Anti-theft Rope
- Mounting Screws (36.5mm)
- User Manual

4. Product Overview

The KASABLANK Model 806-1 safe features a robust alloy steel construction with a 10mm thick solid door. The interior is lined with soft, scratch-resistant foam to protect contents. The control panel includes a fingerprint sensor, a digital keypad, and an LCD display.

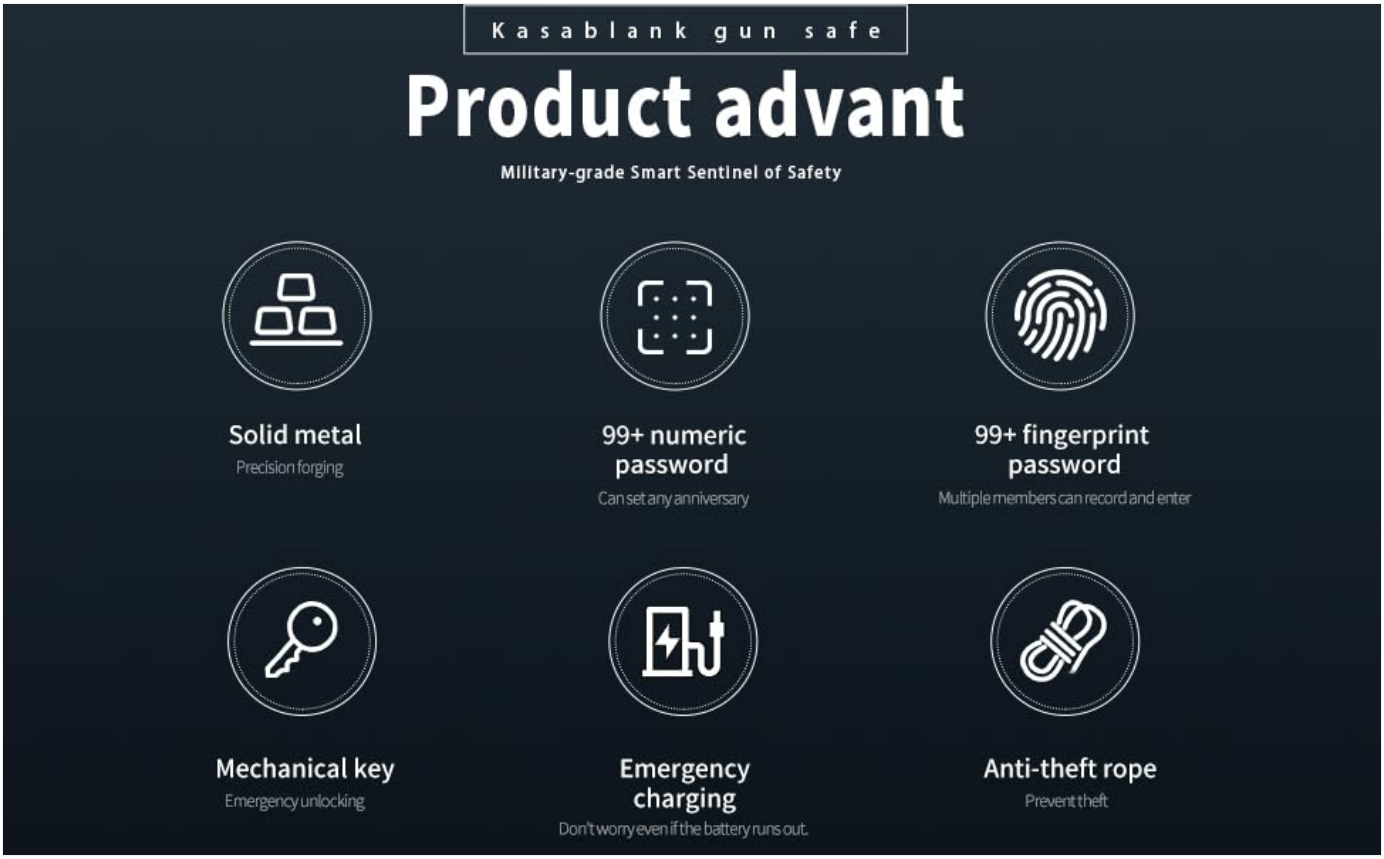


Image 3: Key features of the KASABLANK safe. This diagram highlights the safe's solid metal construction, multiple password options, mechanical key access, emergency charging, and anti-theft rope.



Extreme Design
Unmatched Capacity

The ultimate solution for
storing multiple pistols or other valuables

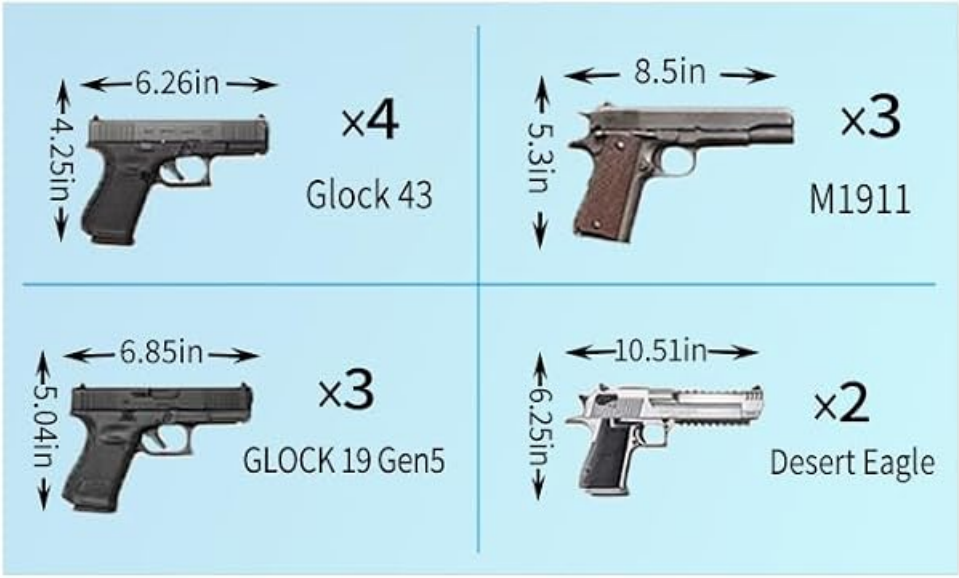




Image 4: Interior of the safe with handguns. This image shows the spacious interior of the safe, capable of holding multiple handguns, with protective foam lining.

5. Setup

5.1 Initial Power-Up and Battery Installation

1. Locate the battery compartment, typically on the underside or inside the safe door.
2. Insert 4 AA alkaline batteries (not included) according to the polarity markings.
3. Close the battery compartment securely. The LCD display should activate.

5.2 Setting up Fingerprints

The safe supports up to 99 fingerprints. For initial setup, any fingerprint can unlock the safe until a new one is registered.

1. With the safe open, press the 'SET' button located inside the safe. The LCD will prompt for fingerprint registration.
2. Place your finger on the fingerprint sensor. Lift and repeat several times until the safe confirms successful registration.
3. Register additional fingerprints as needed by repeating the process.



Image 5: Fingerprint sensor detail. This image provides a close-up of the fingerprint recognition area, illustrating its design for quick and secure access.

5.3 Setting up Digital PIN

The safe supports 99+ combinations for the digital PIN.

1. With the safe open, press the 'SET' button.
2. Enter your desired PIN (4-8 digits) on the keypad, then press '#'.
3. Re-enter the same PIN and press '#' again to confirm. The LCD will confirm successful PIN setup.

5.4 Mounting the Safe

The safe can be mounted to a flat surface or secured using the anti-theft rope.

- **Surface Mounting:** Use the provided mounting screws to secure the safe to a wall, floor, or shelf. Ensure the surface is sturdy enough to support the safe and its contents.
- **Anti-theft Rope:** Loop the anti-theft rope around a fixed object and secure it to the designated attachment point on the safe.



Image 6: Versatile placement options. This image shows the safe placed on a nightstand and secured within a car, demonstrating its adaptability for various environments.

6. Operating Instructions

6.1 Unlocking with Fingerprint

1. Place a registered finger firmly on the fingerprint sensor.
2. The safe will unlock within 0.5 seconds if the fingerprint is recognized.

6.2 Unlocking with Digital PIN

1. Enter your registered digital PIN on the keypad.
2. Press '#'. The safe will unlock if the PIN is correct.

6.3 Unlocking with Mechanical Key

In case of battery failure or forgotten codes, the mechanical key provides emergency access.

1. Locate the keyhole, usually concealed on the front panel.
2. Insert the mechanical key and turn it to unlock the safe.

6.4 Using the LCD Display

The high-definition LCD display provides real-time information:

- **Temperature & Humidity:** Displays current environmental conditions inside the safe.
- **Battery Level:** Indicates remaining battery power.
- **Time:** Shows the current time.
- **Unlock Records:** Provides a log of recent access attempts.

6.5 Emergency Charging

If batteries are depleted, the safe can be temporarily powered for access.

1. Locate the emergency charging port (e.g., USB-C or Micro-USB).
2. Connect a compatible power source (e.g., power bank) to the port.
3. Once powered, use your fingerprint or digital PIN to unlock the safe.

7. Maintenance

7.1 Battery Replacement

Replace batteries when the low battery indicator appears on the LCD display.

1. Open the safe using any valid method.
2. Open the battery compartment.
3. Remove old batteries and insert new AA alkaline batteries, observing polarity.
4. Close the compartment.

7.2 Cleaning

Clean the safe exterior and interior periodically.

- Use a soft, damp cloth to wipe down surfaces.
- Avoid abrasive cleaners or solvents that could damage the finish or electronic components.
- Gently wipe the fingerprint sensor to ensure optimal performance.

7.3 General Care

To ensure the longevity and proper function of your safe:

- Avoid exposing the safe to extreme temperatures or humidity.
- Do not attempt to force the safe open.
- Regularly check the mounting hardware for tightness.

8. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with fingerprint.	Unregistered fingerprint, dirty sensor, improper placement.	Ensure finger is registered. Clean sensor. Place finger flat and firmly. Try another registered finger or PIN/key.
Safe does not open with digital PIN.	Incorrect PIN entered, PIN not set.	Verify PIN. Re-enter carefully. If forgotten, use mechanical key and reset PIN.

Problem	Possible Cause	Solution
LCD display is blank or dim.	Low battery, dead batteries.	Replace batteries. Use emergency charging.
Safe makes no sound or response.	No power, completely dead batteries.	Use emergency charging or mechanical key to open and replace batteries.

9. Specifications

Feature	Detail
Model Number	806-1
Dimensions (D x W x H)	14.36" x 5" x 12.8"
Material	Alloy Steel
Lock Type	Biometric (Fingerprint), Electronic Combination Lock (PIN), Mechanical Key
Fingerprint Capacity	Up to 99
PIN Combinations	99+
Quick Access Speed	0.5 seconds (fingerprint)
Special Features	LCD Temperature & Humidity Display, Durable, Portable, Anti-pry/drill/saw design
Mounting Type	All (Surface mount, Anti-theft rope)

10. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I set up the KASABLANK 806-1 pistol safe?

To set up your KASABLANK Model 806-1 Pistol Safe, follow these steps for initial power, fingerprint registration, and PIN setup:1. Initial Power-UpLocate the battery compartment (usually inside the door or on the underside).Insert 4...

Read full answer