ZdalaMit TT-SK016, TT-SK017 (Compatible)

ZdalaMit Replacement Remote Control User Manual

For TaoTronics Sound Bar Models TT-SK016 & TT-SK017

Introduction

This user manual provides comprehensive instructions for the ZdalaMit Replacement Remote Control, designed for use with TaoTronics Sound Bar models TT-SK016 and TT-SK017. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan.

Safety Information

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or any other liquids.
- Keep out of reach of children to prevent accidental ingestion of batteries.
- Dispose of used batteries according to local regulations.

Package Contents

Please check the package for the following items:

- 1 x ZdalaMit Replacement Remote Control

Note: AAA batteries are not included and must be purchased separately.


Product Overview



This image shows the front face of the ZdalaMit replacement remote control, highlighting all the buttons clearly. The remote is black with white and red button labels.



An angled view of the remote control, showing its slim profile and ergonomic design. The buttons are visible from this perspective.

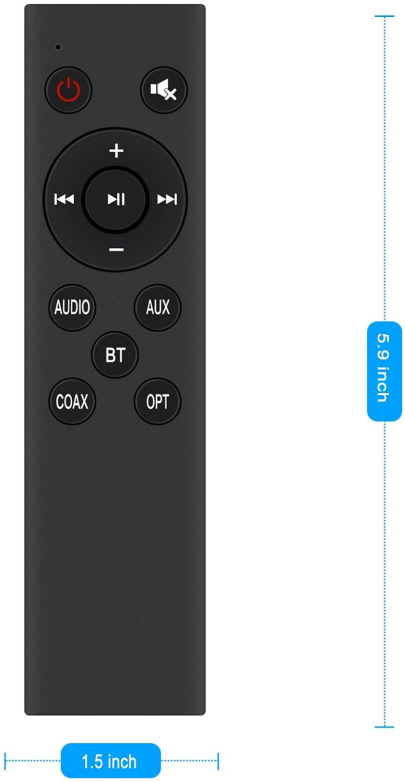

This image illustrates the dimensions of the remote control, showing its length as 5.9 inches and width as 1.5 inches, providing a clear idea of its size.

Button Functions:

- **Power Button** ( ): Turns the sound bar on or off.
- **Mute Button** ( ): Mutes or unmutes the sound.
- **Volume Up (+)**: Increases the volume.
- **Volume Down (-)**: Decreases the volume.
- **Play/Pause Button** (►): Plays or pauses audio playback.
- **Previous Track Button** (◀◀): Skips to the previous track.
- **Next Track Button** (►►): Skips to the next track.

- **AUDIO Button**: Selects audio input mode.
- **AUX Button**: Selects Auxiliary input mode.
- **BT Button**: Selects Bluetooth input mode.
- **COAX Button**: Selects Coaxial input mode.
- **OPT Button**: Selects Optical input mode.

Setup

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) 1.5V AAA Alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is pre-programmed and ready for use immediately after battery installation. No additional programming is required.

Operating the Remote Control

To operate your TaoTronics Sound Bar (TT-SK016 or TT-SK017) with this replacement remote control, point the remote directly at the sound bar's infrared (IR) receiver and press the desired button.

Basic Functions:

- **Power On/Off:** Press the button.
- **Adjust Volume:** Press the **+** button to increase volume or the**-** button to decrease volume.
- **Mute/Unmute:** Press the button.
- **Change Input Source:** Press the **AUDIO**, **AUX**, **BT**, **COAX**, or **OPT** button to switch between different audio input sources.
- **Media Playback (if applicable):** Use the ◄◄ (Previous), ► (Play/Pause), and ►► (Next) buttons for controlling media playback.



The remote control is shown in a typical home entertainment environment, positioned in front of a sound bar and television setup,

illustrating its intended use.

Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote control's range decreases or it stops responding. Always replace both batteries at the same time.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

Troubleshooting

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new 1.5V AAA Alkaline batteries.
  - Ensure there are no obstructions between the remote control and the sound bar's IR receiver.
  - Make sure you are within the effective range of the sound bar's IR receiver.
- **Intermittent response:**
  - This may indicate low battery power. Replace the batteries.
  - Ensure the remote control's IR emitter is clean and free from dust or debris.

Specifications

Feature	Detail
Product Dimensions	5.9 x 1.57 x 0.55 inches
Item Weight	1.41 ounces
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Compatibility	TaoTronics Sound Bar TT-SK016, TT-SK017
Color	Black
Special Feature	Pre-programmed, no setup required

Warranty and Support

For information regarding warranty coverage or technical support, please refer to the original product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.

© 2025 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question